

BALI

CATAMARANS

OWNER'S MANUAL

IN ACCORDANCE WITH EUROPEAN DIRECTIVE
2013-53-UE



BALI 4.4

OPEN SPACE

DESIGN CATEGORY A

This document comprises 147 pages, 64 pages of information, plus 83 pages of plans and diagrams.

ENGLISH – MARCH 2022 - IND D

Page 1 of 147

CATANA SAS - Zone Technique du Port - 66140 CANET EN ROUSSILLON (FRANCE)
e - mail: infocatana@catana.com - Tel 33 (0)4 68 80 13 13 - Fax 33 (0)4 68 80 13 19

Cette page est blanche intentionnellement

This page intentionally left blank

Your dealer

Name _____

Address _____

is the representative of **CHANTIER CATANA SAS** and will assist you with everything you need to resolve any issues which might arise during the launch and the stepping of your mast, as well as technical checks for the commissioning and upkeep of your boat. They will assist you as necessary with the administrative process for registering your boat.

As soon as you have taken ownership of your boat, please familiarise yourself with this Owner's Manual, then sign and date notice of receipt below, and give (or send) this to your dealer.

Cut along the dotted line

Receipt of Owner's Manual

I, the undersigned:

Name _____

Address _____

Owner of **BALI 4.4** n° _____

declare that I have received the Owner's Manual for the **BALI 4.4** sailboat, which includes:

- the written declaration of safety conformity

Date _____

Signature

Cette page est blanche intentionnellement

This page intentionally left blank

CONTENTS

1. VESSEL DESIGN CATEGORY	8
2. TECHNICAL CHARACTERISTICS OF THE BOAT	10
3. ELECTRICAL SYSTEMS	122
4. GAS INSTALLATION.....	26
5. INTERIOR LAYOUT	30
6. BILGE PUMPS AND PLUMBING CIRCUITS.....	31
7. FLOODING	37
8. FIRE SAFETY	38
9. ENGINES	44
10. FUEL INSTALLATION	46
11. STEERING SYSTEM.....	47
12. SAILING.....	49
13. RIGGING	51
14. LIGHTNING PROTECTION	54
15. PROTECTION OF THE ENVIRONMENT AND SAFETY	54
16. SAFETY EQUIPMENT.....	55
17. HAULING OUT, TRANSPORT AND STORAGE ASHORE	56
18. ANCHORING, TYING ALONGSIDE AND TOWING	56
19. HULL - UPKEEP	57
20. DAVITS AND AFT DOOR (depending on options).....	60
21. TRANSFER OF OWNERSHIP	63
22. LIST OF PLANS	65
23. AFTER-SALES SERVICE	147
24. LIST OF ACCOMPANYING DOCUMENTS.....	147

INTRODUCTION

Dear Sir/Madam,

Welcome aboard, and welcome to the happy family of **BALI 4.4** sailboat owners.

This manual has been designed to help you get the most enjoyment out of your boat in safety. It contains details of the boat, the equipment supplied or installed, and its systems, as well as information on their use. Please read it carefully and familiarise yourself with the boat before use.

This Owner's Manual is not an instruction course in safe navigation or seamanship. If this is your first boat or if you have changed to a type of boat with which you are not familiar, for your comfort and safety, make sure you acquire sufficient experience of the boat's handling and use before taking command.

Ensure that the wind and sea state which is forecast corresponds to the design category of your boat, and that both yourself and your crew are capable of handling the boat in these conditions.

Even though your boat is designed for it, the sea states and wind conditions which correspond to design Categories A, B and C vary from storm conditions for Category A to strong conditions for the top of Category C, subject to the dangers of abnormal waves or gusts, and as a result, dangerous conditions, in which only a fit, well-trained, experienced crew, sailing a well-maintained boat, can navigate safely.

This Owner's Manual does not form a detailed guide to maintenance or repair. In case of difficulty, please contact the manufacturers or their representative. If a service manual is supplied, please make use of it.

Always use the services of an experienced professional for maintenance, fitting accessories or making modifications. Modifications which might affect the safety characteristics of the boat must be evaluated, effected and documented by a competent person. The boat's manufacturers cannot be held responsible for any unapproved modifications.

In certain countries an operator's licence or authorisation are required, or there may be specific regulations in force.

Always properly maintain your boat, bearing in mind wear and tear which can result over time, or, as the case may be, excessive or inappropriate use.

Any type of boat, no matter how solidly built, may be severely damaged if used incorrectly. Such use is not compatible with safe navigation. Always adapt your course and boatspeed to the prevailing sea conditions.

If your boat is equipped with a liferaft, carefully read its user manual. The crew should have on board all the necessary safety equipment (lifejackets, harnesses, etc.) corresponding to the type of boat, to the weather conditions, etc. In certain countries such equipment is mandatory. The crew should be trained in the use of all the safety equipment and emergency manoeuvres (recovery of a man overboard, towing, etc.) Sailing schools and yacht clubs regularly organise training sessions.

It is recommended that all persons wear appropriate flotation aids (lifejackets, buoyancy aids, etc.) whenever they are on deck. Note that in some countries, it is obligatory to wear flotation aids which conform to the laws of that country.

KEEP THIS MANUAL IN A SAFE PLACE AND IN THE EVENT OF YOUR SELLING THE BOAT, PLEASE PASS IT ON TO THE NEW OWNERS.

WARNING

Our boats are regularly upgraded as result of customer experience and research carried out by the shipyard. As a result, the specifications given in this Owner's Manual are not contractual and are subject to modification without notice and without obligation to update.

The aim of this manual is to cover a maximum of information. Therefore, it is possible that certain paragraphs or equipment described is not applicable to your boat. If in doubt, refer to the inventory supplied by your dealer when you ordered your boat.

1. DESIGN CATEGORY OF THE BOAT

Your **BALI 4.4** is covered by the OCEAN design category (Category A).

In normal usage conditions, your boat is designed to sail in seas with a significant wave height exceeding 4 metres and in wind strengths which may exceed Beaufort Force 8, and withstand the most severe conditions.

This capacity is equally dependent on the competence of the crew, their physical ability, the upkeep of the boat and its equipment.

Take all necessary precautions before putting to sea.

CATANA SAS cannot guarantee perfect functioning of the vessel in exceptional sea conditions (violent storms, hurricanes, cyclones, waterspouts, etc.)

DESIGN CATEGORIES

Category A: Boats which are designed to sail in winds which may exceed Beaufort Force 8 and in seas with a significant wave height of 4m and above (see Note 1 below), and to a greater extent be self-sufficient. Abnormal conditions such as hurricanes are excluded. Such conditions which can be encountered on long passages, for example ocean crossings, or near coastlines where there is no protection from wind and waves for several hundred nautical miles.

Category B: Boats which are designed to sail in winds which do not exceed Beaufort Force 8 and in corresponding sea states: a significant wave height of less than or equal to 4m (see Note 1 below). Such conditions as may be encountered when sufficiently far offshore, or near coastlines where there is no protection from wind and waves for several dozen nautical miles. These conditions can also be encountered on inland seas of sufficient size to be capable of seeing such wave heights.

Category C: Boats which are designed to sail in winds which do not exceed Beaufort Force 6 and in corresponding sea states: a significant wave height of less than or equal to 2m (see Note 1 below). Such conditions as may be encountered on exposed inland waters, in estuaries and in coastal waters with moderate weather conditions.

Category D: Boats which are designed to sail in winds which do not exceed Beaufort Force 4 and in corresponding sea states (occasional waves with a maximum height of 0.5m). Such conditions as may be encountered sheltered inland waters, and in coastal waters in fine weather conditions.

NOTE 1: Significant wave height means the mean height of the highest third of the waves, which correspond approximately to the height of the wave as estimated by an experienced observer. Certain waves may have a height of double this value.

CATANA SAS has chosen France’s “Institut pour la Certification et la Normalisation dans le Nautisme” as the notified body to verify that your boat conforms to European Directive CE 2013/53, within the framework of European Directive certification modules B + C.

Identification


The Hull Identification Number is located on the starboard side of the transom. It is comprised of a series of letters and numbers beginning with **FR-CAT....**

1.1. Degrees of danger

CAUTION	Indicates a reminder of safety practices or a concern applied directly to dangerous practices which could result in personal injury or damage to the boat and fittings.
WARNING	Indicates that a risk exists which could result in injury or death if appropriate precautions are not taken.
DANGER	Indicates the presence of an extreme intrinsic risk which would result in a high probability of death or serious injury if appropriate precautions are not taken.



WARNING

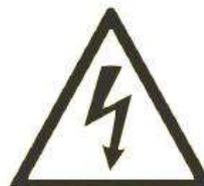

RISK OF ELECTRIC SHOCK



READ THE OWNER’S MANUAL

2. TECHNICAL CHARACTERISTICS OF THE BOAT

2.1. General Specifications

Model:	BALI 4.4
Naval Architect:	Xavier Faÿ
Design category	A
N° of the notified body	CE/0609
CIN N°	See starboard transom
Hull length Lh:	13.10 m
Waterline length:	12.90 m
Maximum length Lmax:	13.48 m
Hull beam Bh:	7.40 m
Maximum beam Bmax:	7.40 m
Draft (at maximum load):	1.25 m
Air draft (in lightship condition):	21.55 m
Principal means of propulsion	Sail
Mast length:	17.9 m
Light displacement Mlc:	13,600kg
Maximum laden displacement:	19,000 kg


Mainsail area (standard roach)	74 m ²
Self-tacking solent area	42 m ²
Code zero area	82 m ²

Fresh water excluding water heater (approx.)	1X 800 L
Diesel capacity (approx.)	1X 800 L
Holding tank (depending on options see plans)	55 L
Starboard engine starter battery	130Ah x 1
Service batteries + port engine start	130Ah x 4 +1 (pack)
Principal means of propulsion	Sail
Maximum permitted engine power	2 x 40 HP up to 2 x 57 HP
Weight of permanent tanks	1,580 kg

Nb: the capacity of the various freshwater and diesel tanks is not generally completely usable as a result of the trim or loading of the vessel. For diesel, it is recommended to maintain a reserve of 20%.

2.2 Builder's Plate

Part of the information is given on the builder's plate which is located in the cockpit. A full explanation of the information appears in the following section.

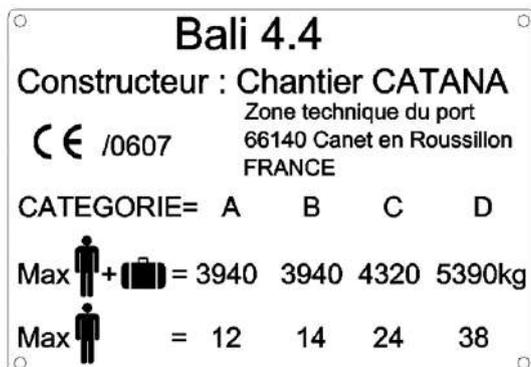

Design Category: A

Maximum number of persons = 12



: Recommended by the builder when the boat is sailing in sea conditions corresponding to its design category.

WARNING

Do not exceed the maximum recommended number of persons. Whatever the number of persons on board, the total weight of persons and equipment must never exceed the maximum recommended load.

Max recommended load = **3,940 kg**



The maximum load indicated on the Builder's Plate - 3,940 kg - does not include the contents of the tanks (fuel 680 kg and fresh water 860 kg) when they are full (1,540 kg total)

WARNING

When loading the boat, never exceed the maximum recommended load. Always load the boat with care and distribute the load in an appropriate manner so as to maintain the theoretical trim (approximately horizontal). The stability is affected by stowing heavy loads up high.

CE 0609

: CE marking indicating that the boat conforms to all the requirements of the Directive. This sequence of numbers is the code of the Certification Body. In this case, the ICNN (Institut pour la Certification de la Normalisation dans le Nautisme), see: Declaration of Conformity

3. ELECTRICAL SYSTEMS

(Plans on pages N°83 to 102)

3.1. Safety advice and use of the electrical system

WARNING

Incorrect use of the direct current or alternating current systems can result in a risk of fire or explosion.

Incorrect use of the alternating current system can result in the risk of electrocution.

Always:

- **Check the battery state and the charging system before putting to sea.**
- **Disconnect and remove the batteries when winterizing the boat.**
- **Maintain the voltage of the batteries at over 12V during the winter.**
- **Check the functioning of the navigation instruments.**
- **Always keep spare fuses on board for the power circuits.**
- **Check the functioning of the navigation lights before sailing at night.**
- **Have the electrical system checked at least every two years.**
- **Disconnect the vessel's electrical supply if the system is not in use.**
- **Connect any metallic covers of electrical equipment to the vessel's earthing system (green cable, or green with a yellow stripe).**
- **Use electrical equipment which is either double-insulated or has an earthing connection.**

Never:

- **Work on a live electrical installation.**
- **Modify an installation and the relevant wiring diagrams, unless this has been carried out by a qualified marine electrician.**
- **Change or modify the breaking capacity of the protective circuit breakers.**
- **Replace electrical apparatus or equipment with components which exceed the rated capacity without resizing the cabling and circuit breakers.**
- **Leave the vessel unattended when the electrical system is live, with the exception of an automatic bilge pump and fire or theft protection systems.**

If a fuse or a circuit breaker continues to trip, call a specialist to determine the cause of the short-circuit. The electrical distribution system on board works using a remote installation: the equipment controlled by this system (from the electrical panel) is protected by thermal-magnetic circuit breakers. In this case, all that is required is to eliminate the short circuit.

Other equipment (interior lighting, comfort equipment, etc.) is protected by fuses either under the chart table or in the remote distribution boxes (see pages 13-14).

The lights are powered by RADIO control units with automatic reset.



3.2. Installing new equipment

Since 1st January 1996, electrical equipment has been subject to the European Directive on “electromagnetic compatibility” (Ref 2014/30/EU). If any new equipment is to be installed, it must therefore conform to these standards and must be CE marked. The equipment must also be accompanied by a certificate of conformity and a user manual.


Only use electrical equipment which is double insulated or has an earth connection in the case of a 220V installation. When fitting such equipment, ensure you follow the installation instructions with respect to cable sizing and fuse protection.

To avoid any maintenance problems, make appropriate changes to the wiring diagram to show the modifications.

Resettable fuses (bilge pump): Hanging locker stbd fwd passageway.



PROTECTIONS EQUIPEMENTS 12V DC - BALI 4.4

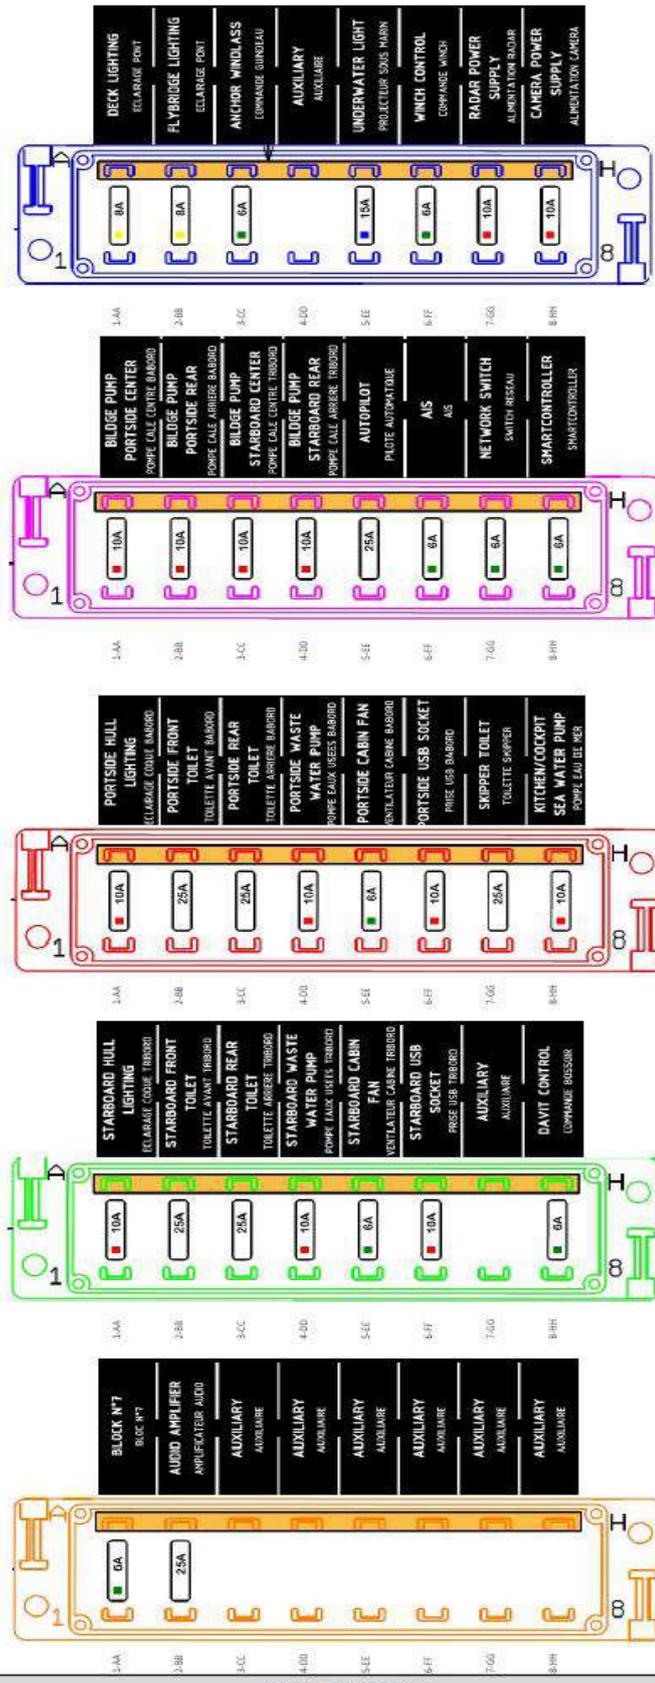

PENDRE COURSE TABLE
MARINE CHART TABLE

3.3 Batteries

All the batteries installed for engine starting or the domestic system are gel type batteries and as such do not require any specific maintenance; the only precaution to observe is to maintain a sufficient level of charge.

Their capacity has been calculated to respond to the power requirements of the on-board accessories. To avoid any problems, the level of charge must be monitored, and the batteries maintained.

The port battery bank is comprised of several 130 Ah batteries which form the service battery bank and the port engine starter battery. (Figure 2).

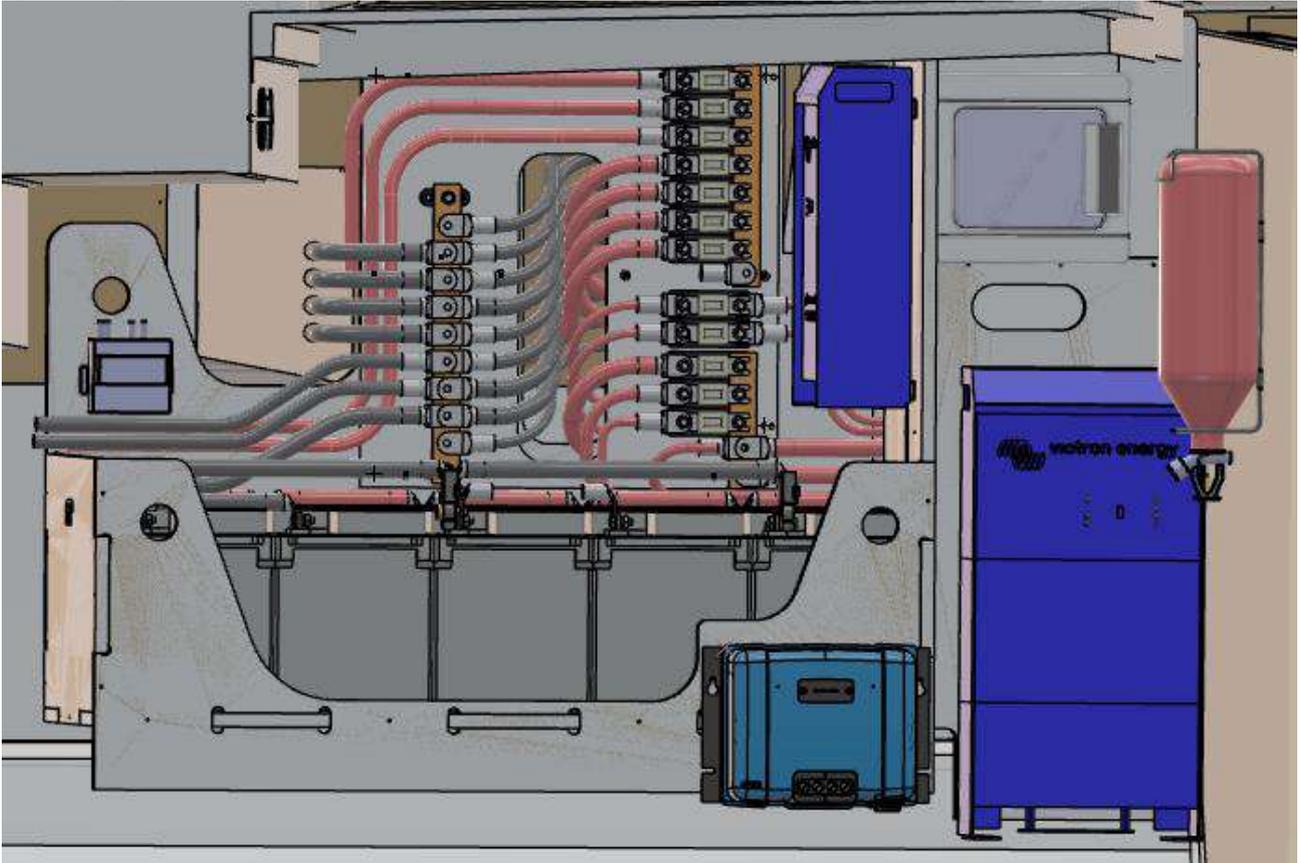



Figure 2

The starboard engine has its own 95 Ah starter battery. In the event of failure of this battery, use the COUPLER switch located at the entrance to the nacelle, on top of the starboard bench seat backrest.



CAUTION

- If you install any new electrical equipment, ensure that the overall electrical consumption of this equipment is compatible with your battery capacity.
- Never allow the two terminals of a battery to be bridged by any conductive object (tools, etc.)
- Before replacing a fuse, always switch off the power to the circuit. Defective fuses must be replaced with fuses of the same size

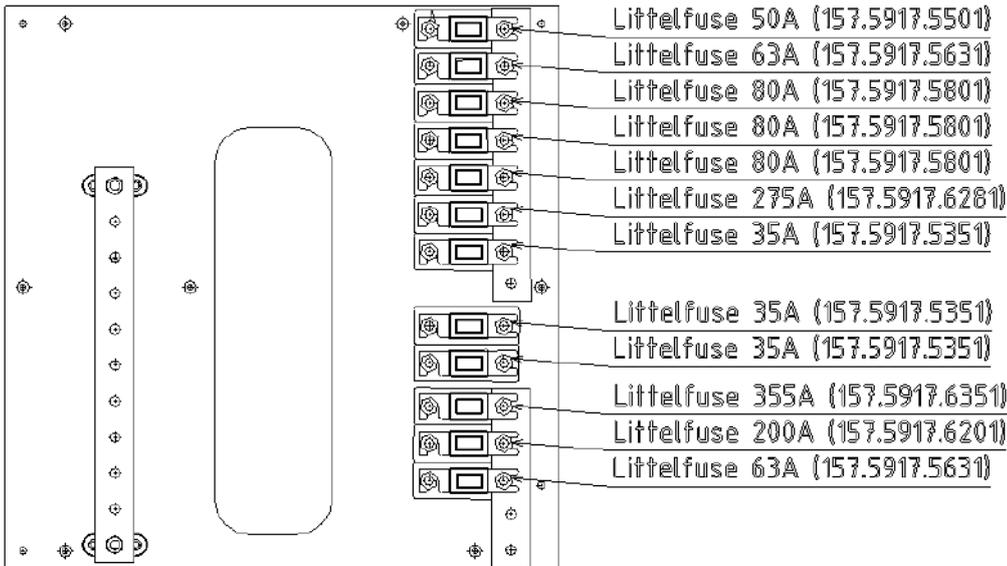

WATERMAKER
 BRESSAIRES ATELIER
 TILT DOOR
 PORTE BASCULANTE
 DAVIT
 Bassin
 INVERTER
 CONVERTISSEUR
 DC POWER SUPPLY
 ALIMENTATION DC
 HIGH DC POWER
 GROSSE PUISSANCE DC
 AUXILIARY/HEATER
 AJOUTAIRE/CHAUFFAGE

PORTSIDE ACU
 ACU BORD
 STARBOARD ACU
 ACU TRIBORD

SERVICE SUPPLY
 ALIMENTATION SERVICE
 BATTERY CHARGER
 CHARGEUR
 SOLAR PANELS
 PANNEAUX SOLAIRES


3.4 Windlass and electric winch

CAUTION


- **When using the windlass or electric winch it is essential that the engine is running and is at a slightly increased speed.**
- **Always switch off the feed at the electrical panel when these are not in use.**

Switching on the power to the windlass or electric winches is done at the electrical panel.

The windlass is operated via the corded remote control located beneath the chain locker lid.

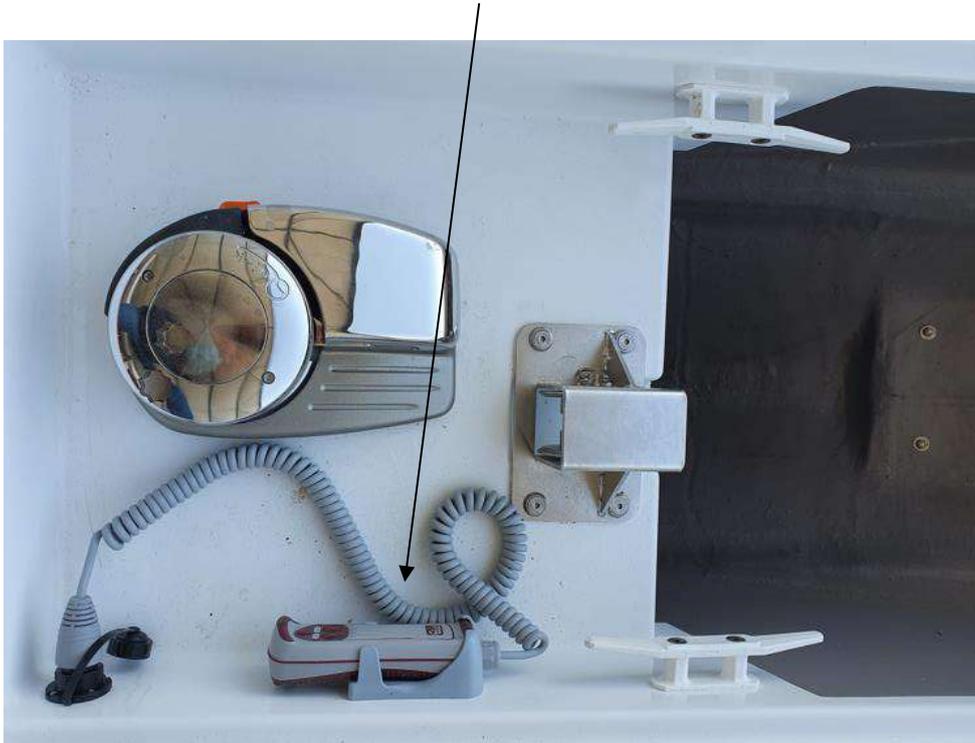

The electric winches have dedicated controls positioned next to them.

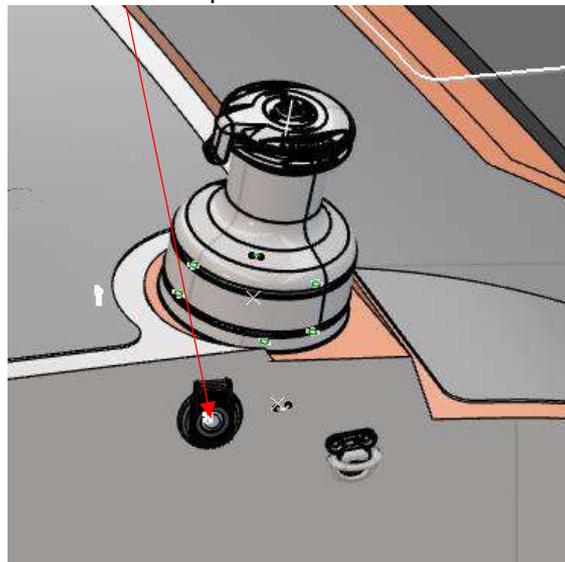

The circuit breakers for the Windlass and the winch are located in the cupboard in the starboard passageway. (Figure 3).



3.5 Charging Systems

Your boat is fitted with several charging systems. When alongside a dock with a shore-power electricity supply, the service batteries are charged by a charger or a combined inverter/charger (depending on options). At sea, the same system is used if your boat is equipped with a generator. If your engines are fitted with optional power alternators, they are connected to the domestic system. If your boat is fitted with solar panels, these produce energy which is stored by the service batteries.



CAUTION

- Regularly check the alternator belt tension and the condition of the belts.
- To maintain solar panel efficiency (if fitted), it is essential they are kept clean and are not in any shade.
- You must not stand or walk on the solar panels.
- Do not pas your fingers behind the protective covers.

Electric panel located in the starboard engine compartment

Protective cover AC outlet for fridge inverter and inverter/charger

Refrigerator inverter + fuse

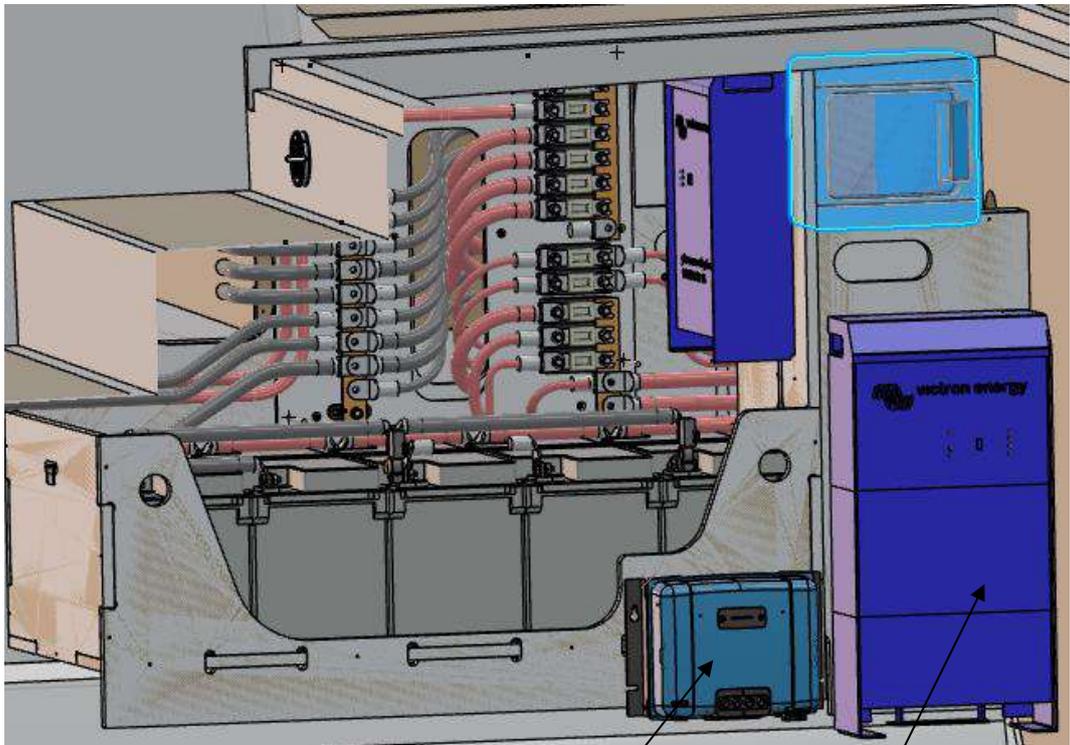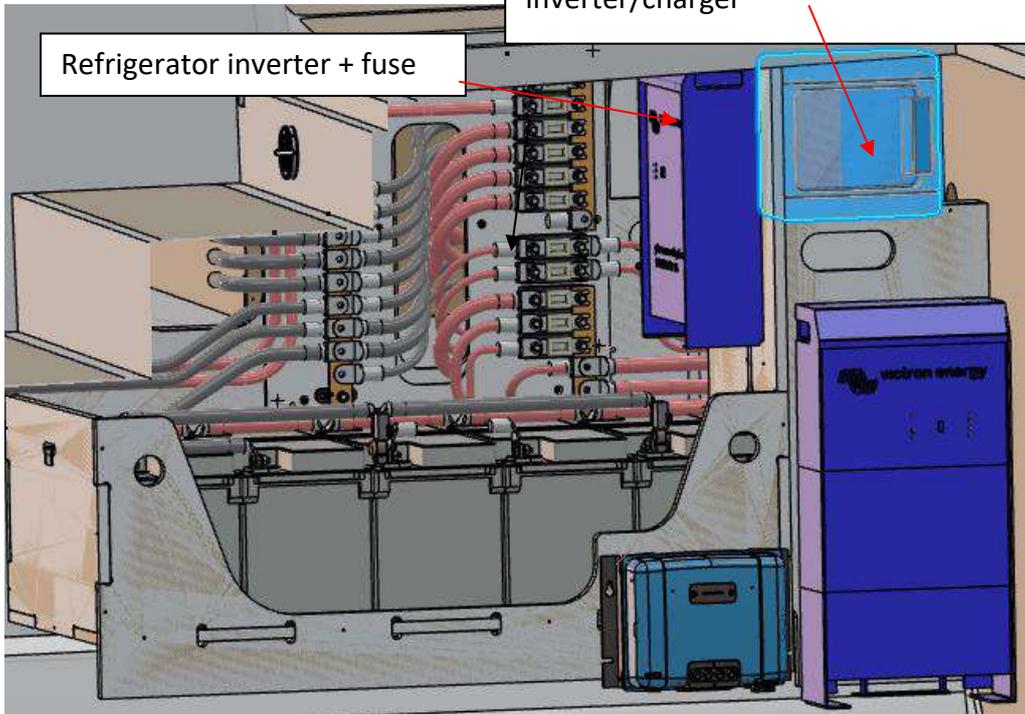

Charge controller for solar panels

Combined inverter/charger unit + fuse

3.6 AC Installation (220/110 Volts ISO 13297)

DANGER

The on-board AC installation is protected by a circuit breaker and is equipped with an RCD (residual current device). Their correct functioning should be tested monthly.

The wiring for any additional on-board AC accessories must be done by a professional, with new, appropriately sized circuit breakers.


If maintenance is being carried out with the boat out of the water, switch it to the "ON" position to ensure **earthing protection** via the shore power.



Location of the AC shore power circuit breaker: Starboard aft cockpit locker.
If the vessel is equipped with a generator, an RCD will be installed near to it. The same applies if the vessel is fitted with a DC/AC inverter.

The circuit breakers for the various AC circuits are housed in an electrical box in the port engine compartment.

Electrical panel located in the hanging locker stbd hull, midships

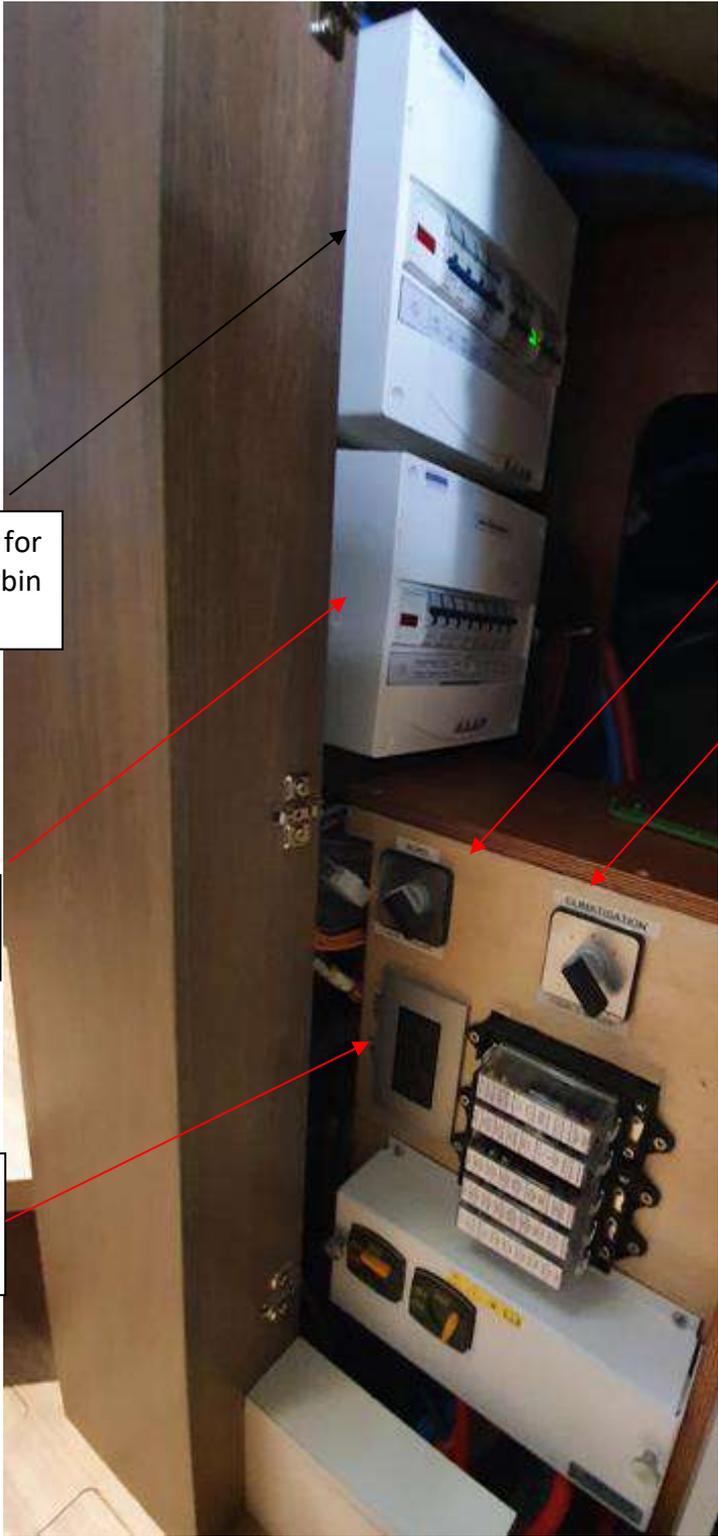

AC circuit breaker panel for specialised circuits and cabin sockets

Manual changeover switch shore power/generator: power

Manual changeover switch shore power/generator: aircon (if fitted)

Circuit breaker panel for air-conditioning if fitted

5mA circuit breakers for 115V sockets only


CAUTION
- When the vessel is alongside a quay and unattended, put the circuit breaker in the open position.

ON-BOARD ELECTRICAL PANEL

V	water heater <small>chauffe-eau</small>	dishwasher <small>lave vaisselle</small>	washing machine <small>machine à laver</small>	watermaker <small>déminéralisateur</small>	⊗ Rev. polarity	fridge <small>réfrigérateur</small>	gas hob <small>plaque de cuisson gaz</small>	⊗	deck AC outlets <small>prises AC pont</small>	hull AC outlets <small>prises AC coque</small>



Note:
Disjoncteur bipolaire de représentation non contractuel.

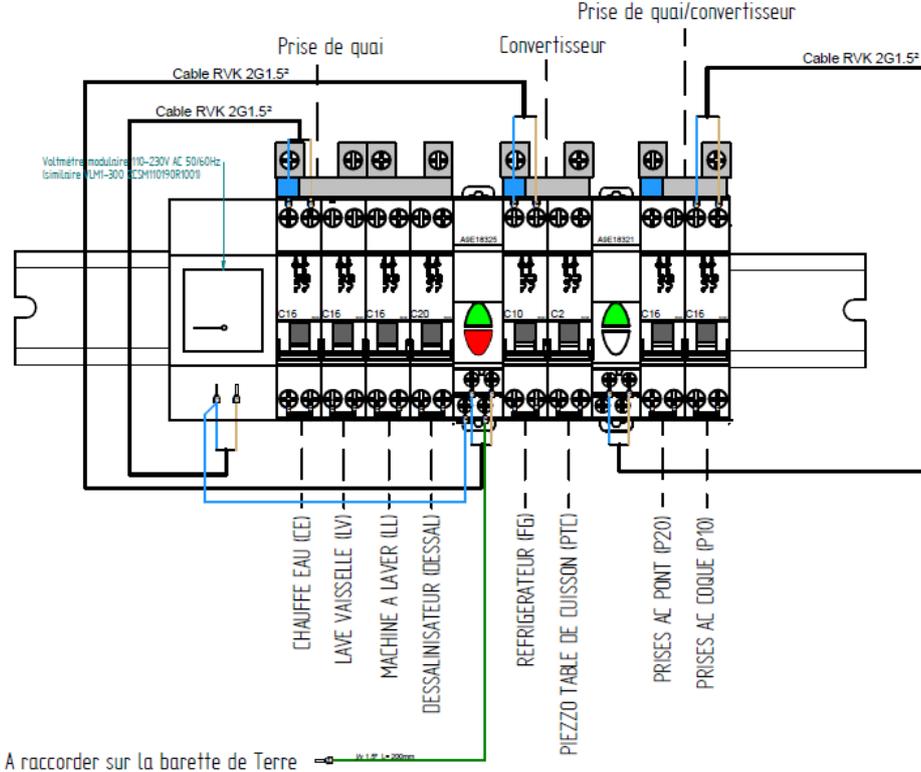

DANGER

If your boat is delivered without shore power lead and without a male shore power socket, the cable you use must be suitable for outdoor use. It must be of a suitable section for its length and for the rating of the main circuit breaker (See wiring diagram). The plug must be matched to the female socket on the quay (Check with a professional if necessary). It must correspond as closely as possible to type IP 67 / IEC529.

To minimize the risk of electric shock and fire:

- Switch off the shore power on board before plugging in or unplugging the shore power cable.
- Plug in the shore power lead on the boat before plugging it in to the shore power socket on the quay.
- Unplug the shore power lead from the socket on the quay before unplugging it on board the boat.
- Ensure that you have closed the cover on the shore power socket on the quay.

Never:

- Swim near a boat connected to shore power: there is a risk of an electric field which may injure or kill swimmers in the vicinity!
- Do not let the end of the shore power cable fall in the water.
- Do not modify the connections of the shore power cable: only use compatible plugs.

4. GAS INSTALLATION

(Plan on page N° 105)

4.1 Instructions for use

Your Bali 4.4 is fitted with a gas installation. Depending on the type of gas used on board (butane or propane), the pressure in the circuit will be between 28mbar and 37mbar. Consequently, before any work is carried out on the gas circuit or cooking appliances (hob, barbecue grill, etc.), check the compatibility of the components (gas bottle, jets, regulator). The operating pressure will always be shown on the regulator.

- Ensure that the gas bottle conforms to the regulations in force in the country where you are using it.
- Do not obstruct access to gas installation (gas bottle locker, shut-off valve).
- The gas bottle must always be placed in the waterproof and ventilated housing designed for this purpose. The same goes for spare or empty bottles. No other equipment should be stored in this area.
- The valves attached to empty bottles must be closed and disconnected. Protective tops, covers, or plugs must be kept in place. Spare cylinders must be stored in housings or lockers designed for LPG cylinders which vent overboard, or stored outside on the vessel, protected from weather and mechanical damage and such that any escaping gases can only evacuate overboard.



Figure 3

- Close all the shut-off valves when there is no-one on board (shut-off valve, regulator tap), even when the bottle is believed to be empty.
- Never smoke when going inside the boat if it has been closed up. Make sure there is no smell of gas.
- If you can smell gas, close all the gas valves and taps including the cooker. Ventilate the boat and establish the cause of the leak before putting the gas system back into service.
- Do not use the cooker if there is likely to be heavy rolling or a continuous list.
- Turn off all the taps of the LPG system and the tap on the bottle when the gas system is not in use. Turn off the taps every time before changing the bottle, and immediately in case of emergency.
- Ensure that the taps on the appliances are turned off before opening the tap on the bottle.
- Never use the gas bottle locker for storing any other equipment.

WARNING

The gas system valves must be switched off immediately in case of emergency.

Never leave the vessel unattended when gas appliances are running.

If a leak is detected, close the main gas valve and do not use any LPG appliances.

Equipment which has a naked flame consumes oxygen from within the cabin and produces waste products and gases which are emitted into the boat. Good ventilation is essential: open the dedicated vents or hatches when using gas appliances.

Never obstruct the ventilation openings and check that any smoke ducting functions correctly.

SAFETY PRECAUTIONS

Care must be taken to avoid any contact with naked flames or other heat sources.

4.2 Checking the gas system

The gas system must be the subject of periodic checks:

- Close all the taps on the cooker.
- Open the regulator tap.
- Check all the connections are sealed by using a leak detector or by applying soapy water.

WARNING

Do not modify the LPG system of the boat. Installation, modifications and maintenance must be carried out by a competent person. Have the system checked at regular intervals or at the intervals required by national regulations.
Never use the gas system in the event of a leak.

Any repairs or modifications to the gas system must be carried out by a qualified person.

Flexible hoses must be:

- Regularly checked, at least once a year,
- Replaced if the expiry date printed on the hose has passed,
- Replaced five years after the date of manufacture of the hose which may be marked on it,
- Replaced in the event of signs of wear or cracks.
- Check the evacuation ducting at least once a year.
- Replace in the event of wear or cracks.

CAUTION

Do not use any solutions containing ammonia.
Do not smoke or use a naked flame when changing LPG gas bottles

DANGER

Never use a naked flame to attempt to detect leaks.

4.3. Use of the leak detector pressure gauge:

The pressure gauge is located in the port gas locker. It does not give an indication of the quantity of liquid LPG remaining in the bottle, but only its vapour pressure, which is constant at a given temperature.

To check the system, please:

- Close all the valves/taps on the cooker or other apparatus
- Open the regulator tap on the bottle
- Allow the pressure shown on the pressure gauge to stabilise.
- Close the regulator tap on the bottle
- Observe the pressure indicated by the gauge located near the cylinder valve for 3 minutes, the pressure indicated by the gauge should remain constant if there are no leaks in the system

WARNING

In the event of a leak, immediately shut the main gas supply tap(s) off and contact a suitably qualified person to detect and repair the leak.

The bubble-type leak detector must be used in accordance with the manufacturer's instructions. If an LPG gas leak is detected or suspected, immediately take the following measures:

- Shut off the LPG gas supply at the main supply tap(s).
- Extinguish any naked flames and any other possible ignition sources (heating appliances, cooking appliances, pilot lights, etc.)
- Do not operate the electrical cut-off switch.
- Evacuate the area if possible.

WARNING

Do not use a gas system known to have had a leak before it has been inspected and repaired by a qualified competent person.

Never leave the vessel unattended when gas appliances are running.

Never use a naked flame to attempt to detect leaks, nor for providing light to see.

Equipment which has a naked flame consumes oxygen from within the cabin and produce waste products and gases which are emitted into the boat. Never use a hob or an oven for heating the boat. Good ventilation is essential: open the dedicated vents or hatches when using gas appliances. Never obstruct these openings.

The specifications of the openings for ventilation have been calculated for the LPG appliances installed.

Additional openings may be required if other appliances are simultaneously in use.

Do not modify the LPG system of the boat. Installation, modifications and maintenance must be carried out by a competent person. Have the system checked at regular intervals or at the intervals required by national regulations.

If a leak is detected, close the main supply valve and do not use any of the LPG appliances.

Do not use any solutions containing ammonia during manual leak tests.

4.4. Changing the gas bottle

- Check that the taps on any bottles are shut off and disconnected. Keep any protective covers, caps or bungs in place. Stow spare bottles in ventilated areas on the deck or in lockers designed for this purpose, which are gas-tight and ventilated overboard.

DANGER

- **Shut off the taps on the cooker and the regulator.**
- **Do not smoke or use a naked flame while the gas bottle is being changed.**
- **Ensure that the taps on the appliance are switched off before opening the tap on the bottle.**

WARNING

With an LPG installation:

- **Close the valve on the empty bottle before disconnecting it and installing the new bottle.**

5. INTERIOR LAYOUT

The BALI 4.4 is available in a 3 or 4-cabin version. The layout plans are shown in Chapter 2 in the PLANS section of this manual

6. BILGE PUMP AND PLUMBING SYSTEM

(Plans on pages N°125 to 143)

6.1. Characteristics of the bilge pump system

Type of pump	Theoretical Flow
Manual bilge pump	30 L / min
Electric bilge pump 12V	73 L / min
Engineroom bilge pump 12V	73 L / min

Carefully read the instruction and maintenance manual of the bilge pumps supplied with your boat.

The bilge pumps are activated automatically in the event of the water level being too high.

A small blue symbol will show on the Navicolor screen when a bilge pump starts operating automatically.



The pumps can be activated manually from the switch panel.



CAUTION

The bilge pump system is designed to keep the water level in the bilge to a minimum; it is up to the crew to get the bilge completely dry manually.



Electric bilge pump below passageway floor

Manual bilge pump strainer

Figure 5

WARNING

The bilge pump system is not intended to control ingress of water in the event of a hull breach. It is designed to eject water originating from spray, leaking seacocks or any other moderate leak.


SAFETY PRECAUTIONS

- Ensure that the bilge pumps are in working order before putting to sea.
- Regularly clean the sump and bilge pump strainers from any debris which could obstruct the pumps.
- If the watertight bulkheads separating the forward and aft spaces are equipped with scupper valves, these must be kept shut under normal circumstances, and only opened to empty water in the main bilge
- Make sure you know where to find the manual bilge pump and its handle
- Make sure you know where to find the switch for the electric bilge pump on the electrical panel

6.2. Fresh water pressure pump

The galley sink and the basins in the heads are supplied with fresh water by an electric pump installed in the port passageway (figure 6).


A filter is fitted before the pump. This must be cleaned regularly.

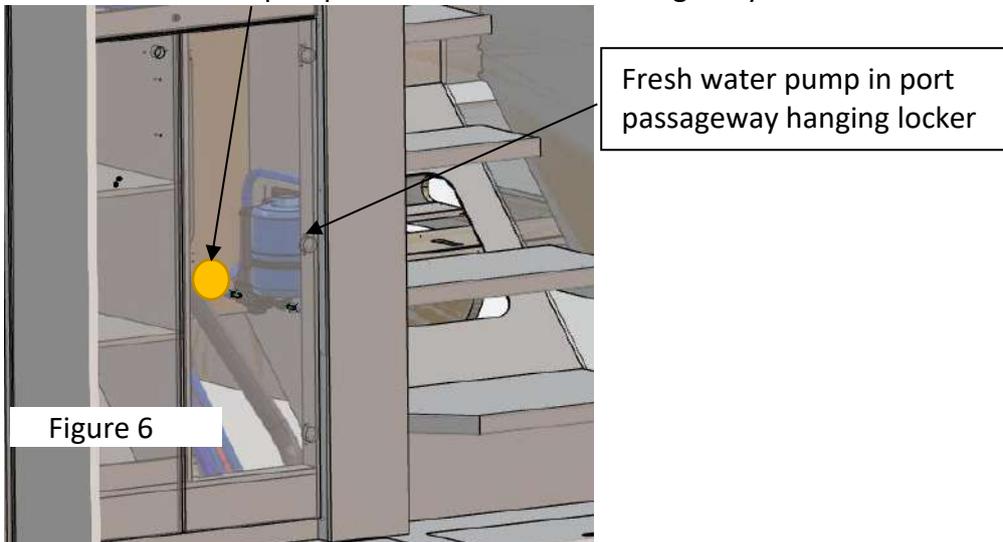

It is possible to sterilise the tanks using clonazone tablets (on sale in pharmacies).

Remove the inspection hatches annually for cleaning and refilling with water mixed with a bacterial detergent, leaving it for a few hours, and then rinse it out two or three times. When winterizing the boat, fill the tanks completely so as to avoid the growth of algae or bacteria. If there is a risk of freezing, empty the tanks completely. Never use antifreeze.

Hot water is produced by a water heater connected to the engine cooling system and also the shore power system.

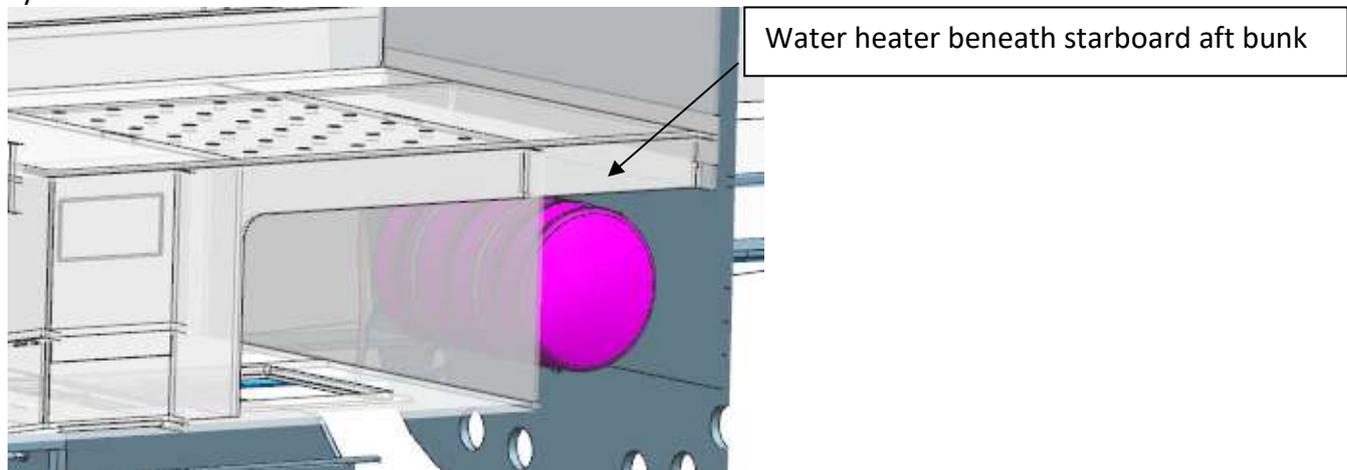

After emptying the water heater, ensure that the immersion element is immersed again prior to switching the power back on.

WARNING


Never activate the pump or switch on the water heater if the tanks are empty. Refill the tanks. If you fail to comply with this, the hot water immersion element and the pressure pump will be irreparably damaged.

It is imperative to keep the tanks empty in the event of the temperature going below freezing.


6.3. Seacocks

The valves are of the ¼ turn type:

- OPEN position: Lever in the same direction as the body of the valve.
- CLOSED position: Lever perpendicular to the body of the valve.

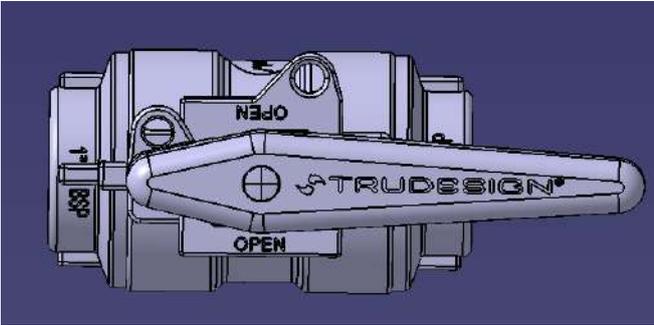

OPEN POSITION

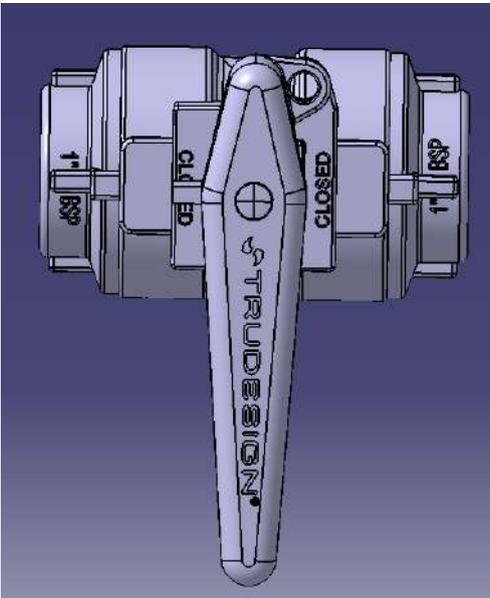

CLOSED/LOCKABLE POSITION

CAUTION

- Never try to tighten the seacock valve threads. In the event of a leak, consult a professional.
- In the event of bad weather conditions or when the boat is left unattended, close all the valves of the waste plumbing systems.
- Keep the valves closed when they are not in use.
- When winterizing the boat, clean and rinse the seacock through-hulls and valves. Check their watertightness, and re-tighten the hose clamps.
- In the event of finding serious corrosion, consult your dealer.

6.4. Operating the sea toilets

- Check the level in the holding tank before using the toilets
- Open the seawater inlet valve.
- Move the lever to the "flush" position.
- Pump the handle.
- To empty the bowl and avoid any ingress of water when heeled, move the lever to the "dry bowl" position.
- Pump the handle until the bowl is dry.
- Repeat this operation of flushing / emptying the bowl as many times as necessary to ensure that the hoses are completely empty.
- When the toilets are not in use, put the lever in the "LOCK" position.
- **Close the valves after use, as the toilet is located just above the waterline.**

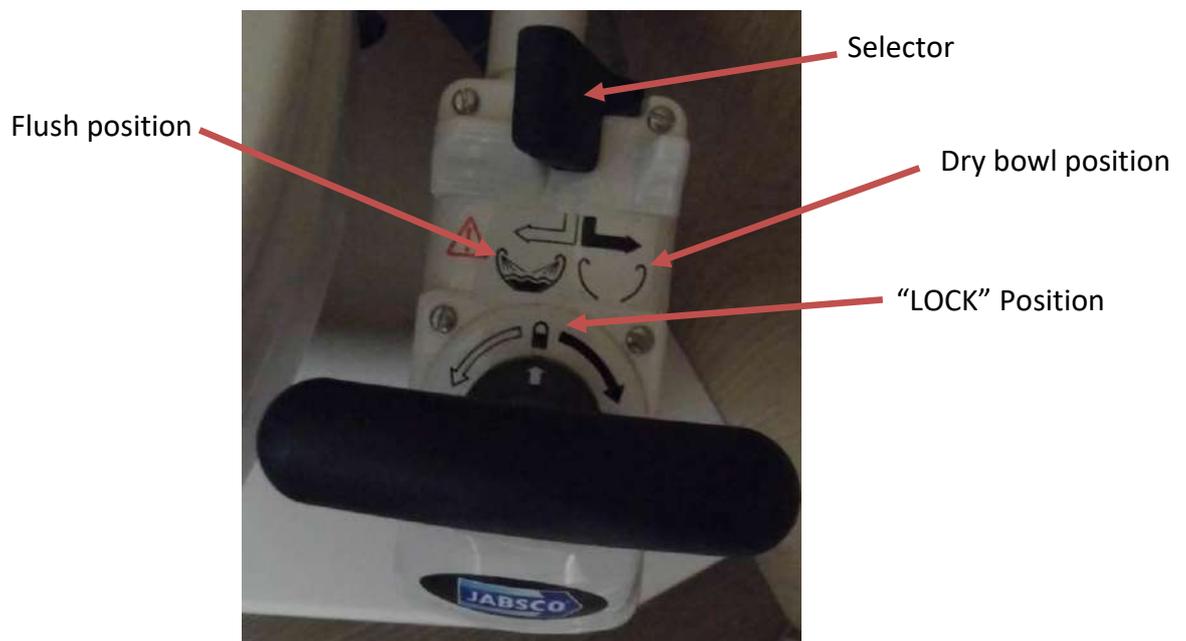


Figure 9

Regularly change the seals and filter of the seatoilet.

6.5. Operation of the electric seatoilets (depending on option)

The control panel for flushing and emptying comprises two buttons.

- Check the level in the holding tank before using the seatoilets
- Before using, ensure there is sufficient water in the bowl to avoid toilet paper becoming compacted in the bottom of the bowl.
- Use soft, good quality, domestic toilet paper but do not use more than is necessary.
- Next, empty the toilet until the bowl is dry. Always leave the bowl empty to minimize odours and spillage of water.



Figure 10

OR



6.6. Holding tank

WARNING

- To prevent black water discharge, the valve must be kept closed.
- Emptying the tank may be effected either by discharge overboard (subject to local regulations) or by suction pump via the deck discharge outlet provided for this.
- Holding tanks must be rinsed out after each emptying to avoid any deposits building up in any areas or in the level gauge.
- Always check the level on the control screen on the electrical panel.
- Only use cleaning products, deodorisers or winterizing products designed specifically for use with holding tanks.
- In the event of freezing temperatures, the holding tanks must be kept empty.
- Respect the environment. Please do not discharge toilets or holding tanks close to the coast or in prohibited areas and make use of pumpout facilities in ports or marinas to empty your holding tanks before putting to sea.
- All the toilets are connected to a holding tank: ensure that the emptying valve is locked shut to avoid any inadvertent discharge during winterization

CAUTION

- **Always ensure the holding tank discharge valve is closed, so as to avoid the possibility of inadvertent discharge.**
- **If local regulations require, it is possible to lock the discharge valves using a seal or a padlock.**

6.7. Sugar-scoop shower

The shower on the aft steps comprises both a hot and a cold-water circuit. It is located on the aft deck on the starboard side.

6.8. Skeg keels with grey-water tank option

WARNING

The skeg keels serve as grey-water holding tanks beneath the hulls. Damage to these appendages could alter the vessel's buoyancy. In this event, shut the tank off by closing the seacock located directly on top of the tank.

7. FLOODING

Risk of the vessel flooding:

- Keep the hatches, windows, removable panels, doors, ventilation panels or openings closed when it is appropriate, for example in severe weather conditions or sailing at high speeds.
- Ensure that hatches, deck hatch covers or any other openings which could lead to flooding are closed before each time you put to sea.
- When under sail, close all the valves with the exception of the engine seawater cooling intake.

Periodically check:

- The watertightness of the through-hulls, seacock valves and pipework.
- That the cockpit drains are clear.
- The saildrive gasket joint must be replaced according to the engine manufacturer's schedule.

WARNING

The hatch covers in the sugar scoops must be locked shut before every time you put to sea. This is particularly important, as the engine compartments present a significant risk for flooding.

8. FIRE PROTECTION

(Plans on pages N°110 to N°114)

8.1. Installation

- Fire extinguishers are subject to national regulations in different countries, and for this reason, your boat is supplied without any portable extinguishers.
- We advise that you equip your boat with fire extinguishers conforming to the ISO 9094 (2015).
 - a) Minimum capacity per extinguisher: 5A/34B
 - b) Combined minimum capacity of extinguishers: 10A/68B
- When the boat is in service, it must be equipped as described. See plans.

WARNING

- **Never obstruct access to portable extinguishers or extinguisher orifices.**
- **Carbon dioxide fire extinguishers must only be placed in living areas where flammable liquids are present (eg. in the galley) or which contain live electrical equipment.**
- **There should be only one CO₂ extinguisher per risk zone, and its maximum capacity must not exceed 2 kg.**
- **Only compatible replacement parts must be used for the fire-fighting systems. They must conform to the same standards and be technically equivalent.**
- **If a CO₂ extinguisher is installed, the following information should be placed close by: "This fire extinguisher contains CO₂ - It is to be used only to fight fires of electrical origin or galley fires. To avoid danger of asphyxiation after discharging the extinguisher, immediately leave the area, returning only after it has been ventilated."**
- **After a fire has been extinguished, do not open the engine compartment immediately, so as to avoid release of any toxic fumes or anything which may still be alight (oil, for example).**

WARNING

- **Your Bali 4.4 is fitted with fire detectors. Refer to the user manual supplied with the detectors for information concerning their operation and maintenance.**

8.2. Safety advice

CAUTION

It is the responsibility of the owner/skipper:

- To ensure that all fire-fighting equipment conforms to the requirements of the boat builder and to the national regulations in your country.
- To replace any portable fire extinguishers which have been discharged or which are damaged in any way, with extinguishing apparatus which has a capacity equal to or superior to the previous ones, and to refill or replace fire extinguishing systems if they are damaged or have been discharged.
- To provide at least one fire bucket fitted with a lanyard and located in an immediately accessible area.
- To ensure that all fire-fighting equipment is immediately accessible when the boat is occupied.
- To advise members of the crew:
 - The location and operation of fire-fighting equipment
 - The location of evacuation and escape routes.

Never:

- Obstruct routes to emergency exits (deck hatches).
- Obstruct safety system controls (gas valves, fuel taps, electrical breakers).
- Obstruct lockers containing fire extinguishers.
- Leave the vessel unattended with the cooker or heater left on.
- Use a gas lamp inside the vessel.
- Refill a fuel tank or change a gas bottle when the engine, cooker or heating system are in use.
- Smoke when handling fuel or gas.
- Hang curtains near to the cooker or other appliance with an open flame.
- Modify any of the vessel's installations (especially electrical, fuel or gas installations) or allow any non-qualified person to modify such installations.
- Store any combustible items in the engine compartment.

CAUTION

If an outboard motor is to be stowed on board, this must be on the (optional) bracket provided for this purpose.

If there is a fuel tank for the dinghy outboard motor, this may be stowed in the aft locker.

Never:

- **Store fuel in spaces not intended for this purpose.**
- **Store flammable materials in unventilated spaces and spaces not intended for this purpose.**
- **Obstruct ventilation orifices (vents)**

8.3. WARNING Notices for the attention of boat users

- Regularly check that the bilges are clean, that there are no fuel or gas vapours or fuel leaks.
- In the event of needing to replace any elements of the fire-fighting equipment, only use appropriate products, which meet the same specifications, and have equivalent technical capacities and fire-resistant qualities.
- Do not hang curtains or other materials above or close to cooking appliances or other apparatus with a naked flame.
- Do not store any flammable materials in the engine compartment. If any non-flammable materials are stored in the engine compartment, ensure that there is no risk of them falling onto the machinery, nor must they obstruct the engine compartment access or exit.

Exits other than doors or main hatches fitted with permanently fixed ladders must be identified using the following symbol:

Location of the automatic extinguisher in the in the centre of each engine compartment
CAPACITY = 2KG



Location of the fire extinguisher orifice for the engine compartment

CHECK LIST

ENGINE STARTING (may differ with non-standard motors):

- Check the engine oil level.
- Check the coolant level.
- Check the main engine cut-off switch.
- Check that the ECU supply breaker is ON.
- Check that the back-up panel is OFF.
- Open the engine cooling water intake valve.
- Open the fuel tap on the tank.
- Check that all ventilation openings are clear.
- Check that the throttles are in neutral.
- Check that there are no alarms on the screen at the helm station.
- Switch on the ignition and preheat for 10 s.
- Start the engine.
- Check the flow of cooling water overboard at the exhaust.
- Check that that there is no abnormal vibration or noise.
- Allow the motor to warm up at tickover for 5 or 6 minutes.
- Check for leaks in the cooling system, fuel lines, lubricants and exhaust.

In case of doubt or a problem, switch off the motor and consult the Owner's Manual, technical documents, plans or your dealer.


WARNING

Refer to the engine user manual concerning navigating when under sail!

STOPPING THE ENGINE:

- Slow the engine to tickover for 5 minutes.
- Activate the Stop control.
- Switch off the ignition.
- Close the various valves.
- Switch off the engine circuit breakers

In case of doubt or a problem, consult the Owner's Manual, technical documents, plans or your dealer.

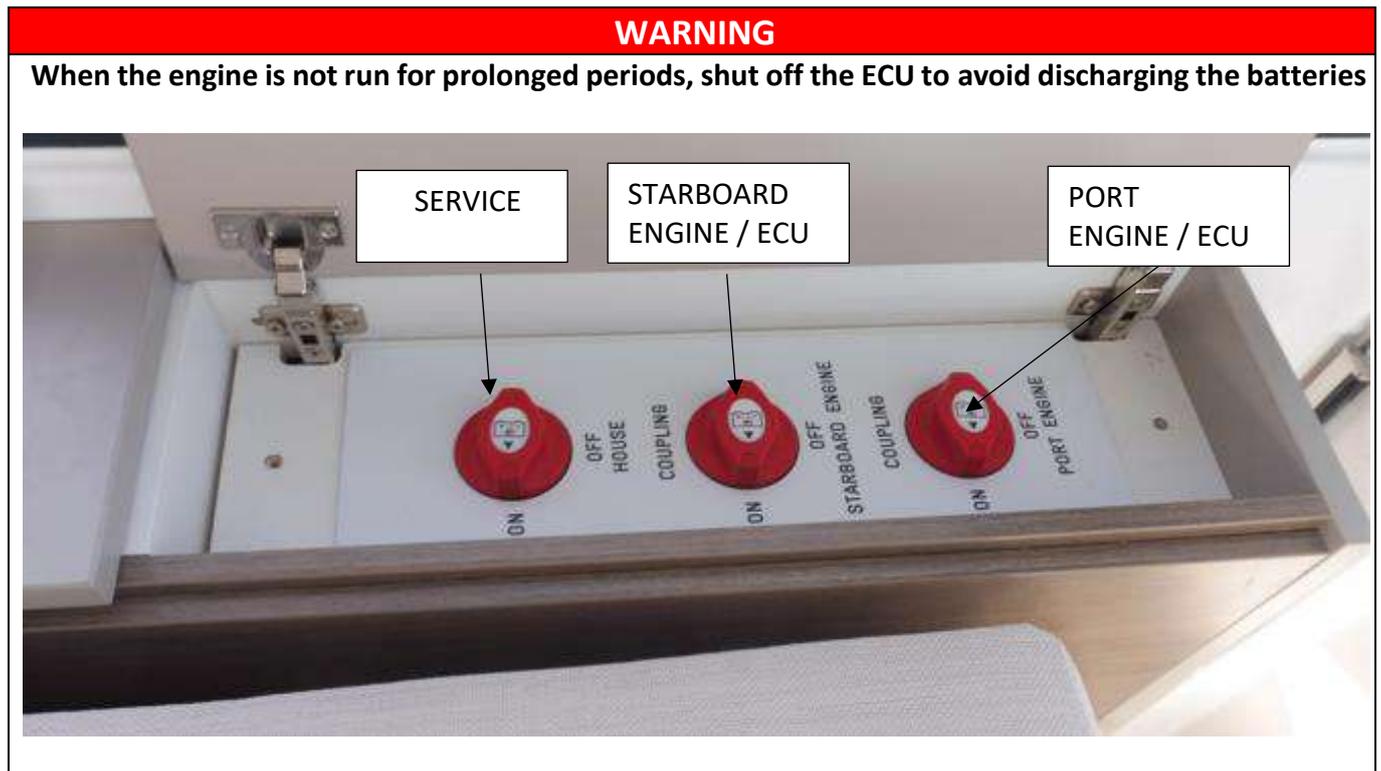

REFILLING THE FUEL TANK:

- Have a fire extinguisher handy.
- Engine switched off.
- Electrical equipment switched off.
- Deck panels and hatches closed.
- Never fill the tank completely full, to allow for expansion of the fuel.

In case of doubt or a problem, consult the Owner's Manual, technical documents, plans or your dealer.

BEFORE PUTTING TO SEA:

- Weather forecast.
- Victualling.
- Sailing clothing.
- Mandatory documents and equipment on board and in working order.
- Safety equipment (lifejackets, harnesses, fire extinguishers, distress flares, emergency tiller).
- Safety briefing for the crew including location of equipment.
- Bilge pumps in working order.
- Navigation lights in working order.
- Fuel tanks full.
- Fresh water tanks full.
- Check all the systems for leaks.
- Check the coolant fluid level.
- Check the rudders are working correctly.
- Check the diesel filters are clean and in good condition.
- Check engine oil level.
- Check battery levels.
- Check the rigging is in good order (shroud tension).
- Deck fittings in good order (blocks, winches, lines, furler, winch handles, jammers or clutches).
- Sails in good order (stitching, boltropes, batten cars).
- Close hatches and deck panels.

In case of doubt or a problem, consult the Owner's Manual, technical documents, plans or your dealer.

ON YOUR RETURN:

- Boat correctly tied up with fenders positioned.
- Sails dry and stowed.
- Safety equipment dry and stowed.
- Boat rinsed with fresh water.
- Spread the halyards so they do not flog.
- Coil the various lines.
- Check for leaks in the fuel or gas systems.
- Check for leaks in the plumbing systems and bilge pump circuits.
- Close seacocks.
- Open the fridge.
- Switch off the electrical system.

In case of doubt or a problem, consult the Owner's Manual, technical documents, plans or your dealer.

9. ENGINE

Regular maintenance must be carried out in accordance with the engine manufacturer's service schedule. Read carefully the engine user manual which was supplied with your boat. Do not hesitate to contact your dealer or qualified professional for advice.

Pay particular attention to instructions concerning winterizing.

In the absence of other information, proceed as follows:

- Close the raw-water cooling intake valve (Figure 11),
- Switch off the engine battery cut-offs
- Disconnect the raw water intake hose from the seacock.
- Empty the seawater cooling system.
- Immerse the tube into a container of coolant fluid of -25°C .
- Run the engine until coolant flows from the exhaust.
- Reconnect the tube to the valve after you have finished.
- Stick a note to the electrical panel and to the battery shut-off switch saying that the raw water intake valve is closed.

Do not start the engine unless the throttle is in neutral.

Do not store diesel in compartments not designed for this purpose.

It is the owner's responsibility to check the condition of the fuel lines.

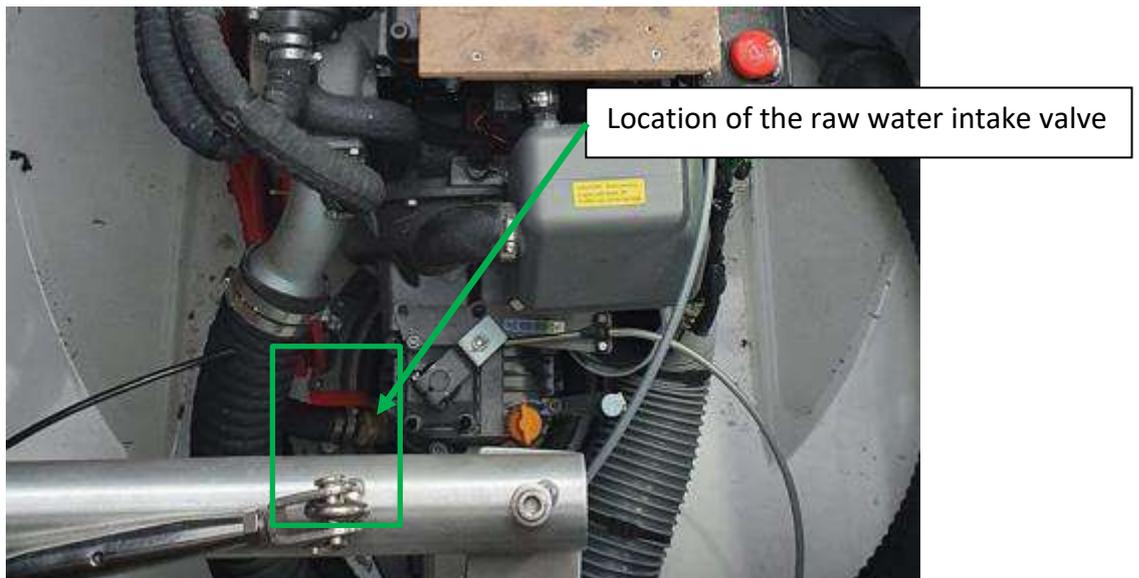


Figure 61: Location of the raw water intake valve

CAUTION

If new engines are installed, they must comply with the capacities of the boat, and must be installed by a specialist marine engineer.

Do not obstruct or modify the ventilation system of the engine compartments

9.1. Launching the boat / making adjustments

CAUTION

- Ensure that the raw-water cooling intake valve is open and that water is coming out of the exhaust.

A quick check that the propeller is securely fixed should be carried out before each launch.

A poorly working propeller can be a source of vibration.

Regularly check the condition of the zinc anodes and ensure that they are the correct anodes for the environment (fresh water or sea water). Change the anodes every year.

The purpose of an anode is to equalize the electrical potential between the aluminium and other metals (stainless steel, bronze, etc.) The average life expectancy of an anode is 1 to 2 years.

These anodes are made of zinc. Anodes made from magnesium must absolutely not be used. Systems using impressed current for cathodic protection are to be avoided.

If the anodes have not been changed, you must check:

- That they have not been painted,
- That they are securely fixed and are in contact with metallic parts,
- That they are made from zinc.

CAUTION

Under sail and with the engines switched off, the raw water intake seacock must be closed at speeds in excess of 8 kts. Refer to the engine manufacturers instructions.

9.2. Exhaust gas emissions

DANGER

Combustion engines produce carbon monoxide. Prolonged exposure to exhaust gases may cause serious illness or even death.

9.3. Safety

DANGER

The engine must not be used if swimmers are close to the boat to avoid any risk of serious injury caused by the propeller.

If possible, the engine must be stopped for any maintenance procedures or engine checks. If not, particular care must be taken with any moving parts (drivebelts, etc) to avoid risk of injury.

10. FUEL SYSTEM

(Plans on page N°128)

Flexible fuel hoses must be:

- Replaced by hoses of the same type (with the same markings).
- Replaced at the first sign of deterioration.

The fuel tanks correspond to CE (ISO 10088) standard).

CAUTION

The nominal fuel capacity is not necessarily totally usable, as a result of the loading and trim of your boat. For safety, allow a margin of 20% in reserve.

Avoid contact between any flammable materials and hot parts of the engine.

Never:

- **Store diesel in areas not designed for this purpose.**
- **Store any flammable materials in unventilated areas which are not designed for this purpose.**
- **Smoke when refilling fuel tanks.**
- **Obstruct ventilation systems (vents or grills for ventilating the engine compartment).**
- **Modify the engine installation unless this is carried out by a qualified marine engineer.**


11. STEERING SYSTEM

(Plan on page N° 103)

The steering system is an essential element in the safety and comfort of your vessel.

11.1 Steering wheel

The steering wheel controls the rudders via a cable system; the two rudders are linked together with a bar which crosses the aft beam.

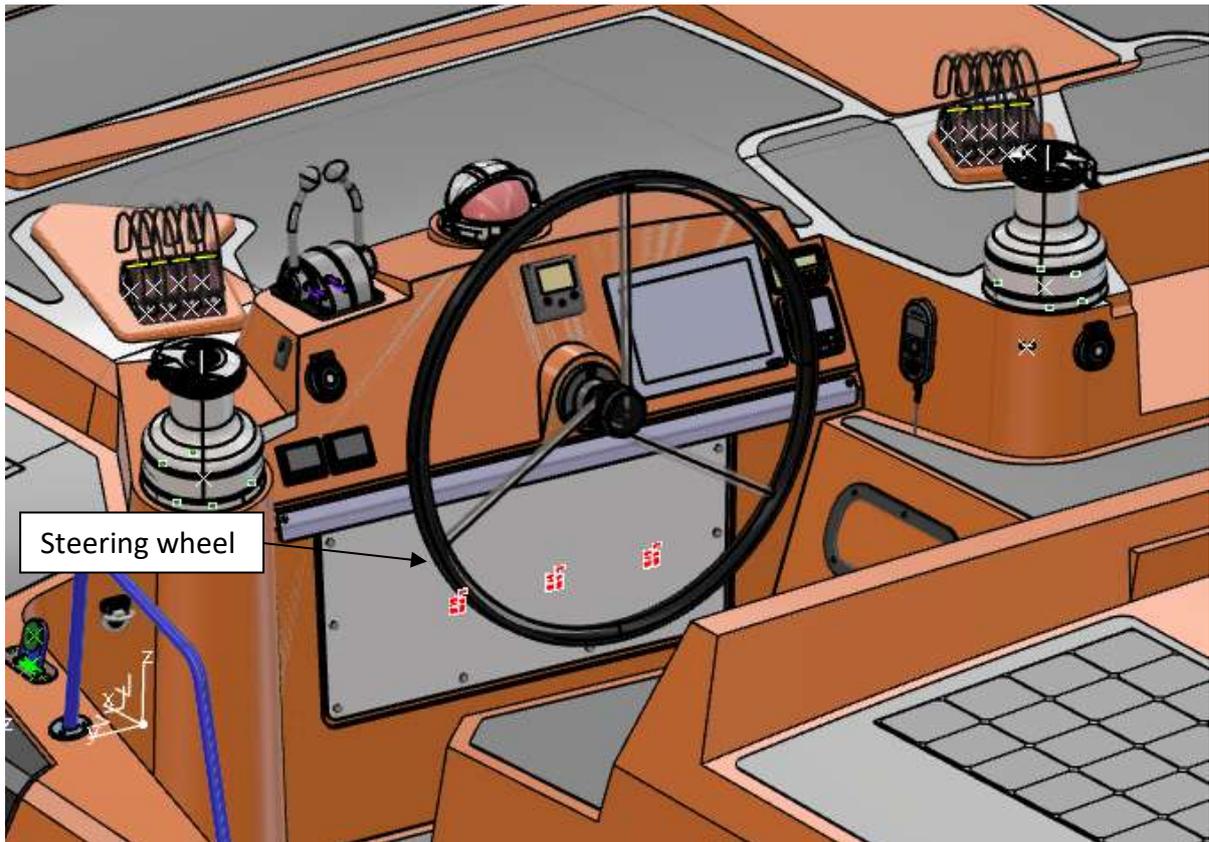

- Periodically check the amount of play in the different parts of the system (rudder post / bearings)
- Periodically grease the system.
- Regularly check the entire length of the cables as well as their terminals to check for any evidence of wear.

The steering stops are bolted to a shelf secured to the main structure of the boat.

In case of doubt or problems, consult your dealer.

In the event of damage to either of the two rudders:


- Separate the linking bar from the tiller arm. Remove the nut and washer (from the rudder side). Requires 17mm spanner/wrench; remove the linking bar
- Fit the emergency tiller. See chapter 11.2

11.2. Emergency tiller

CAUTION

- The BALI 4.4 is equipped with an emergency tiller, which must be kept easily accessible.
- It is only designed for sailing at reduced speed in the event of damage to the steering system.

- The emergency tiller is located in the starboard engine compartment on the aft bulkhead.

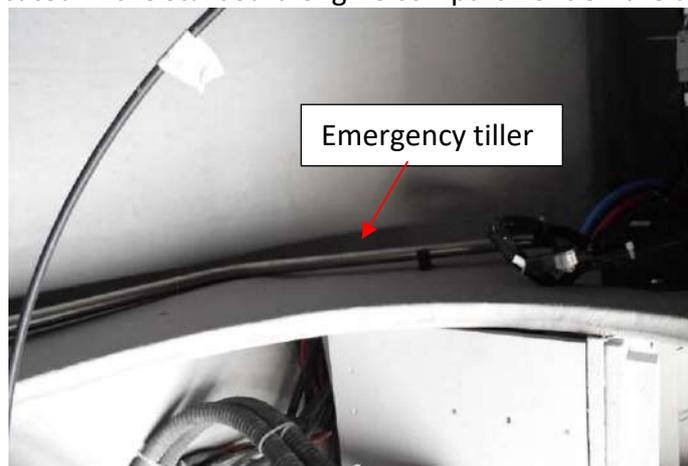

Unscrew the deck plug (12) and insert the tiller (13).

Separate the parts of the steering system where problem originated and ensure that the rudder or rudders can be moved freely without effort.

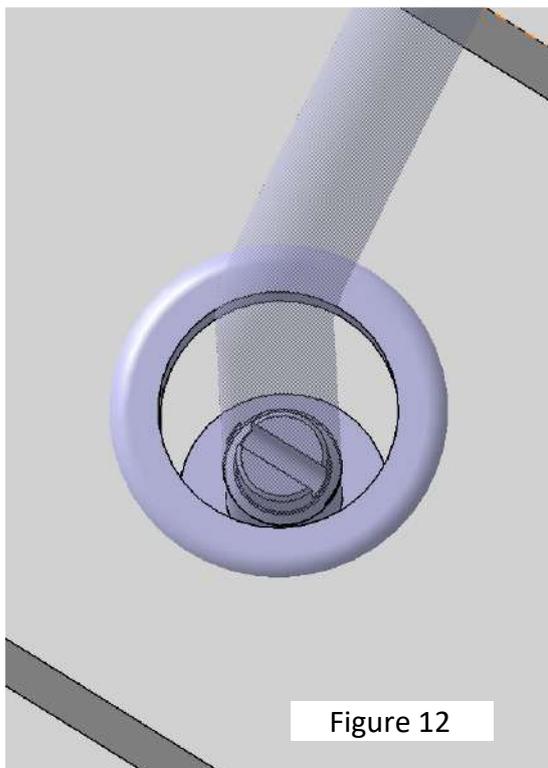


Figure 12

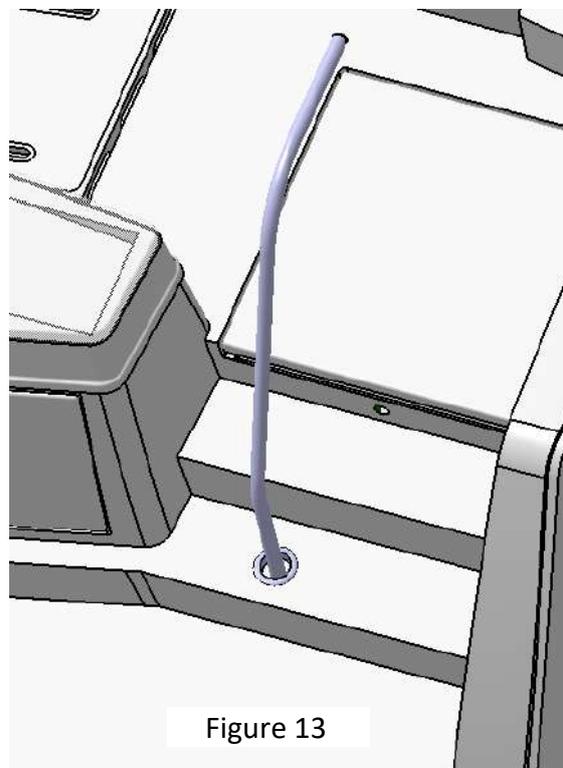


Figure 13

12. SAILING

(Plans on pages N°76 to 80)

WARNING

In every situation, adapt your boatspeed to suit the conditions and maintain a margin of safety. Pay particular attention:

- **To other marine traffic.**
- **To manoeuvres in port.**
- **To passages through anchorages.**
- **To the sea state, currents, wind strength. Breaking waves in particular can present significant dangers to stability.**

Ensure that any equipment not fixed down is secure in the boat when it is under way.

Observe the rules of the road concerning priority, as defined by the International Regulations for the Prevention of Collisions at Sea (COLREGS).

Ensure you have sufficient space to stop or manoeuvre if necessary, so as to avoid a collision.

Respect any speed limits in force.

Out of courtesy and for the safety of other vessels, do not produce a large wake when in the proximity of other craft.

Always make sure you are aware of any local rules as well as international regulations (eg. MARPOL).

WARNING

- **Your boat must be fitted with lifelines. Padeyes are located on the deck for this purpose. Refer to the deck fittings plan for your boat.**
- **If your boat is fitted with lifelines made from synthetic fibre, an annual inspection and five-yearly replacement must be carried out.**
- **The stability of your boat has been designed taking into account options available from the yard. Any modification affecting weight distribution on board (for example the addition of a radar, an in-mast furling system, changing the engines, etc) can have a significant effect on stability, trim and performance of the boat.**
- **Towing a boat can impose significant loads, reducing the stability of your boat.**
- **The means of getting back on board must be permanently deployed if the boat is to be used single-handed, whether it is anchored, moored, alongside or under way.**

The stability has been calculated for a vessel in minimal sailing condition MMOC and in return sailing condition M_{LA} .

This boat is at risk of capsize or being swamped if carrying an excessive amount of sail. It is designed to not sink in such circumstances. Sail area must be reduced to suit the sailing conditions. Particular vigilance must be used in the case of conditions with gusty wind or squalls, and the following precautions should be observed:

- | | |
|--------------------------------|--------------------|
| • In the event of strong gusts | RELEASE THE SHEETS |
| • Hard on the wind | LUFF UP |
| • With the wind on the beam | RELEASE THE SHEETS |
| • Wind aft of the beam | BEAR AWAY |

DANGER

Always ensure you follow the instructions on the plan for reducing sail Refer to the sail reefing plan on page N°78

The BALI 4.4 has buoyancy compartments (coachroof, space between nacelle and saloon floor, etc): under no circumstances should holes be made in these

12.1: Visibility from the helm station

Plan on page N°79

The operator's view from the helm station may be obscured by one or more of the following variable situations:

- Loading of the vessel and distribution of the load.
- Speed.
- Sea state.
- Reduced visibility (by rain, darkness or fog).
- Visibility reduced by sail changes and hoisting of foresails (Solent, genoa, gennaker, Code 0, etc.)
- Lights from the interior of the boat.
- Position of covers or curtains.
- People or moveable equipment located in the helmsman's field of vision.

13. RIGGING

CAUTION

The wind instrument must be regularly checked

To limit the risk of capsizing, the sail area should be reduced in accordance with the wind strength but also factors such as:

- **Sea state**
- **Comfort and crew ability**
- **Entering and leaving port**
- **Gusty conditions or fog**

13.1 Standing rigging

Daily:

- After every sail, all the lower parts of the standing rigging should be rinsed with fresh water (shrouds, forestay and diamond stay).

Monthly:

- All the swages should be inspected so as to determine the condition of the wires. It is essential to check that there are no broken strands and that the wire is aligned with the body of the swage or terminal. The strands (the individual stainless-steel lines which make up the wire) must be in perfect condition.
- Check the split pins and locking screws on the bottlescrews and clevis pins.
- Check the fixing point of the forestay and all the elements securing it: clevis pin, nut, split pin, struts.

Annually:

- A full inspection of the standing rigging must be carried out by a rigger. This inspection must include a visual check along the length of each wire so as to detect any wear or marks which could lead to a deterioration of the condition of the wire or its components.
- An inspection of each of the anchoring points of the standing rigging must be carried out to check their integrity and that there is no deformation, bends or dents.
- The bottlescrews must be greased every year. Unscrew each bottlescrew in symmetrical fashion on the rigging (starboard/port) several turns, grease the threads with a Teflon-based grease and retighten the bottlescrew to the original setting. Check the split pins and locking screws of the bottlescrews

In the event of a broken strand, the wire must be immediately replaced.

Lifespan: The whole of the standing rigging is guaranteed for 12 months from the date the mast is stepped. After this period, the standing rigging should be the subject of regular inspection.

Aside from these periodic checks, it is imperative that the following elements are changed every 10 years or every 20,000 miles (whichever comes first).

Please refer to the terms and conditions of your insurance policy.

- Capshrouds
- Lower shrouds
- Forestay

13.2 Running rigging

The ropes which make up the running rigging are made of textile fibres which need to be continually checked due to their sensitivity to ultra-violet light. Rinsing them in fresh water after every trip at sea will extend their life expectancy as well as improve their handling by reducing the amount of salt which can dry within the fibres.

13.3 Mast

Before first use:

- Check the fixings of the masthead antennas.
- It is essential to check the insulation of any antenna, particularly the VHF and radar when transmitting to avoid any risk of rapid deterioration of the spars.
- Inspect the rigging, split pins, and locking systems of bottlescrews and clevis pins.

Daily:

- The mast foot and the lower part of the mast itself are subject to spray, so must be rinsed daily to avoid a build-up of salt on any of the parts. All moving parts or parts where there is friction, such as sheaves or gooseneck fitting must also be rinsed daily.

Monthly:

- Any parts which are subject to friction (gooseneck fitting, sheaves, cars etc.) must be lubricated with a suitable product (Teflon-based).
- Check that sheaves are free to turn and check for any wear

Annually, before the start of the season:

- Check the fixings for the masthead antennas.
- Check the insulation of the antennas, particularly the VHF and radar when transmitting.
- Inspect the mast and fixings around any welds and where any deck hardware is attached.
- Inspect the mainsail mast track and the batten cars.
- Inspect the mast foot to check for any wear on the base.

13.4 Boom

Daily:

- The boom end fittings are subject to spray and must be rinsed every day to avoid a build-up of salt on any of the parts. All moving parts or parts subject to friction, such as sheaves or the gooseneck must also be rinsed daily.

Monthly:

- All parts subject to friction (gooseneck, sheaves) must be lubricated with a suitable product (Teflon-based grease, for example).
- Check the sheaves are free to turn, and check for any wear.

Annually, before the start of the season:

- Inspect welds and deck hardware fixings.

14. LIGHTNING PROTECTION

For your safety, certain precautions must be observed.

14.1. Maintenance

If the vessel has suffered a lightning strike:

- The protection system must be examined to detect for any damage and to check the integrity of the system's circuit.
- Compasses, electric and electronic equipment must be examined to determine if there has been any damage or if any changes to calibrations or settings have occurred.

14.2. Personal protection during a thunderstorm

WARNING

During a thunderstorm the following advice should be followed:

- **The crew must try to stay inside the boat as much as possible.**
- **You must not go in the water, nor should anyone have their arms or legs in the water.**
- **While ensuring proper and safe control of sailing the vessel, no-one must touch any part of the lightning protection system, and especially not to try to link any of the parts of the system.**
- **Crew should avoid any contact with metal parts of the rigging, the spars, deck hardware and guardwires.**

15. ENVIRONMENTAL PROTECTION AND SAFETY

We advise you to make sure you are informed of local environmental regulations, and international regulations concerning maritime pollution (MARPOL Convention) as well as the codes of best practice.

CAUTION

- **Most cleaning products, engine oils and hydrocarbons are not neutral to the environment, so they must be discharged where there are proper facilities (enquire at the local port office).**
- **Certain products also present risks your safety to yourself and others, which is why it is important to read and adhere to the user instructions.**
- **Such products must be properly labelled and stored in an appropriate and ventilated location on board.**

16. SAFETY EQUIPMENT

16.1. Liferaft

There is currently no common mandatory requirement for safety equipment across the European Union, so it is up to the boat's owner to make sure they are informed as to what national regulations exist in their particular country, with regard to CE marked vessels.

In France, pleasure vessels which are CE marked must be equipped with safety equipment designed for the relevant category of navigation under the responsibility of the yachtsman.

Your boat is equipped with a position for stowing the liferaft (Figure 14). This is accessible beneath the seat in the aft beam (lid). This location must not be used as a storage area, so as not to obstruct access to the liferaft. Carefully read the user manual for the raft. The crew must be familiarised with the use of all of the vessel's safety equipment (harnesses, distress flares, liferaft, etc.) Sailing schools and yacht clubs regularly organise training sessions.

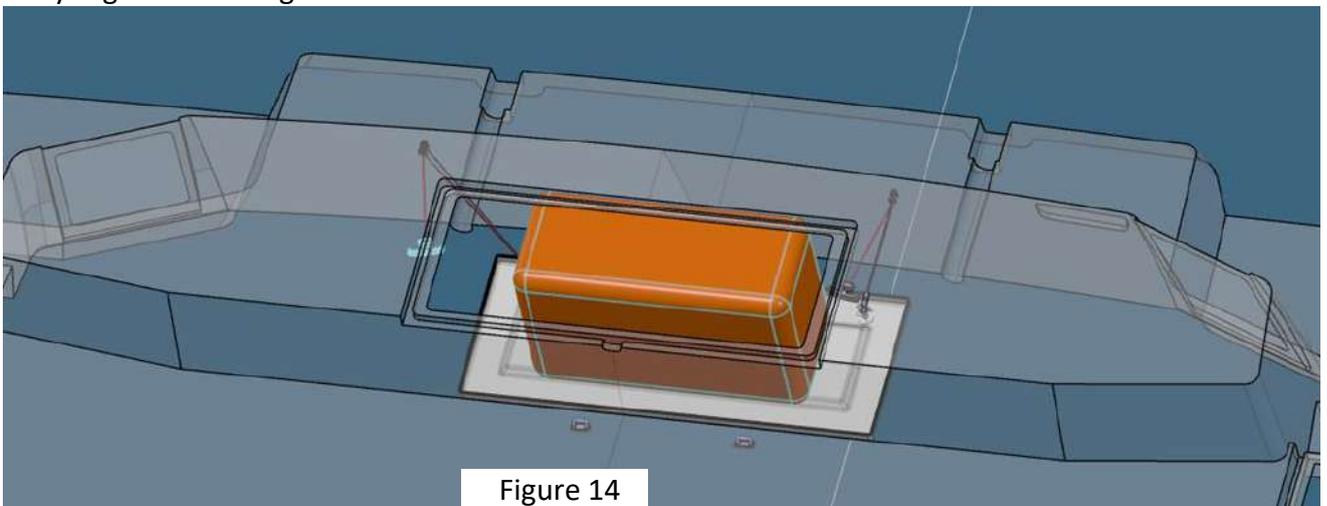


Figure 14

CAUTION

**- In the event of serious damage to the boat, use the designated escape routes
REFER TO THE PLANS ON PAGE 110 – ABANDONING SHIP -**

16.2. Getting back on board

A bathing ladder is accessible from the port sugar scoop.
Before going swimming, the ladder must be put in the water.
It is fitted with a strap allowing it to be deployed in the event of falling overboard



CAUTION

- When single-handed, you should have a system for boarding the boat permanently rigged while the boat is anchored, moored, tied up or under way.

17. HOISTING, TRANSPORT, STORAGE ASHORE

(Plans on pages N°107 and 108)

During haulout, ensure that the slings are correctly positioned and they are not bearing on the propellers, or any delicate parts, such as transducers, etc.

The slings must be positioned in line with the mast bulkhead and the coachroof bulkhead, as indicated by grey triangles above the antifouling.

Under no circumstances must the slings put any weight on the guardwires.

When placing the boat ashore, the hull must rest uniformly on the points marked by the grey triangles above the antifouling.

Travel hoists must be sufficiently wide or be equipped with spreader bars so as not to apply too much transverse force at the gunwales.

The pads of a cradle or props must be positioned level with structural elements, and only exert the pressure necessary to provide the correct balance to the boat. Their curve must perfectly fit that of the hull in a way that each should apply pressure over an area no smaller than 400 mm wide by 200 mm long (100 mm either side of the structural area).

Take advantage of the boat being out of the water to inspect the propellers, anodes, rudders, through hull skin fittings and transducers.

DANGER

Never use the electric winches for hoisting a person up the rig: a breakdown in the system could lead to irreparable damage.

18. ANCHORING, MOORING AND TOWING

The mooring cleats are designed for a maximum load of 8,500 kg.

If towing or being towed, always do so at a slow speed.

A tow line must always be tied in a way that it can always be released under load.

CAUTION

- **Any anchorage points which show any visible signs of deterioration must be replaced.**
- **It is the responsibility of the owner / user to ensure that mooring warps, towlines, chain and anchor rode, as well as anchors are adequate for the envisaged use of the boat, which is to say that lines or chains should not exceed 80% of the breaking strain of the corresponding anchorage point.**
- **The owner should also take into consideration the actions which would need to be taken to rig a towline on board.**
- **The yard recommends using an anchor rode comprising 70 metres of 12mm chain and a 40kg Delta anchor (breaking strain 7,100 kg)**

19. HULL – MAINTENANCE

19.1. Preventative maintenance

UNDERWATER HULL

Wherever you sail, it is essential to regularly apply antifouling paint to the underwater hull. This will protect the hull from any marine growth such as algae or barnacles. Check that your propellers are always clean. These factors can affect the performance of your boat. A dirty boat can lose 25% of its normal speed.

WARNING

Scrupulously respect the usage instructions of the products you are using.

The hull treatment for the BALI 4.4 offered as an option by the yard comprises the following:

- Degreasing and matting the surfaces
- 1 coat of primer
- 2 coats of antifouling

19.2. The hull

Two haulouts per year are preferable to one.

Haulout allows you to check the state:

- Of cleanliness of the raw water inlet strainers
- Of through-hull skin fittings
- Of seacock valves
- Of the rudders (check for any play or wear)
- Of the anodes
- Of the propellers

Maintenance:

Clean with a brush or a pressure washer:

- Cold water
- Maximum pressure: 60 bars
- Never bring the nozzle closer than 60 cm from the hull
- Dry the hull
- Apply the antifouling with a brush or a roller

TOPSIDES

The gelcoat is shiny and fade-resistant to atmospheric factors, in particular those found in the marine environment. As such it requires little maintenance. However, it is a good idea to follow a regular maintenance programme for the hull, in order to maintain its good appearance.

We recommend a wax or anti-UV wax treatment once a year on the smooth areas to keep them shiny.

WARNING

Scrupulously respect the usage instructions of the products you are using.

WARNING

In the event of an impact with a sharp object, the hull is liable to have been breached. Should this be the case, repairs must be effected as soon as possible.

19.3. Cleaning the deck

- Use products specifically designed for washing or cleaning decks.
- Rinse thoroughly.
- Do not use any abrasive detergent.
- Any glazed areas must be cleaned with products and materials suitable for PMMA.
- To maintain the shine of painted or varnished areas, it is important to rinse the boat frequently with fresh water.
- Use non-aggressive products which are specific for the particular maintenance.

19.4. Marks on the hull or deck

19.4.1. Scratches

- Sand with 1000 grade abrasive paper. You can add a little washing-up liquid to prevent the paper clogging.
- Rinse thoroughly.
- Finish off with a polishing product for paint.

19.4.2. Chips in the gelcoat in smooth areas

- Clean and thoroughly dry the affected area.
- Prepare a small amount of filler in the colour of the deck or the hull (see your dealer).
- Apply with a spatula.
- Cover the repair with polyamide film or sticky paper.
- Remove the film when the repair has dried.
- Sand with water using 400-grade wet and dry paper, then 600-grade, then 1000. Add a little washing-up liquid to prevent the paper from clogging.
- Rinse thoroughly.
- Finish off by polishing with a product designed for paint.

19.4.3. Chips in the non-slip paint

Note: Scratches and chips are not serious to the solidity of the boat, as the outer covering does not form part of the structure. It is however important that water cannot penetrate through to the fibreglass. In the event of any significant damage, it is essential you contact your dealer.

19.5. Scratches on the hatch covers

Rub with a soft cloth or cotton soaked in a polishing product specifically for PMMA. In the case of deep scratches, contact your dealer.

WARNING

Never use a solvent for cleaning deck panels and hatches.

19.6. Sails

Sails such a gennaker or a code 0, which have an integral boltrope in the luff and which are rigged on a furler, must not be left hoisted for long periods or when there is no-one on board.

Other than the question of safety linked to the fact that they could unfurl involuntarily, their UV protection is lower than that of other furling sails, as they were not designed to be left permanently hoisted.

Catana does not guarantee any sails which are not used in accordance with the recommendations above.

20. DAVITS AND AFT DOOR (depending on options)

20.1. Davits (without electric hoisting option)


Operating procedure for raising/lowering the tender.

Lowering

- Put the control line on the dedicated winch
- Open the clutch located at the top of starboard flybridge leg
- Gently ease out the handling line

Raising

- Shut the clutch
- Place the handling line on the dedicated winch
- Secure the dinghy beneath the davits using the dedicated pendants
- Using the dedicated winch, complete the hoisting procedure (davits hoisted as far as the stops)
- Check the clutch is closed and remove the line from the winch

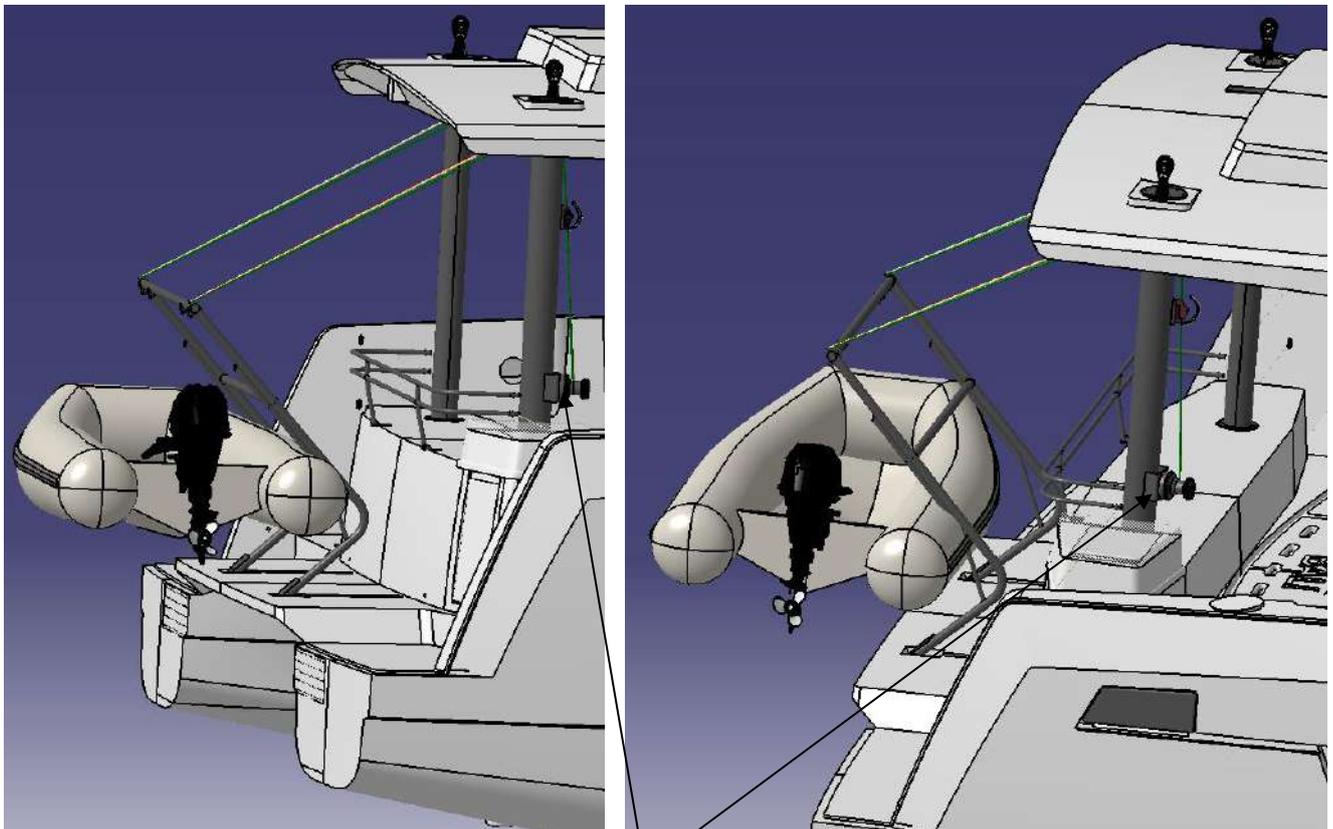

Dedicated winch

DANGER

Do not exceed a maximum dinghy weight of 150kg

Catana recommends raising the tender with the motor positioned on the starboard side.





An optional outboard bracket is available for a motor weighing up to a maximum of 20kg.

20.2. Pivoting aft door

Operating procedure for opening/closing

Opening

- Unlatch the bolts in the upper left-hand and right-hand corners (photo N°1)
- Unlatch the lower fixings
- Switch on the hydraulic system at the chart table (photo N°2)
- Push the button upwards to open the door as far as the stops (photo N°3)
- Close the safety toggle-latch which keeps the door in the open position (Photo N°4)
- Switch off the system at the chart table

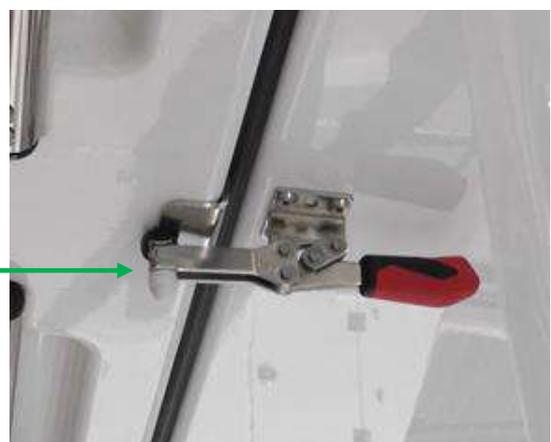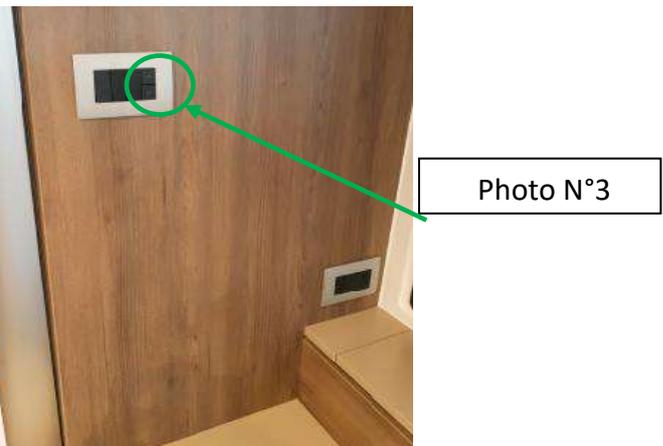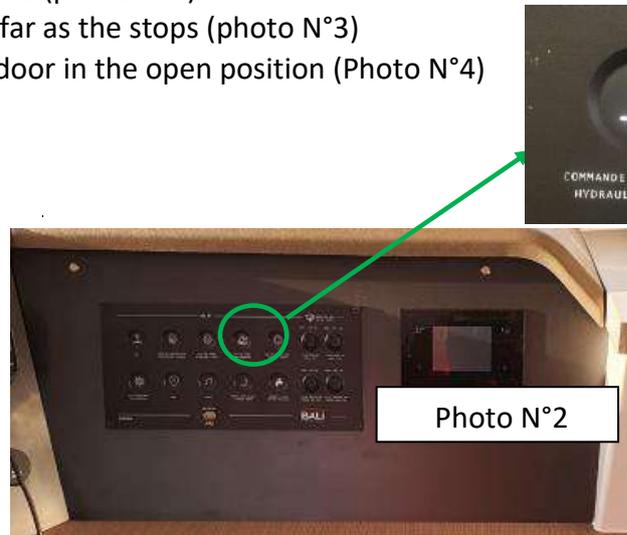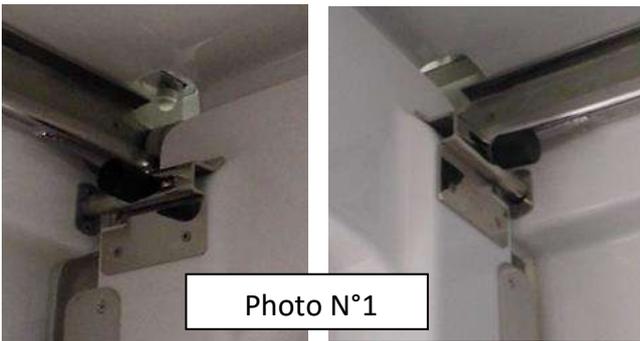

Closing

- Switch on the hydraulic system at the chart table
- Unlock the safety toggle-latch
- Push the button downwards to close the door as far as the stops
- Shut the latch bolts, upper and lower, and left and right.
- Switch off the system at the chart table.

21. TRANSFER OF OWNERSHIP



CERTIFICAT DE TRANSFERT DE PROPRIETE **TRANSFER OF OWNERSHIP**

Le bateau modèle / Boat Model:

N° de coque / Hull N°:

De / From M / Mr:..... Adresse / Address:

.....

C-P / ZIP CODE:..... Ville / City: Tel:

Date d'achat / Date of Purchase:.....

A ETE VENDU A / BEING SOLD TO:

M / Mr: Adresse / Address:

.....

C-P / ZIP CODE:..... Ville / City: Tel:

Date d'achat / Date of Purchase:

Completed aton the

Le vendeur / Seller

L'acheteur / Buyer

Lieu/Place: le/date:

Exemplaire à retourner dans les 15 jours suivant la transaction à :

Return this copy within 15 days of the transaction to:

NOTES


22. LIST OF PLANS


PLANS

1	Presentation	66-67
2	Interior Layout	68-75
3	Harness attachment points and escape hatches	75-77
4	Reefing plan	78-79
5	Working areas	80-81
6	220 V electrical system	83-85
7	Charging and power circuit wiring diagram	86-93
8	12 V hull electrics	94-96
9	Lighting system	98-102
10	Steering system	103-104
11	Gas system	105-106
12	Haulout / Hoisting	107-108
13	Fire safety and escape routes for abandoning ship	110-114
14	Fresh water system	115-117
15	Bilge pump system	118-119
16	Grey water system	121-123
17	Black water system and holding tanks	125-127
18	Diesel system	128-129
19	Watermaker	130-131
20	Seawater system	133-135
21	Location of deck fillers	137-139
22	Location of through-hulls / skin fittings	141-143
24	Heating	144-146



 PRESENTATION		 PRESENTATION	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
	<p><i>Plan de présentation</i></p> <p>Longueur de coque 13.10 m Longueur de flottaison 12.90 m Bau maximum 7.40 m Tirant d'eau, 1.25 m Tirant d'air 21.55 m Déplacement léger 13600 kg</p>		<p><i>Profile plan</i></p> <p>Hull length 13.10 m Waterline length 12.90 m Maximum beam 7.40 m Draft 1.25 m Air draft 21.55 m Light displacement 13,600 kg</p>

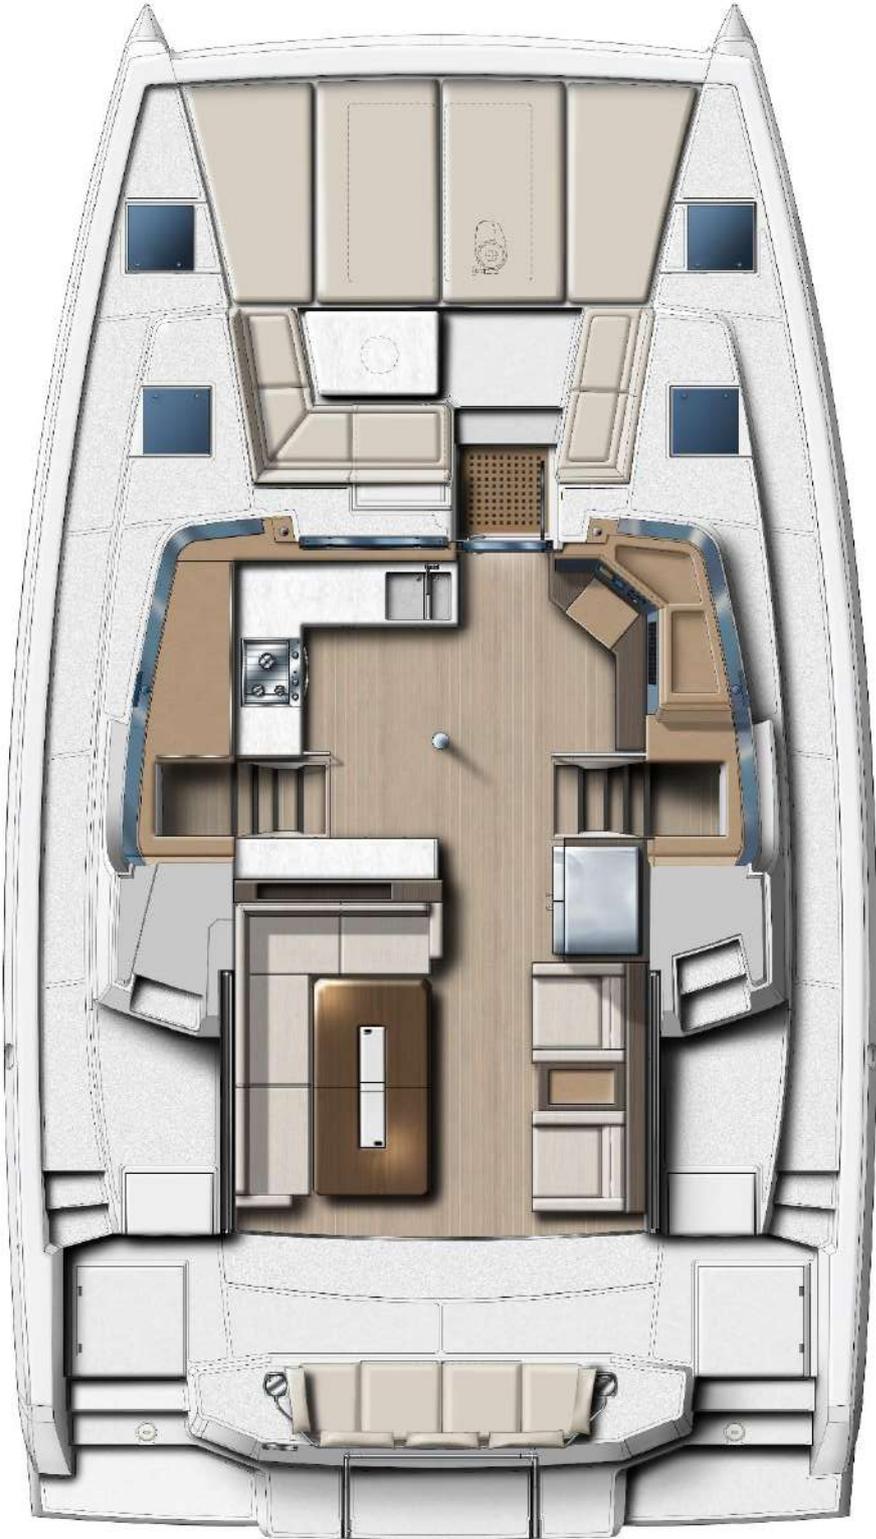

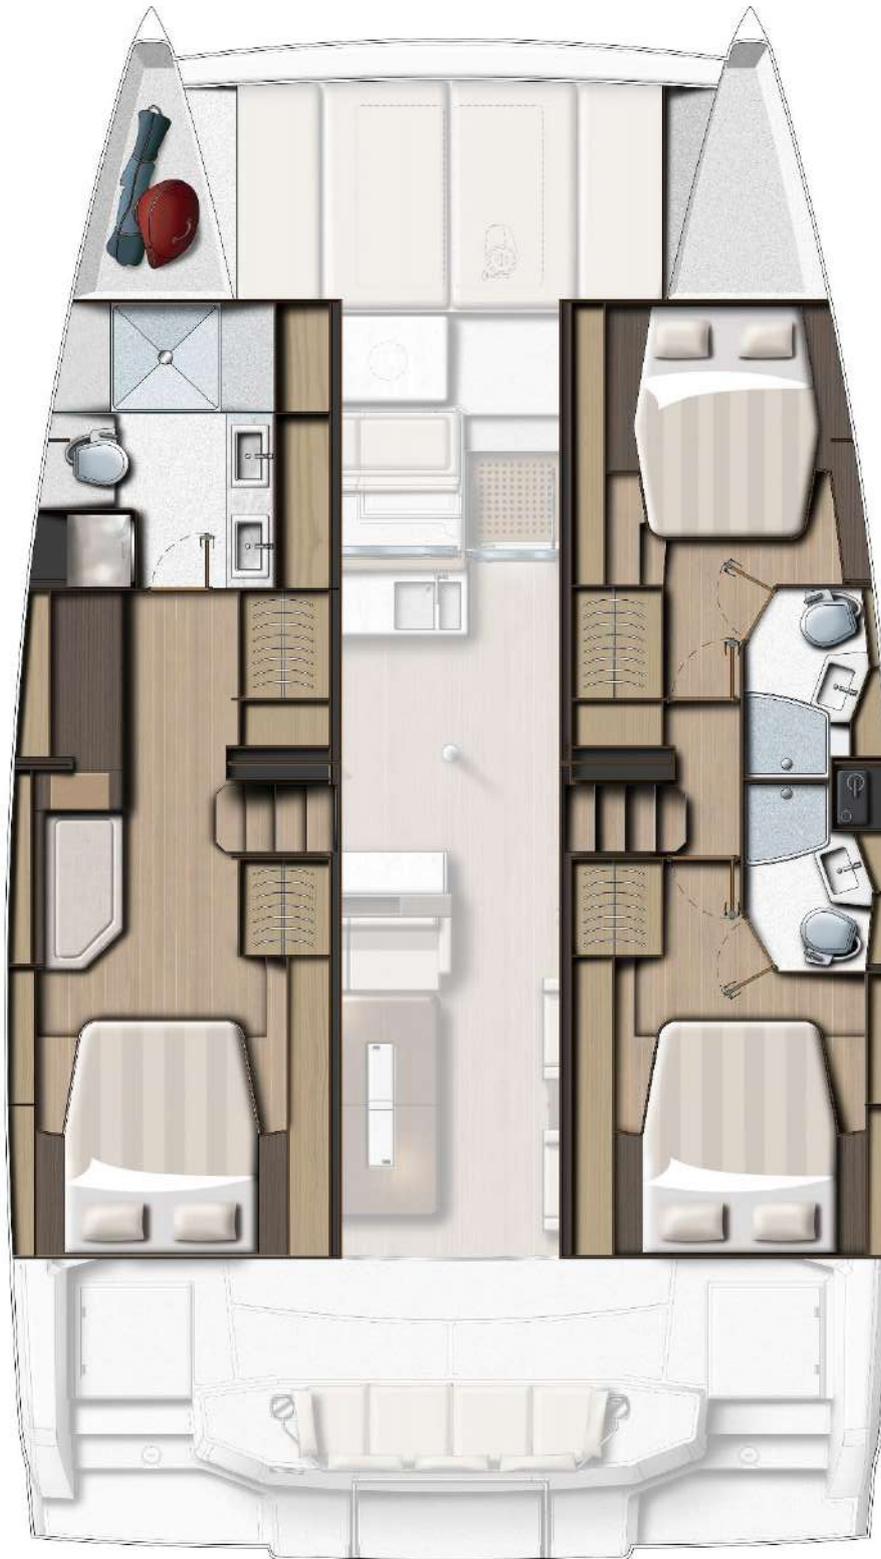



3-cabin + Stbd forepeak, 4-bathroom version



3-cabin + forepeaks, 3-bathroom version



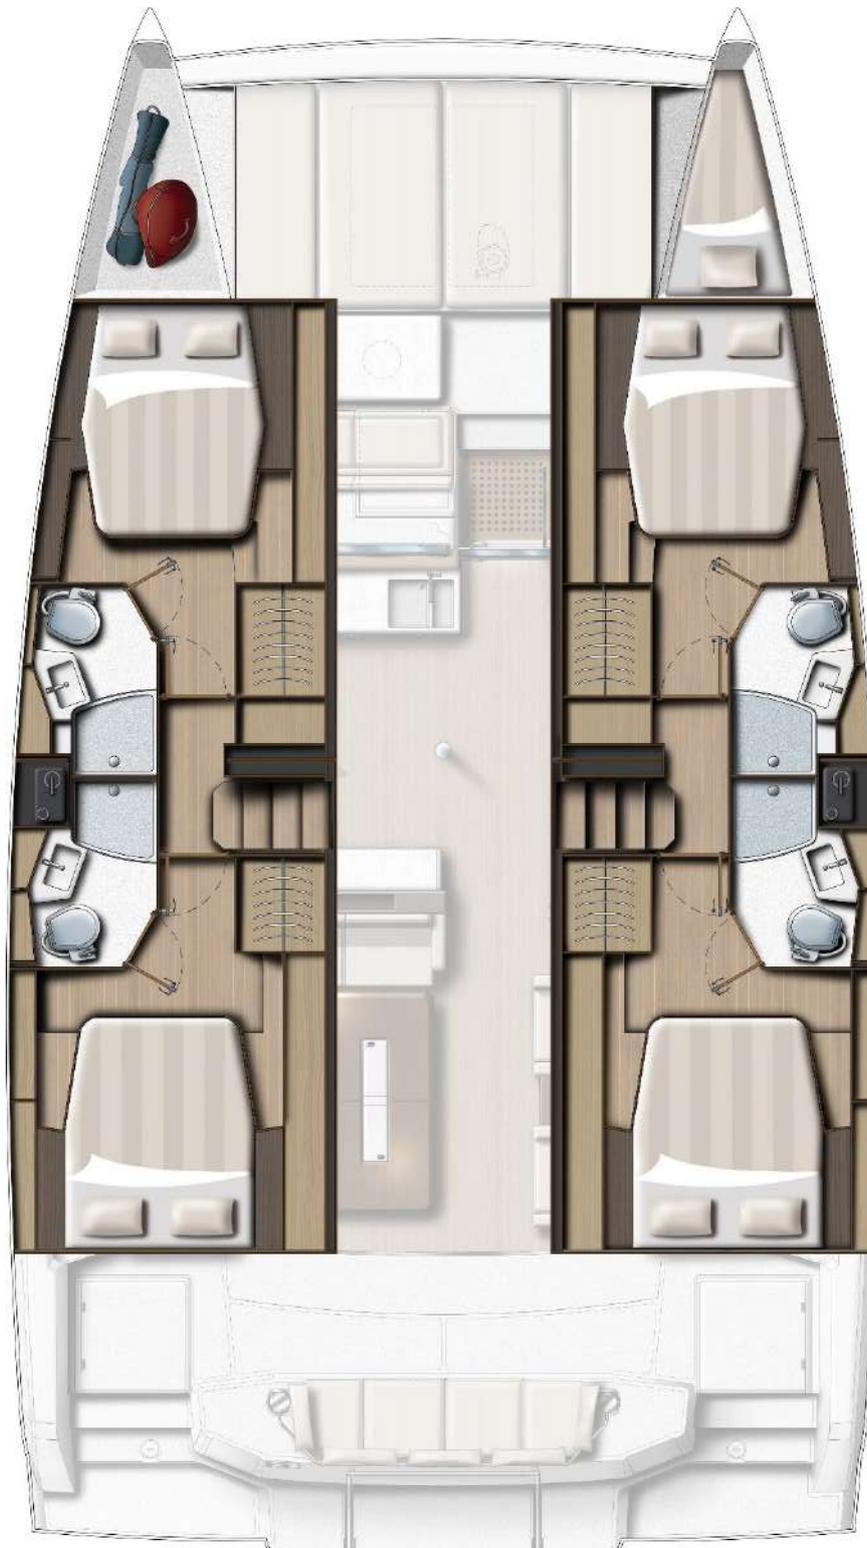

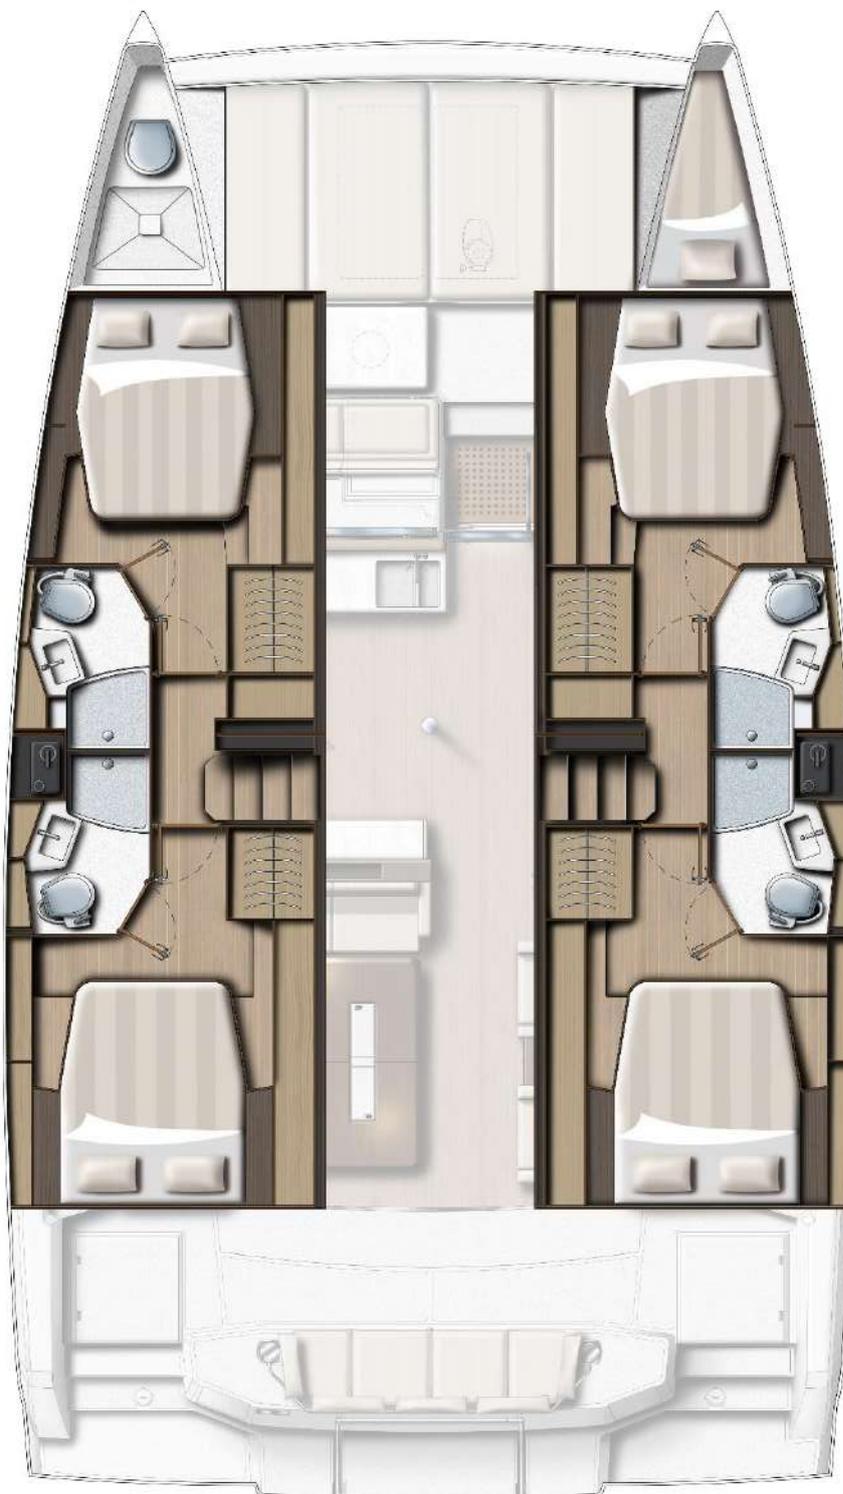

 AMENAGEMENT		 ACCOMMODATION	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
	<p>Version 3 cabines, 3 salles d'eau:</p> <ul style="list-style-type: none"> - Course bâbord avec aménagement propriétaire lit double - 1 salle d'eau propriétaire - 1 wc propriétaire - 2 cabines lit double - 2 salles d'eau invité <p>Version 3 cabines, 4 salles d'eau + pointe avant:</p> <ul style="list-style-type: none"> - Course bâbord avec aménagement propriétaire lit double - 1 salle d'eau propriétaire - 1 wc propriétaire - 2 cabines lit double - 3 salles d'eau invité - 1 cabine lit simple <p>Version 3 cabines, 3 salles d'eau + 2 pointes avant:</p> <ul style="list-style-type: none"> - Course bâbord avec aménagement propriétaire lit double - 1 salle d'eau propriétaire - 1 wc propriétaire - 2 cabines lit double - 2 salles d'eau invité - 2 cabines lit simple 		<p>3-cabin, 3-bathroom version:</p> <ul style="list-style-type: none"> - Port passageway with owner's double berth layout - 1 owner's bathroom - 1 separate owner's wc - 2 double cabins - 2 guest bathrooms <p>3-cabin, 4-bathroom + fitted-out forepeak version:</p> <ul style="list-style-type: none"> - Port passageway with owner's double berth layout - 1 owner's bathroom - 1 separate owner's wc - 2 double cabins - 3 guest bathrooms - 1 single cabin <p>3-cabin, 3bathroom + 2 fitted-out forepeaks version:</p> <ul style="list-style-type: none"> - Port passageway with owner's double berth layout - 1 owner's bathroom - 1 separate owner's wc - 2 double cabins - 2 guest bathrooms - 2 single cabin

**Version 4 cabines, 4 salles d'eau, 1
pointe avant:**

- 4 cabines lit double
- 1 cabine lit simple
- 4 salles d'eau invité

**Version 4 cabines, 5 salles d'eau, 1
pointe avant:**

- 4 cabines lit double
- 1 cabine lit simple
- 5 salles d'eau invité


**4-cabin, 4-bathroom, 1 forepeak
version:**

- 4 double cabins
- 1 single cabin
- 4 guest bathrooms

**4-cabin, 5-bathroom, 1 forepeak
version:**

- 4 double cabins
- 1 single cabin
- 5 guest bathrooms


Harness attachment points and lifelines

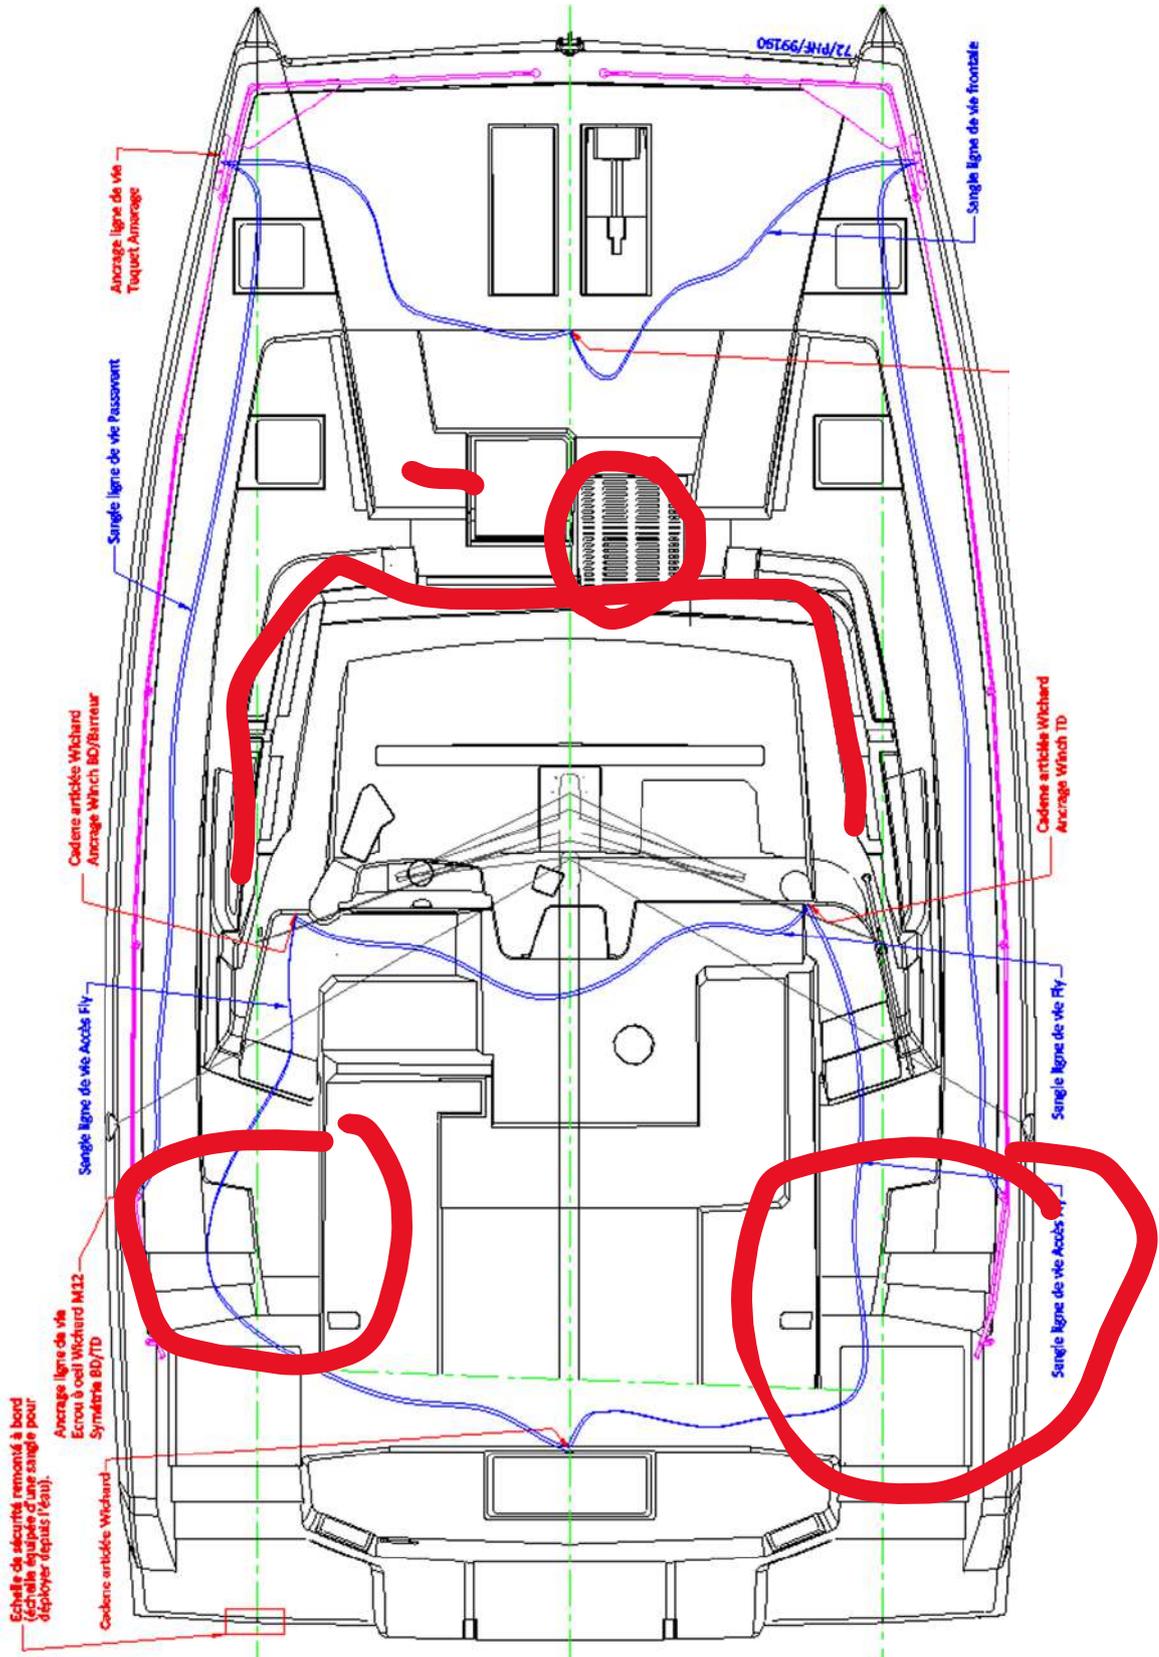

Note: The escape hatches are located beneath the companionway steps on the inboard topsides. Port side and starboard side.

The locking pin latches for the removable step must be undone to gain clear access.

Port side shown

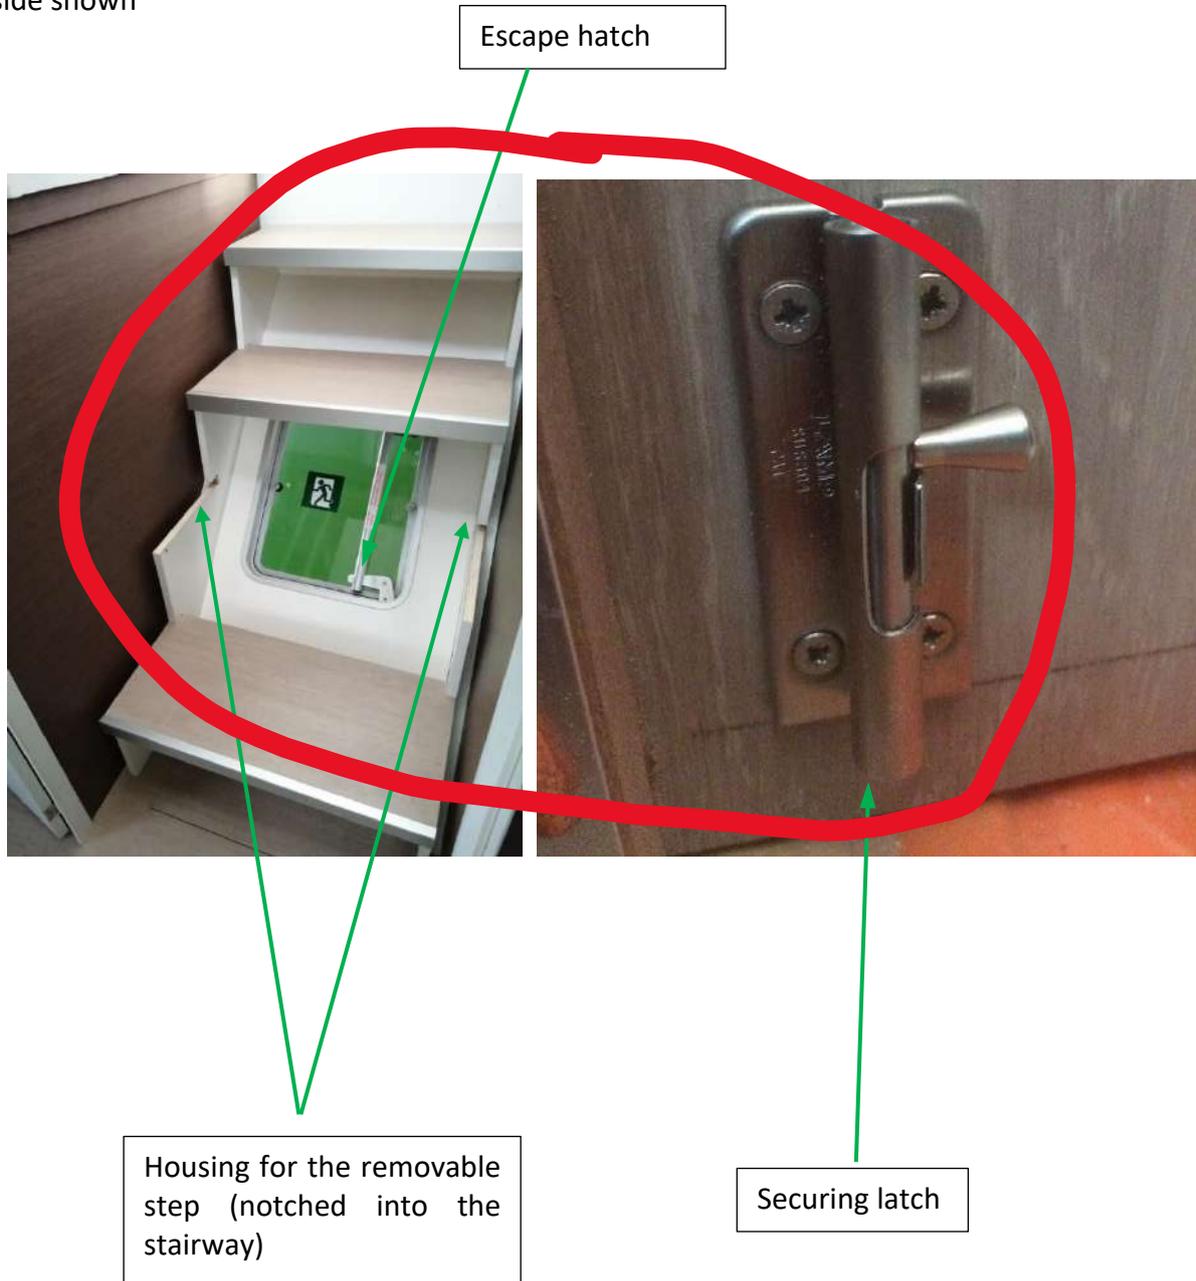

4.4				%	Mainsail (m ²)	%	Solent (m ²)	Total (m ²)
				100	76			
20 kts	1 st reef	75	57	100	42	99		
25 kts	2 nd reef	53	40	75	32	72		
35 kts	3 rd reef	30	23	52	22	45		

Your Bali is equipped with a self-tacking headsail track with lateral adjustment. We draw your ATTENTION to the absence of any longitudinal adjustment. It is therefore impossible to move the sheeting angle forward. When the self-tacking solent is partially furled, you are advised to not sheet-in hard, as this could result in irreversible deformation of the foot of the sail.


The stability has been calculated for a vessel in minimal sailing condition M_{MOC} and in return sailing condition M_{LA} .

Sail area must be reduced if necessary. Particular vigilance must be used in the case of conditions with gusty wind or squalls.

In the event of serious damage, use the emergency exits provided.
REFER TO PLANS ON PAGES 109 to 111 - **ABANDONING SHIP**

Sail area should be reduced in accordance with boatspeed and wind strength. The following precautions should be observed:


- In the event of strong gusts RELEASE THE SHEETS
- Hard on the wind LUFF UP
- With the wind on the beam RELEASE THE SHEETS
- Wind aft of the beam BEAR AWAY

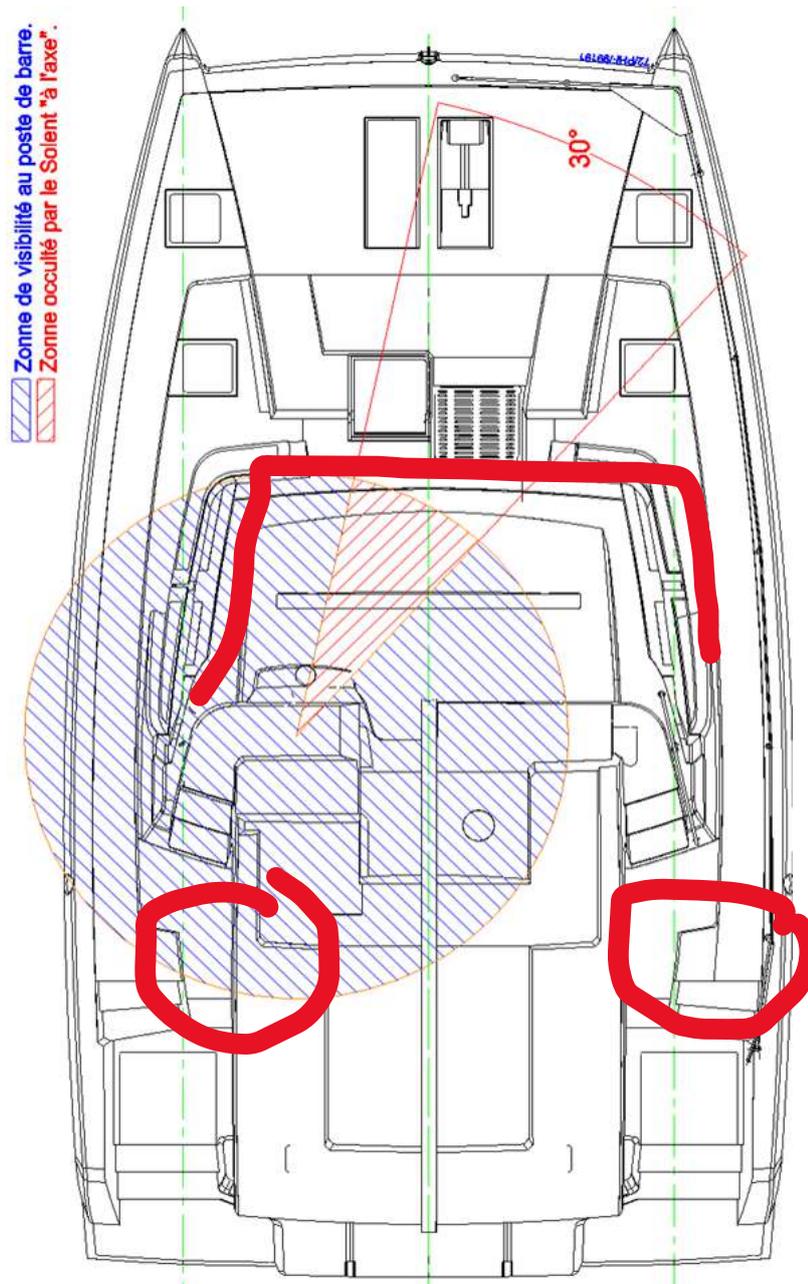

Zone of visibility from the helm station
Zone obscured by the solent "fore and aft"

The operator's view from the helm-station may be obscured by one or more of the following variable conditions:


- Vessel load and distribution of the load
- Speed
- Sea conditions
- Reduced visibility (eg. by rain, darkness or fog)
- Reduced visibility (by sail changes and hoisting of sails)
- Interior lighting inside the boat
- Position of covers or curtains
- Persons or movable equipment located within the helmsman's field of vision

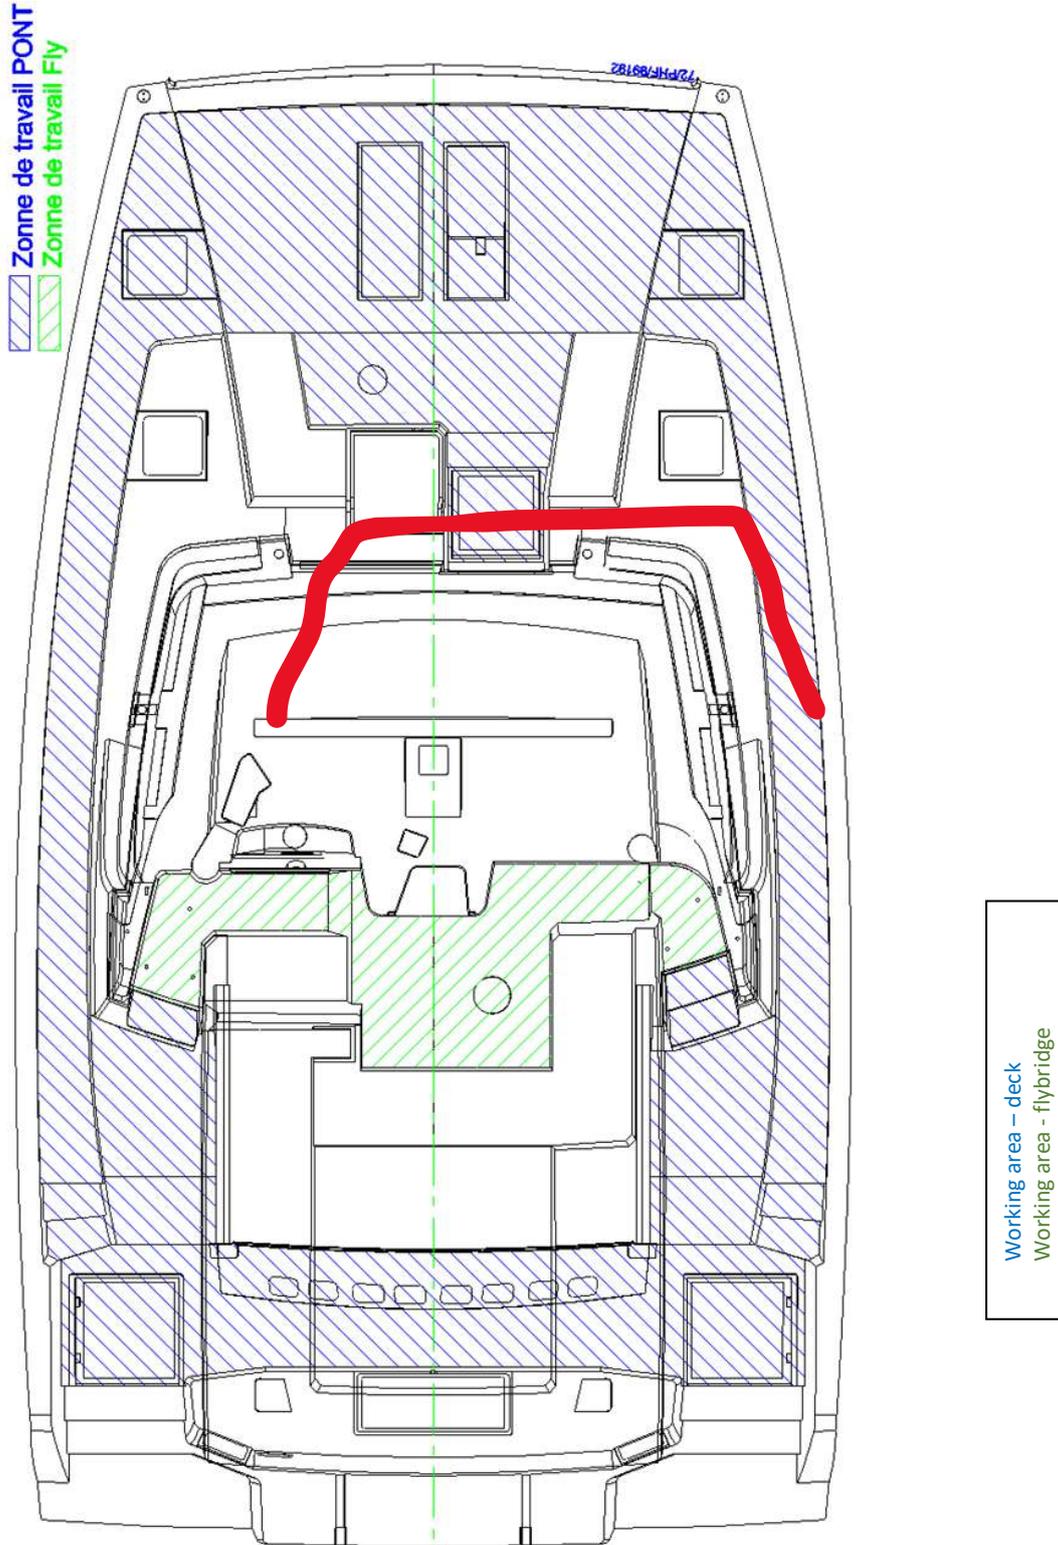


 ZONE DE TRAVAIL			
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
	<p>ZONE DE TRAVAIL</p> <p>En bleu la surface du pont</p> <p>En vert la surface du fly-bridge</p> <div style="text-align: center;">  Attention DANGER </div> <p><u>EN NAVIGATION:</u></p> <p>L'ACCES ET L'UTILISATION EST INTERDIT A TOUTES PERSONNES SUR LE BIMINI.</p>		<p>WORKING AREAS</p> <p>In blue, the deck area</p> <p>In green, the flybridge area</p> <div style="text-align: center;">  Attention DANGER </div> <p><u>UNDER WAY:</u></p> <p>ACCESS TO AND USE OF THE BIMINI IS PROHIBITED FOR ALL PERSONS</p>

Cette page est blanche intentionnellement

This page intentionally left blank

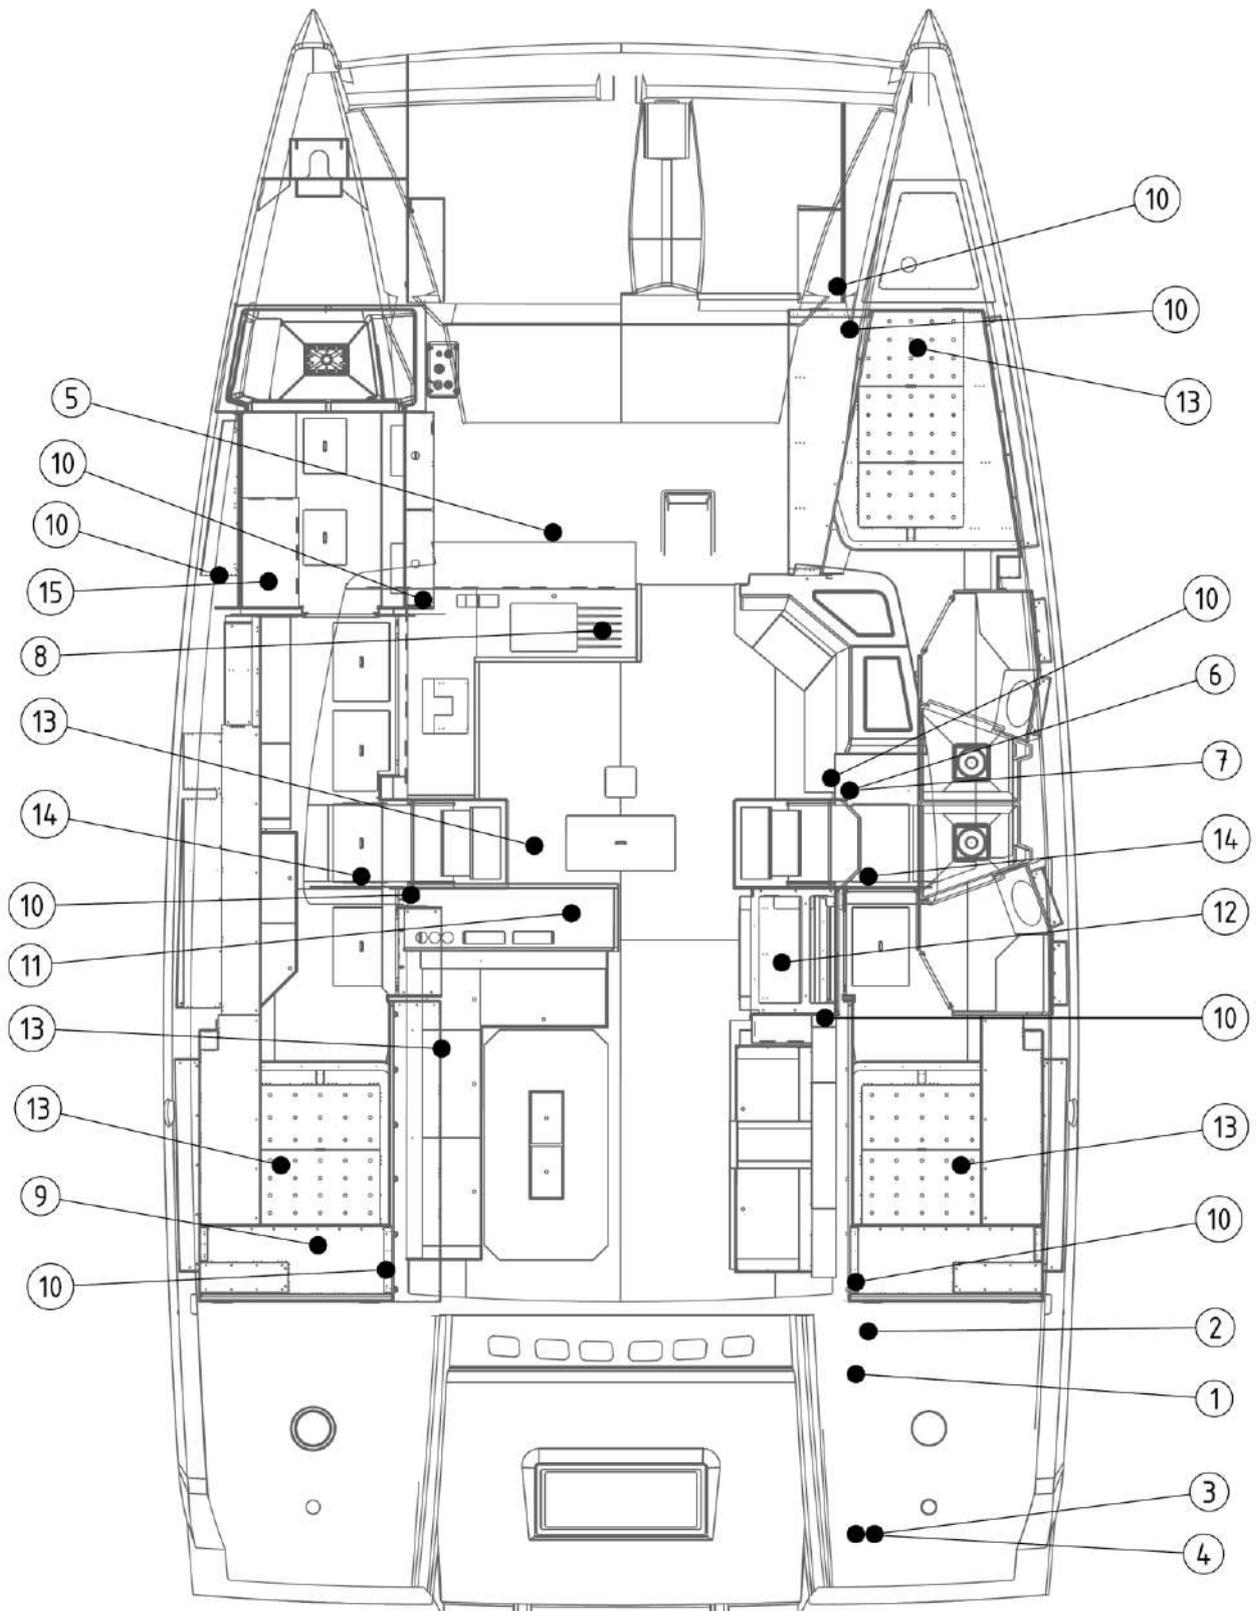



4-cabin / 4-bathroom version

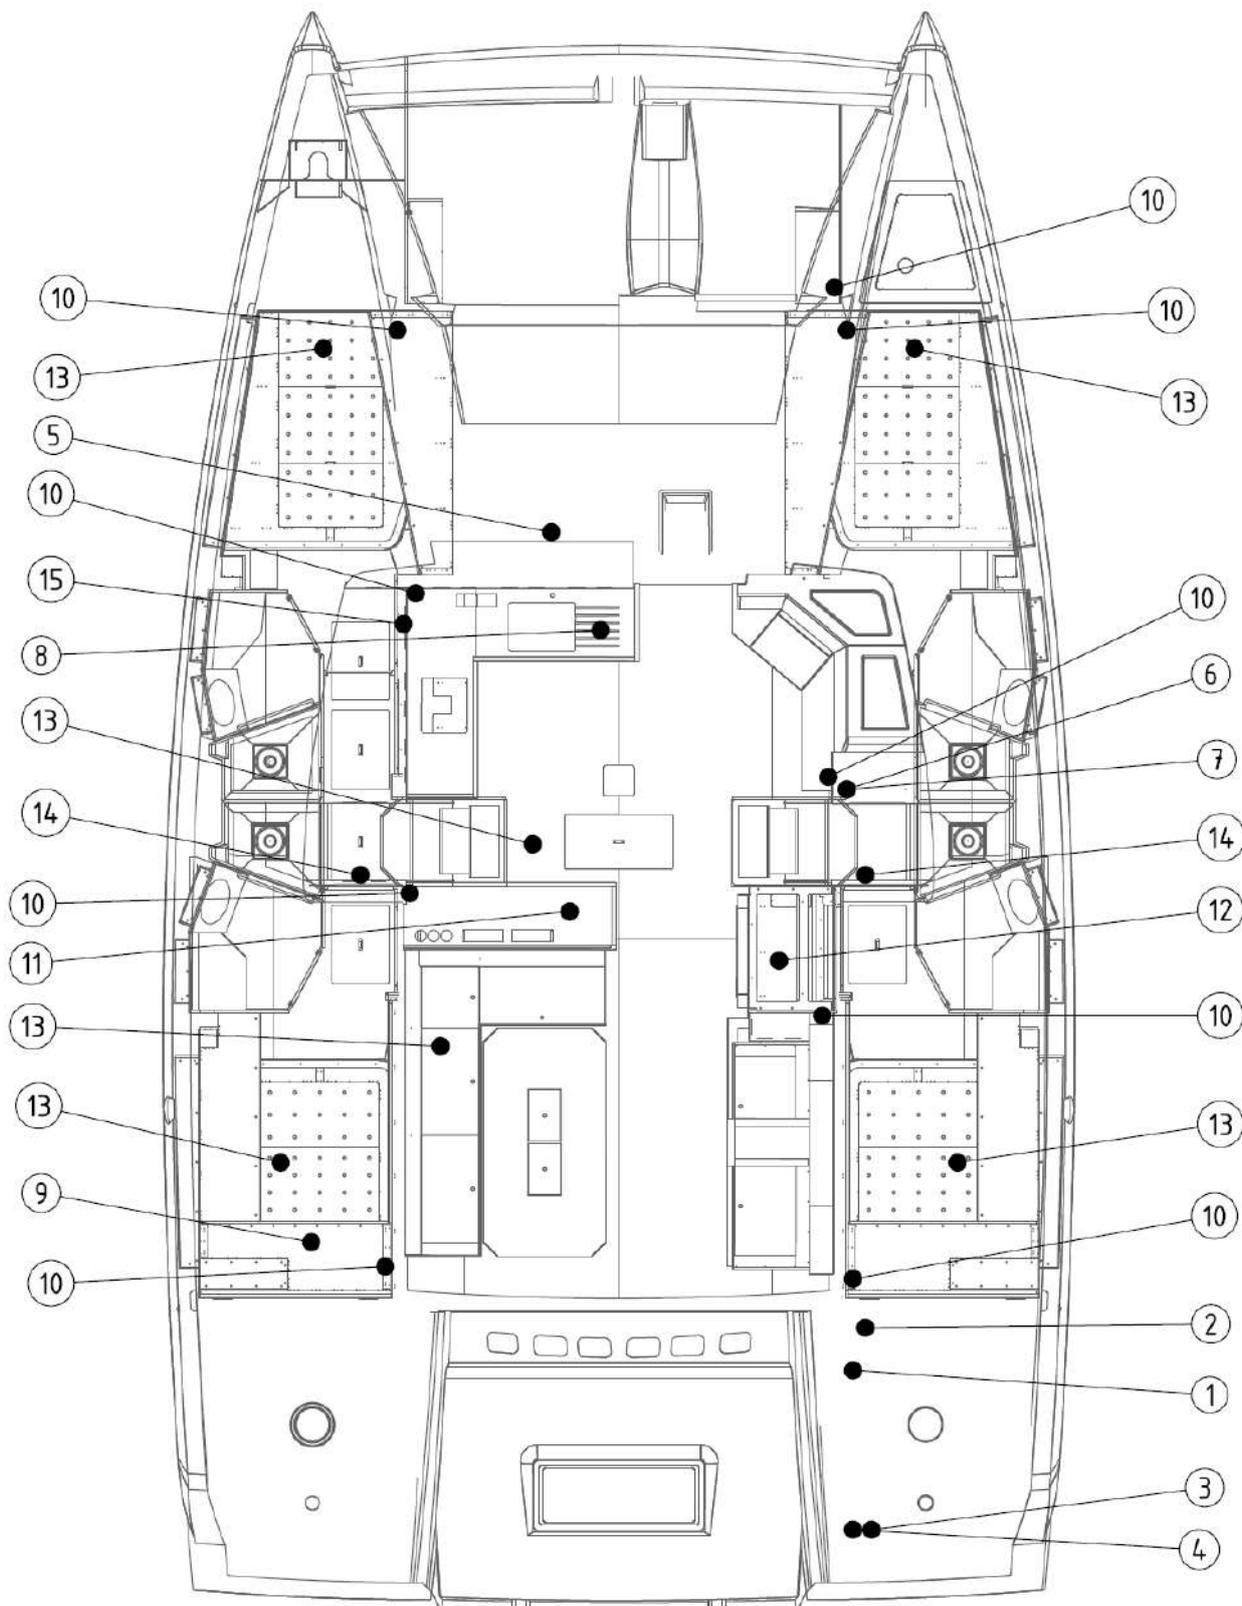

 IMPLANTATION ELECTRIQUE 220 V		 220 V ELECTRICAL INSTALLATION	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Convertisseur 12V/2000VA/70A	1	12V/2000VA/70A Inverter
2	Tableau convertisseur / chargeur	2	Inverter / charger panel
3	Prise de quai 220v (*Option clim)	3	220V shore power (*Aircon option)
4	Tableau Quai	4	Shore power panel
5	Groupe électrogène (Option)	5	Generator (option)
6	Tableau AC	6	AC panel
7	Tableau AC clim	7	AC Aircon panel
8	Lave-vaisselle 10 couverts	8	10-place dishwasher
9	Chauffe-eau	9	Water heater
10	Prise de courant AC	10	AC socket
11	Micro-ondes	11	Microwave
12	Réfrigérateur	12	Refrigerator
13	Clim monobloc	13	Aircon unit
14	Pompe de clim	14	Aircon pump
15	Lave-linge	15	Washing machine


AC 230V/50-60 Hz - AIR-CONDITIONING

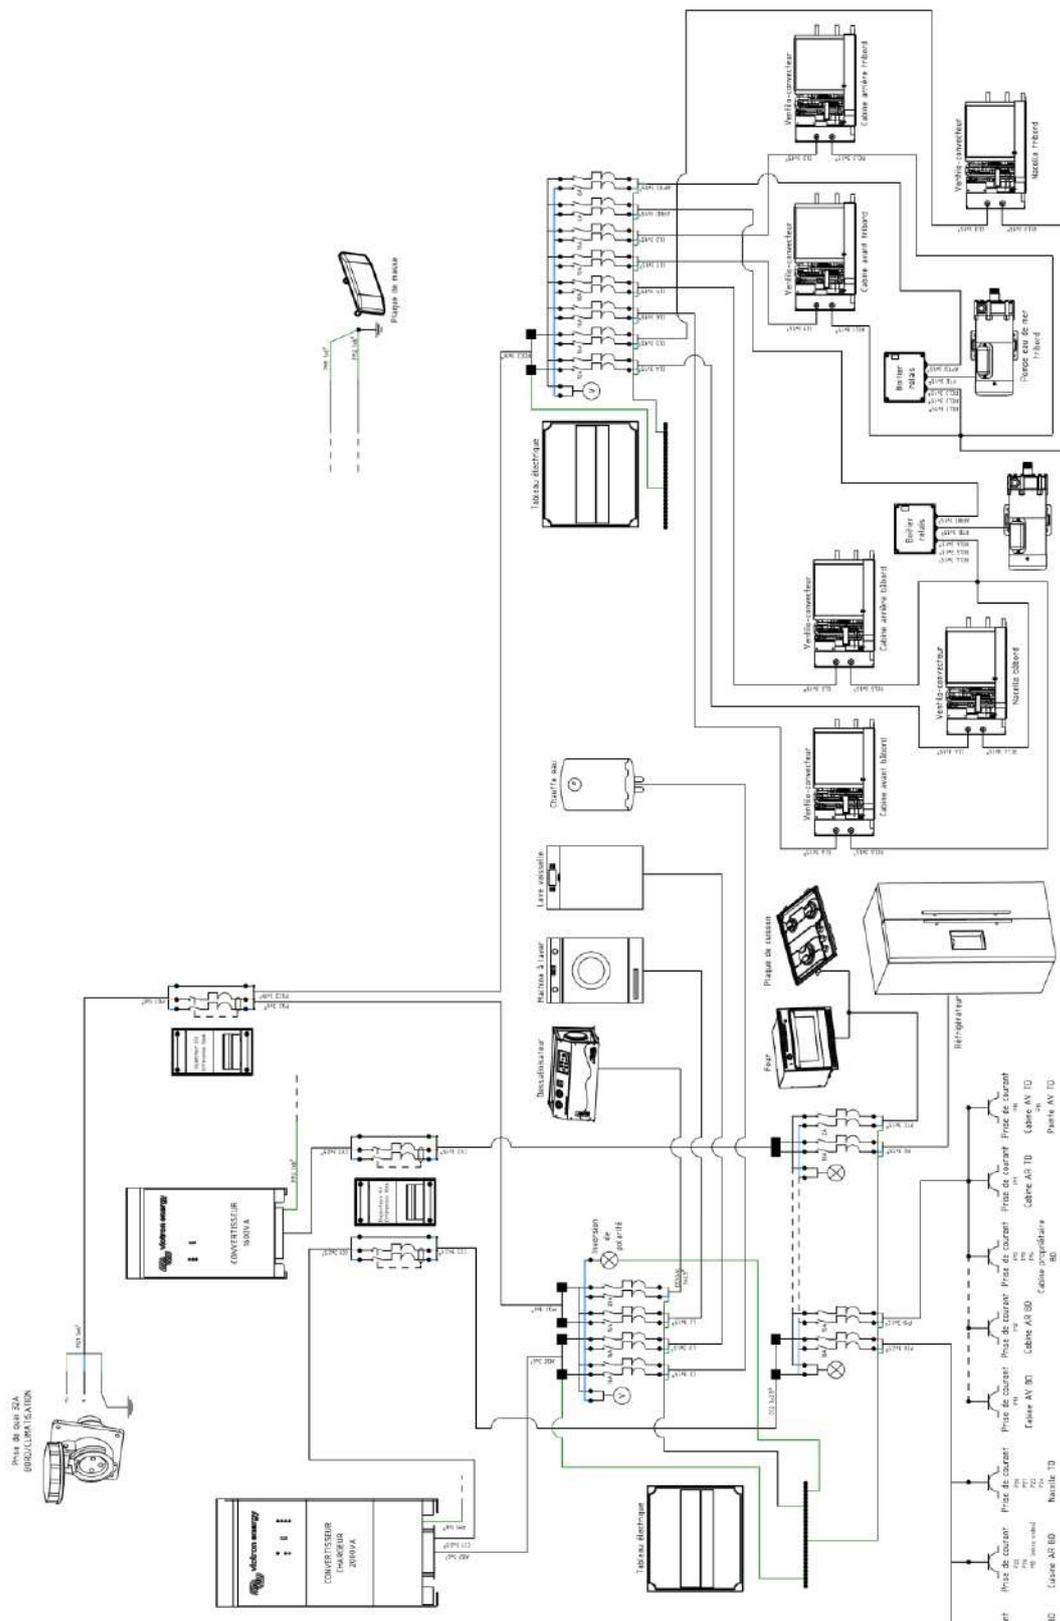


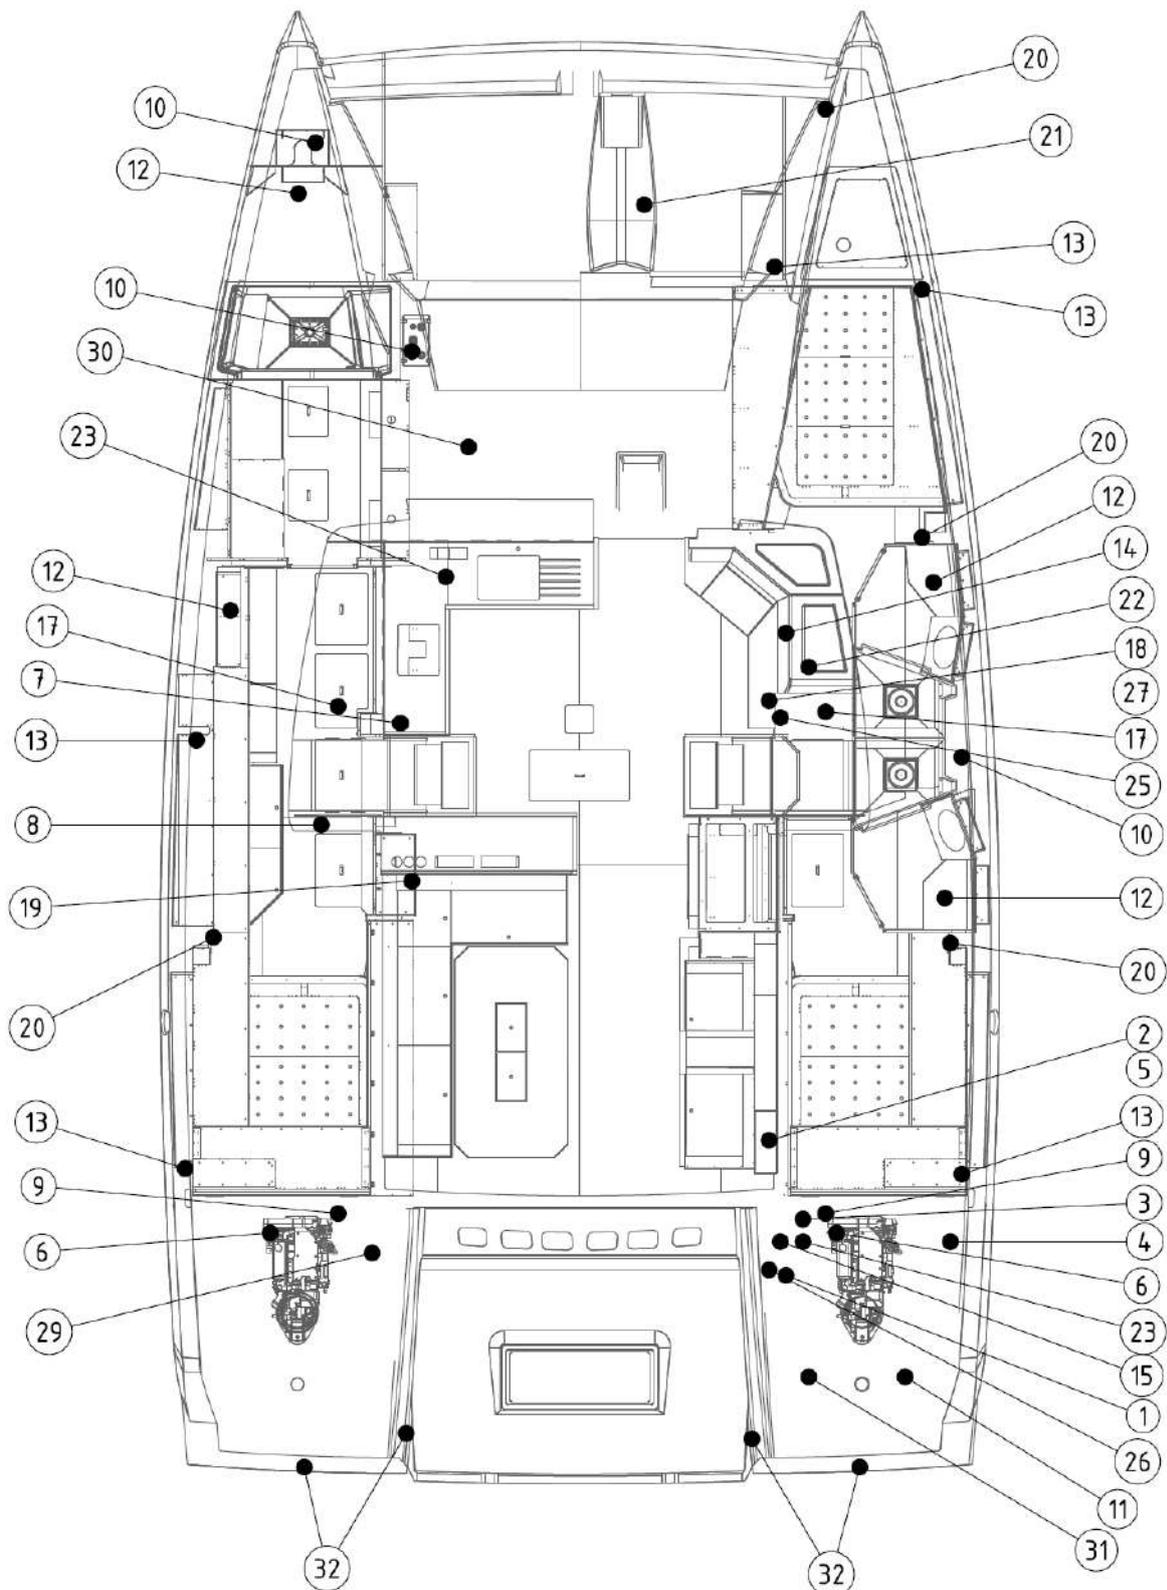

12 V ELECTRICAL INSTALLATION


4-Cabin / 4-bathroom version

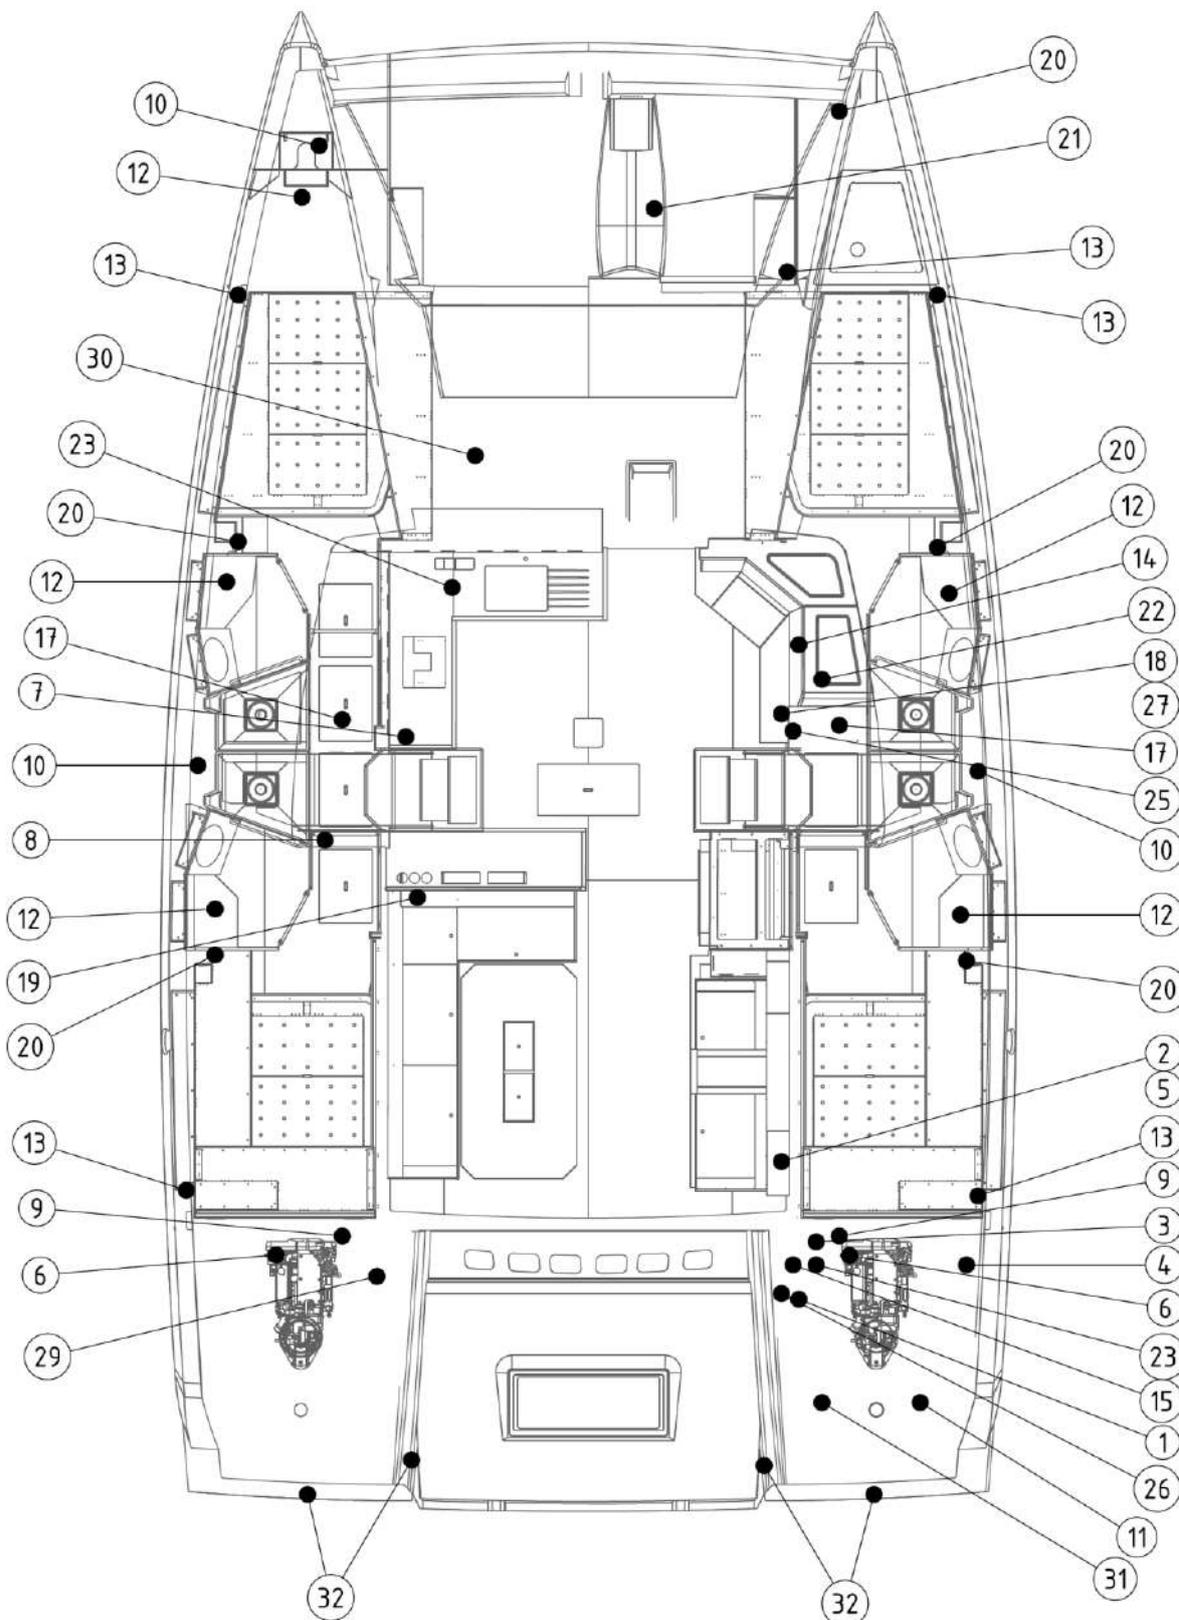

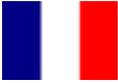
 IMPLANTATION 12 V DE COQUE		 12 V ELECTRICAL INSTALLATION	
Rep.	Désignation	Ref	Description
1	Batterie de service + moteur bâbord (4x130Ah std + 1x130Ah option)	1	Service batteries + port engine start (4x130 Ah std + 1x130Ah option)
2	Coupe batterie servitude	2	Service battery cut-off switch
3	Convertisseur / chargeur 12V/2000VA/120A	3	12V / 2000VA / 120A Inverter-Charger
4	Batterie moteur tribord 130Ah	4	130 Ah engine starter battery (stbd)
5	Coupes batteries moteurs	5	Engine battery cut-off switch
6	Alternateur moteur	6	Engine alternator
7	Groupe d'eau douce	7	Fresh water pump
8	Pompe d'eau de mer (Option EDM)	8	Seawater pump (seawater option)
9	Pompe de cale électrique	9	Electric bilge pump
10	Jauges eaux noires	10	Holding tank gauge (black water)
11	Pilote automatique	11	Autopilot
12	WC électrique (option)	12	Electric WC (option)
13	Prise 12V USB	13	12V socket USB
14	Tableau électrique TAC	14	AC panel (chart table)
15	Convertisseur 12V/220V/1600W dédié au frigo	15	12V/220V/1600W Fridge inverter
16	Pompe réservoir eaux grises (Option)	16	Grey water tank pump (option)
17	Pompe eaux grises	17	Grey water pump
18	Bloc de niveau	18	Level unit
19	Jauges réservoirs gasoil	19	Fuel tank gauges
20	Ventilateur Cabine (Pack)	20	Cabin fans (pack)
21	Guindeau	21	Windlass
22	Calculateur pilote	22	Course computer autopilot
23	Régulateur panneaux solaires (Option)	23	Solar panel regulator (option)
24	Jauges réservoirs d'eau	24	Fresh water tank gauges
25	Coffret protection DC	25	DC protection panel
26	Platine distribution DC	26	DC distribution panel
27	Relais guindeau	27	Windlass relay
28	Jauges réservoir eaux grises (Option)	28	Grey water holding tank gauge (option)
29	Désalinisateur (Option)	29	Watermaker (option)
30	Batterie de groupe électrogène (Option)	30	Generator battery (option)
31	Ppe hydraulique porte basculante (Option)	31	Hydraulic pump for pivoting door (option)
32	Spot sous – marin : x 4 (Option)	32	Underwater spotlights x 4 (option)

Cette page est blanche intentionnellement


This page intentionally left blank

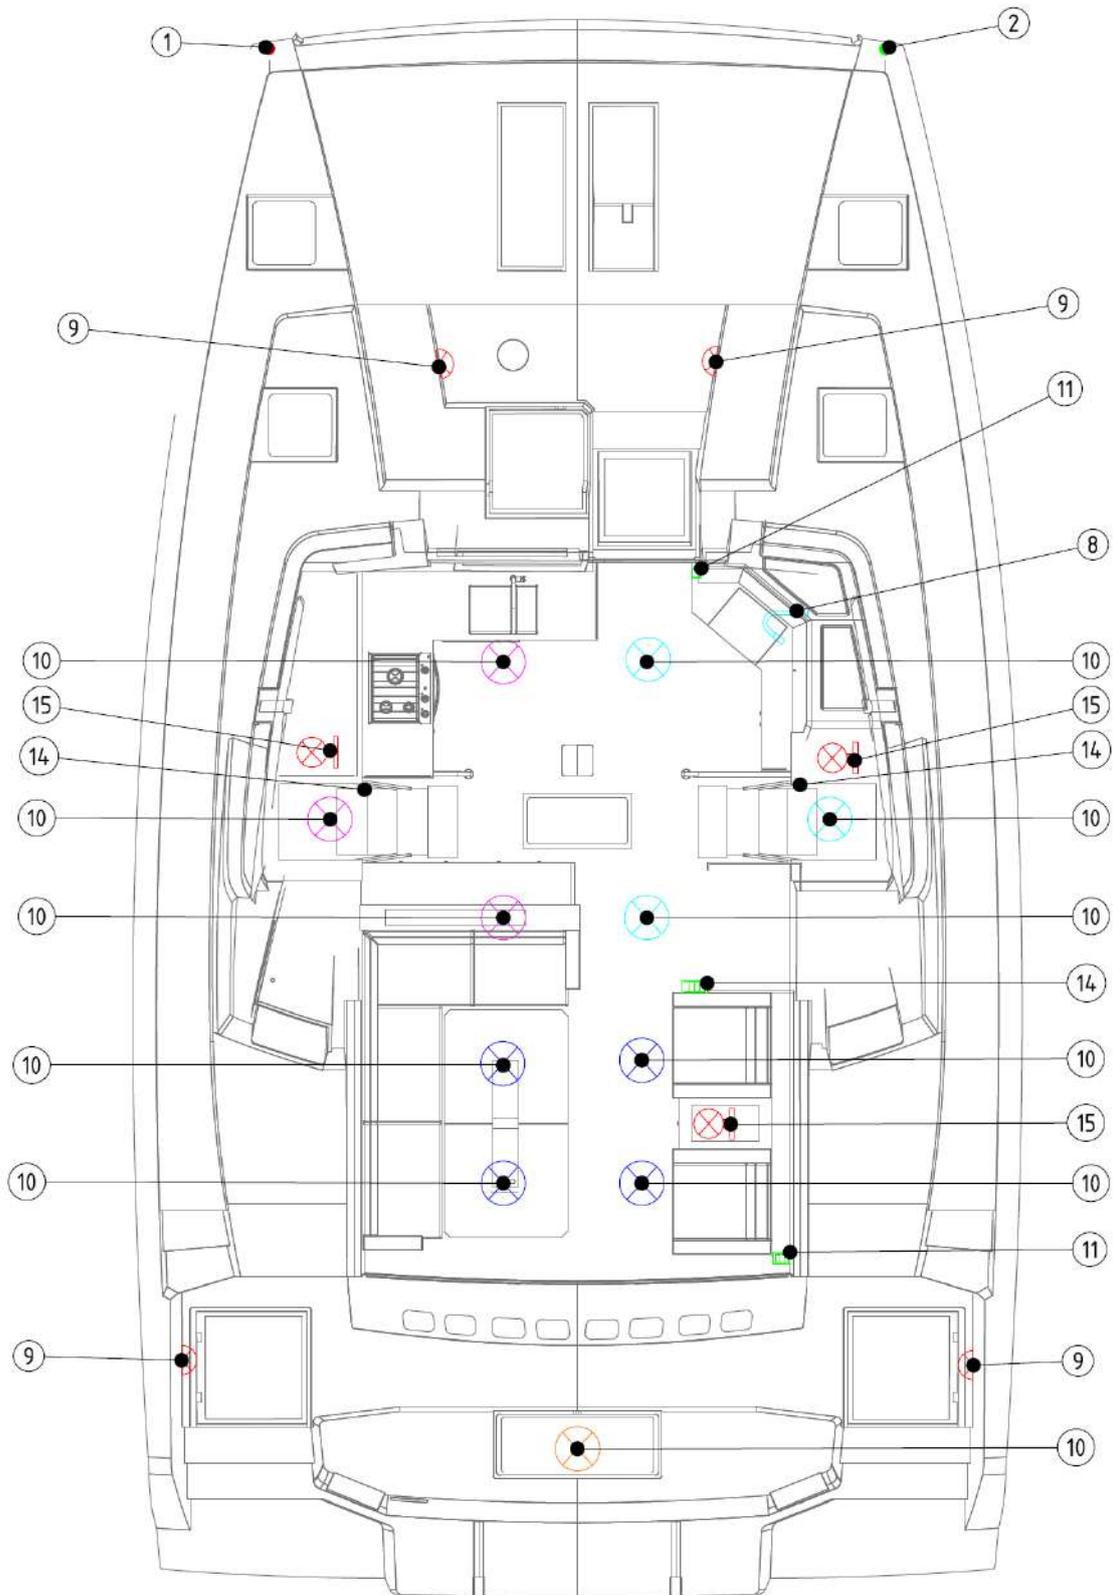


3-Cabin / 3-bathroom version

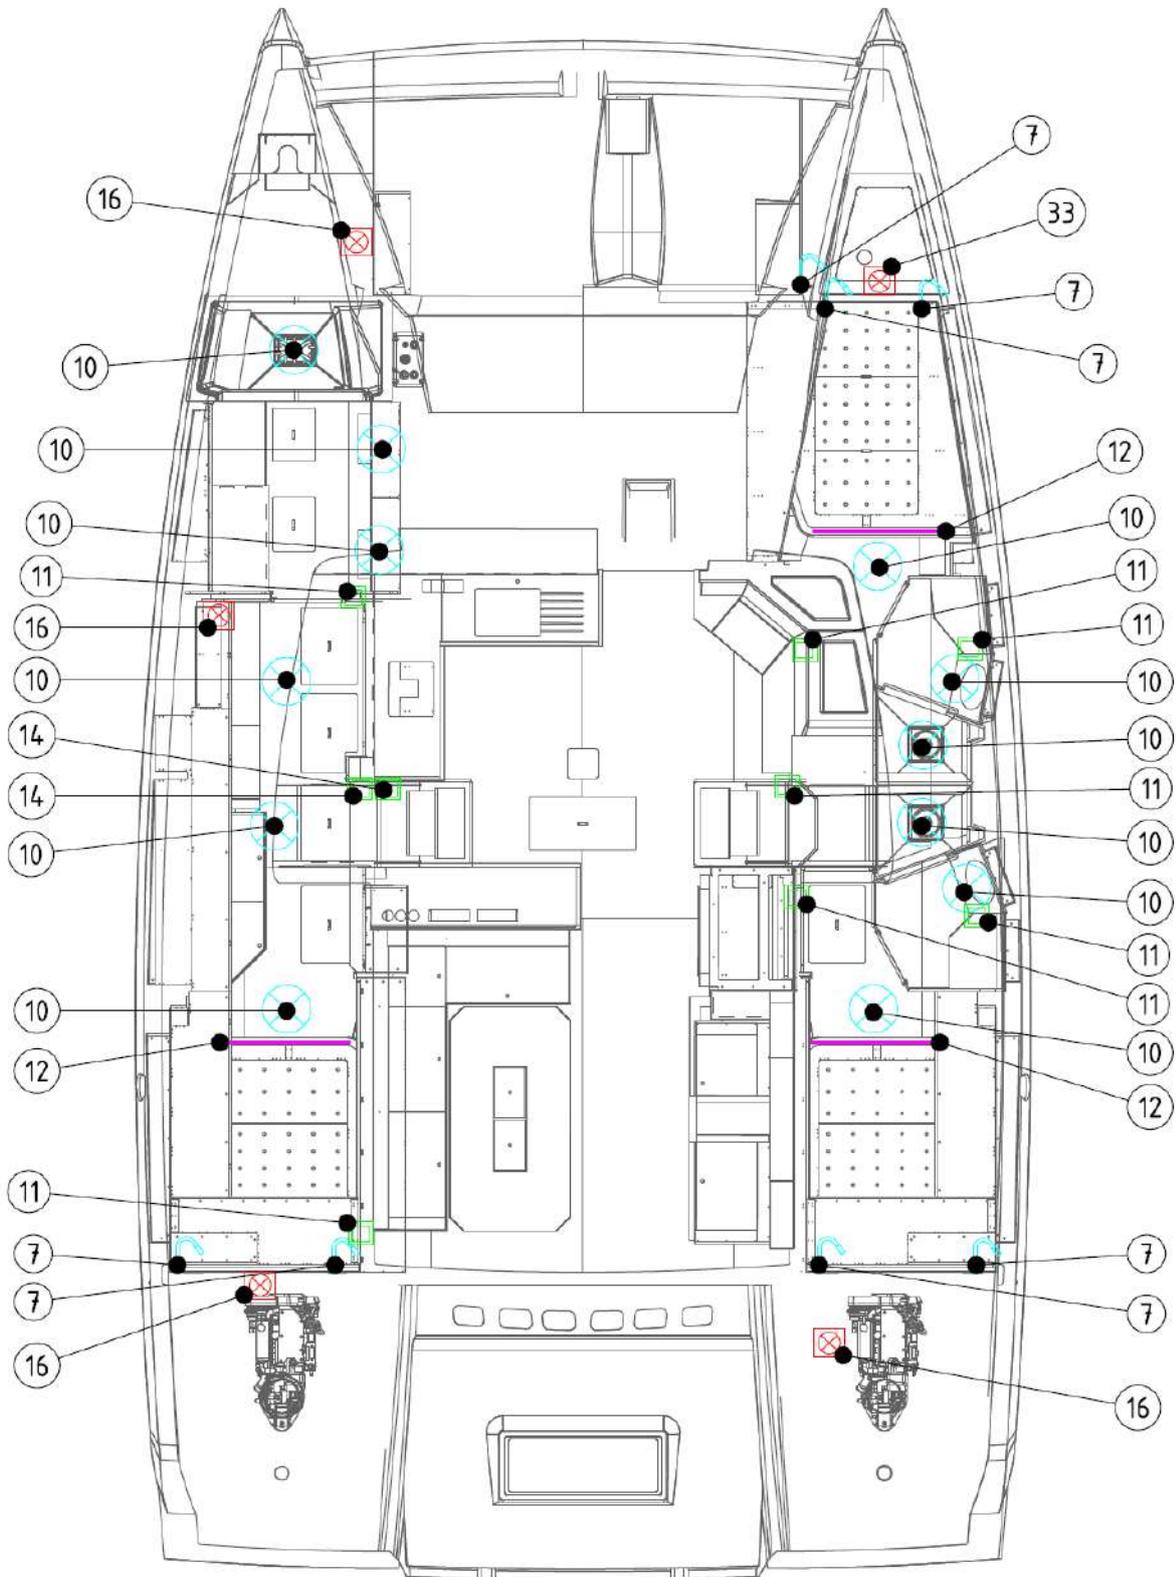


4-Cabin / 4-bathroom version

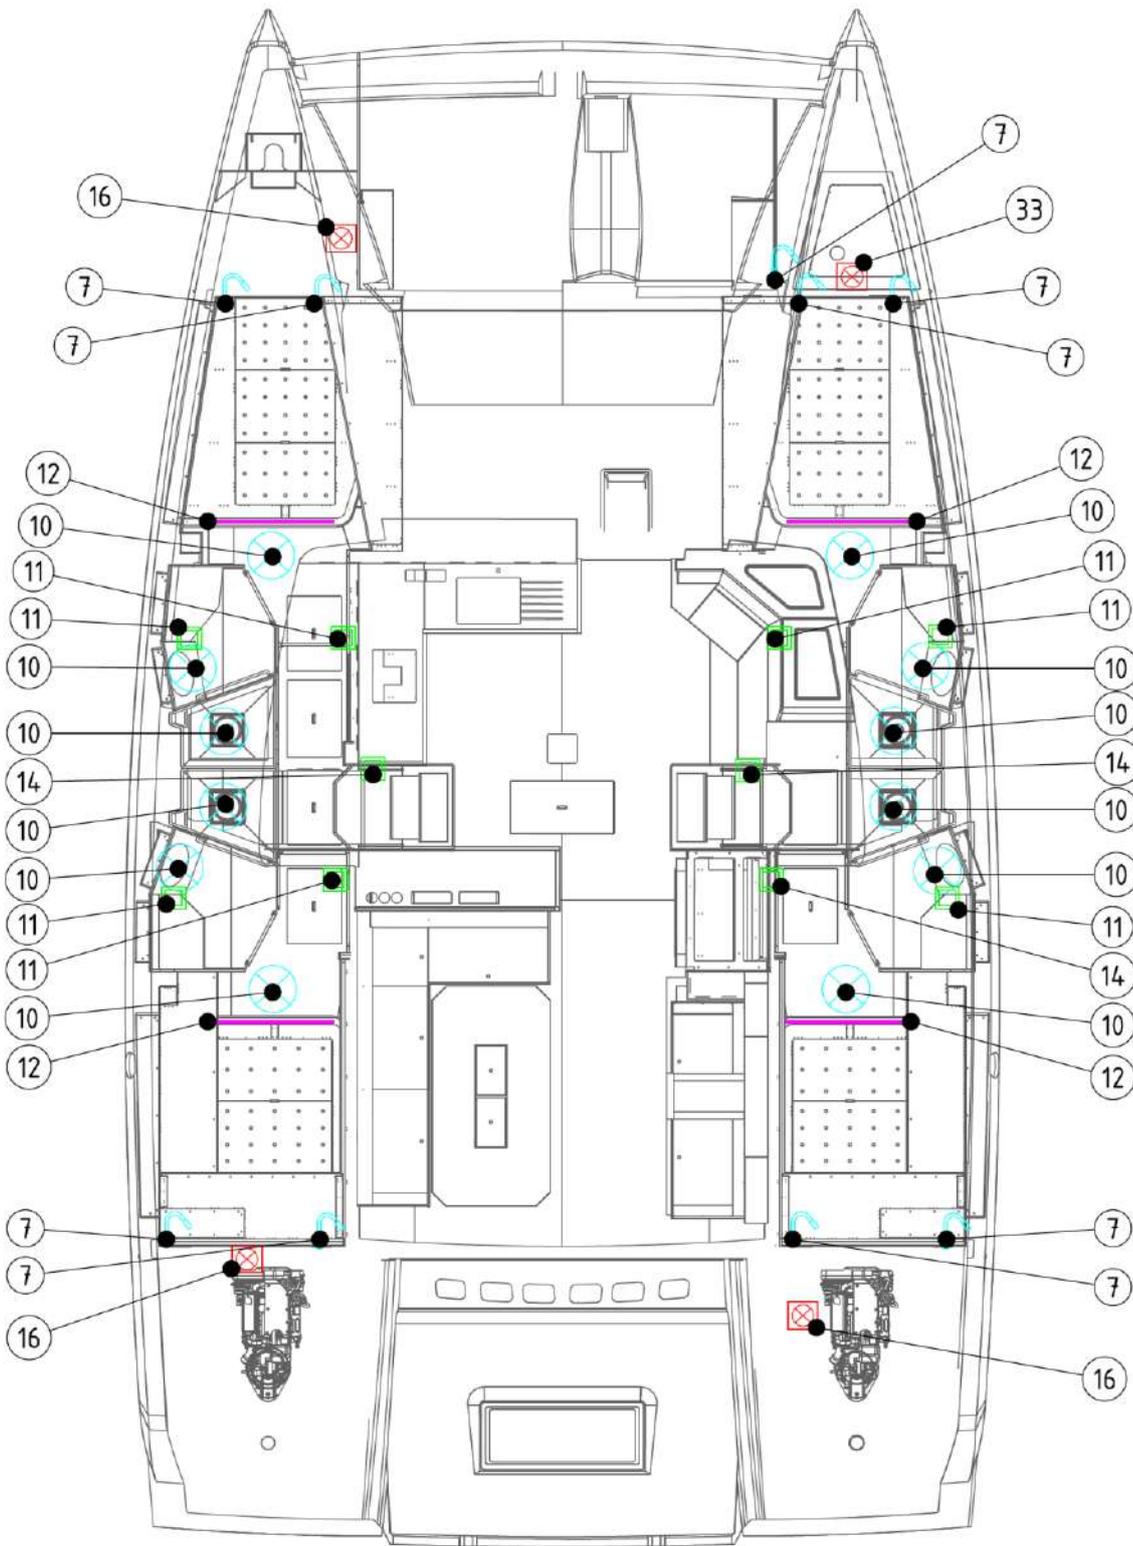

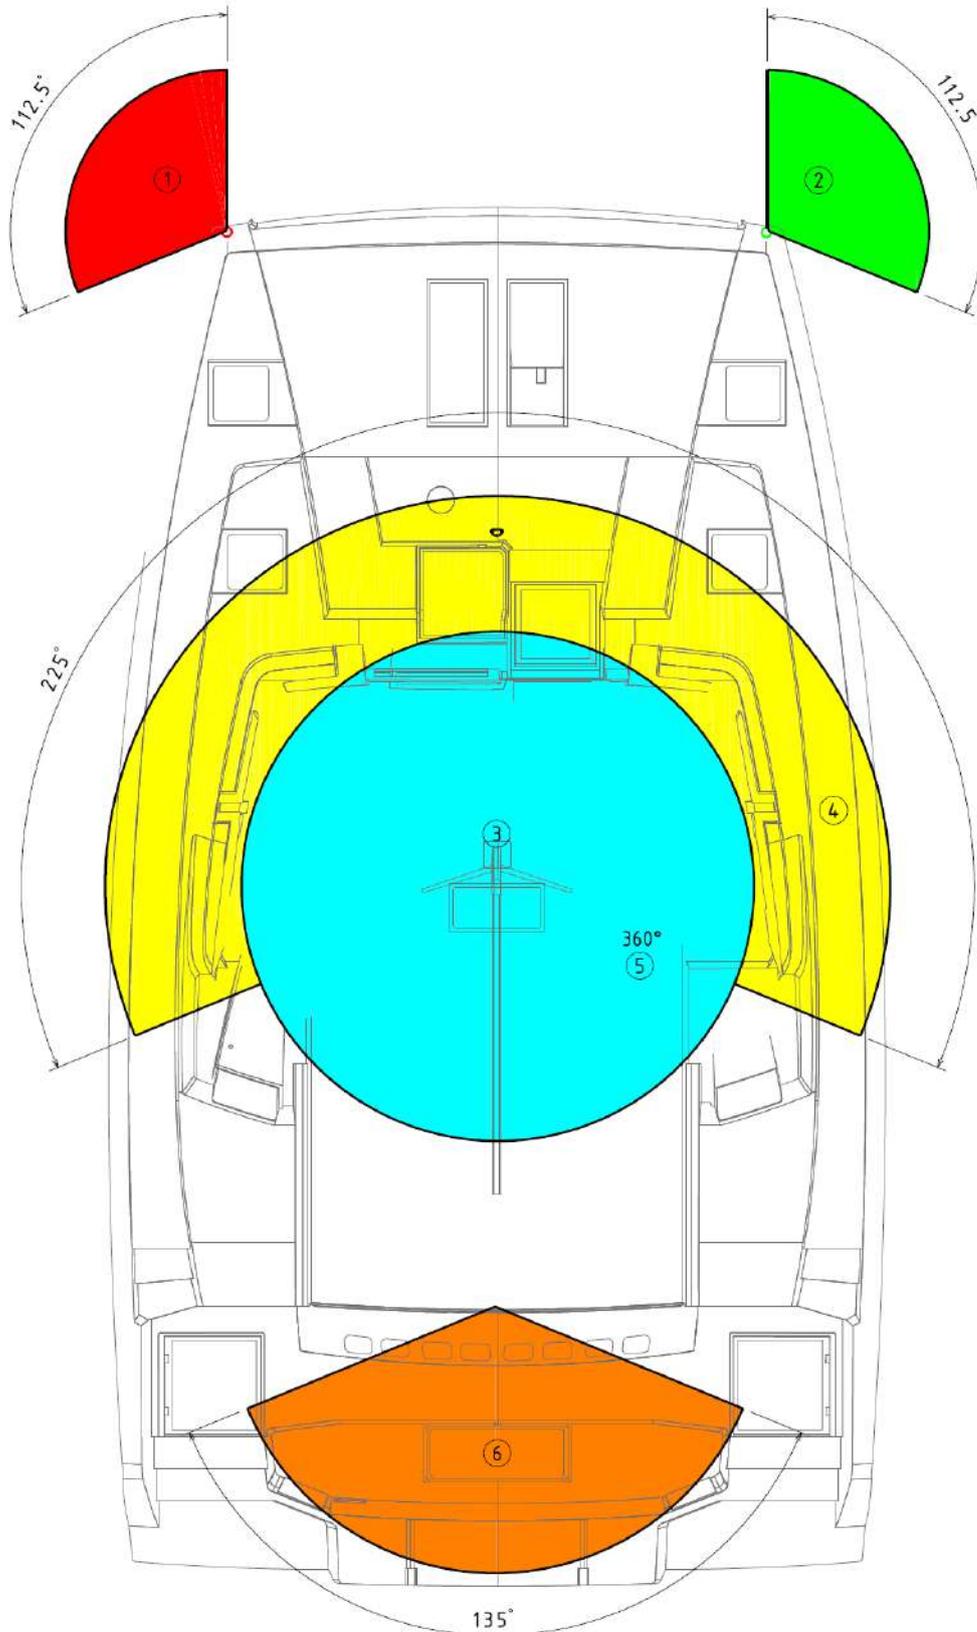

 IMPLANTATION 12 V PONT		 12 V ELECTRICAL INSTALLATION	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Feu de Navigation. Bd	1	Port navigation light
2	Feu de Navigation. Td	2	Starboard navigation light
3	Projecteur de pont	3	Decklight
4	Feu de hune	4	Steaming light
5	Feu de mouillage	5	Anchor light
6	Feu de poupe	6	Sternlight
7	Liseuse	7	Reading light
8	Lecteur de carte	8	Chart plotter
9	Eclairage étanche Led	9	Waterproof LED light
10	Plafonniers encastré led	10	Recessed LED ceiling lights
11	Interrupteur simple	11	Light switch
12	Bandeau led indirect	12	Indirect LED striplight
13	Spot encastré courtoisie	13	Recessed courtesy spotlight
14	Interrupteur va et vient	14	Two-way light switch
15	Lampe de bureau	15	Desk lamp
16	Appliques murales	16	Wall-lights
17	Boitier éclairage sans fils	17	Wireless lighting unit
18	Lampe Théodora (Pack élégance*)	18	Théodora Lamp (Elegance Pack)
 Attention		 Warning	
 Risque de choc électrique		 Electrical shock hazard	
 Risque d'incendie		 Fire hazard	
 Consulter le manuel du propriétaire		 Read owner's manual	


Steering system

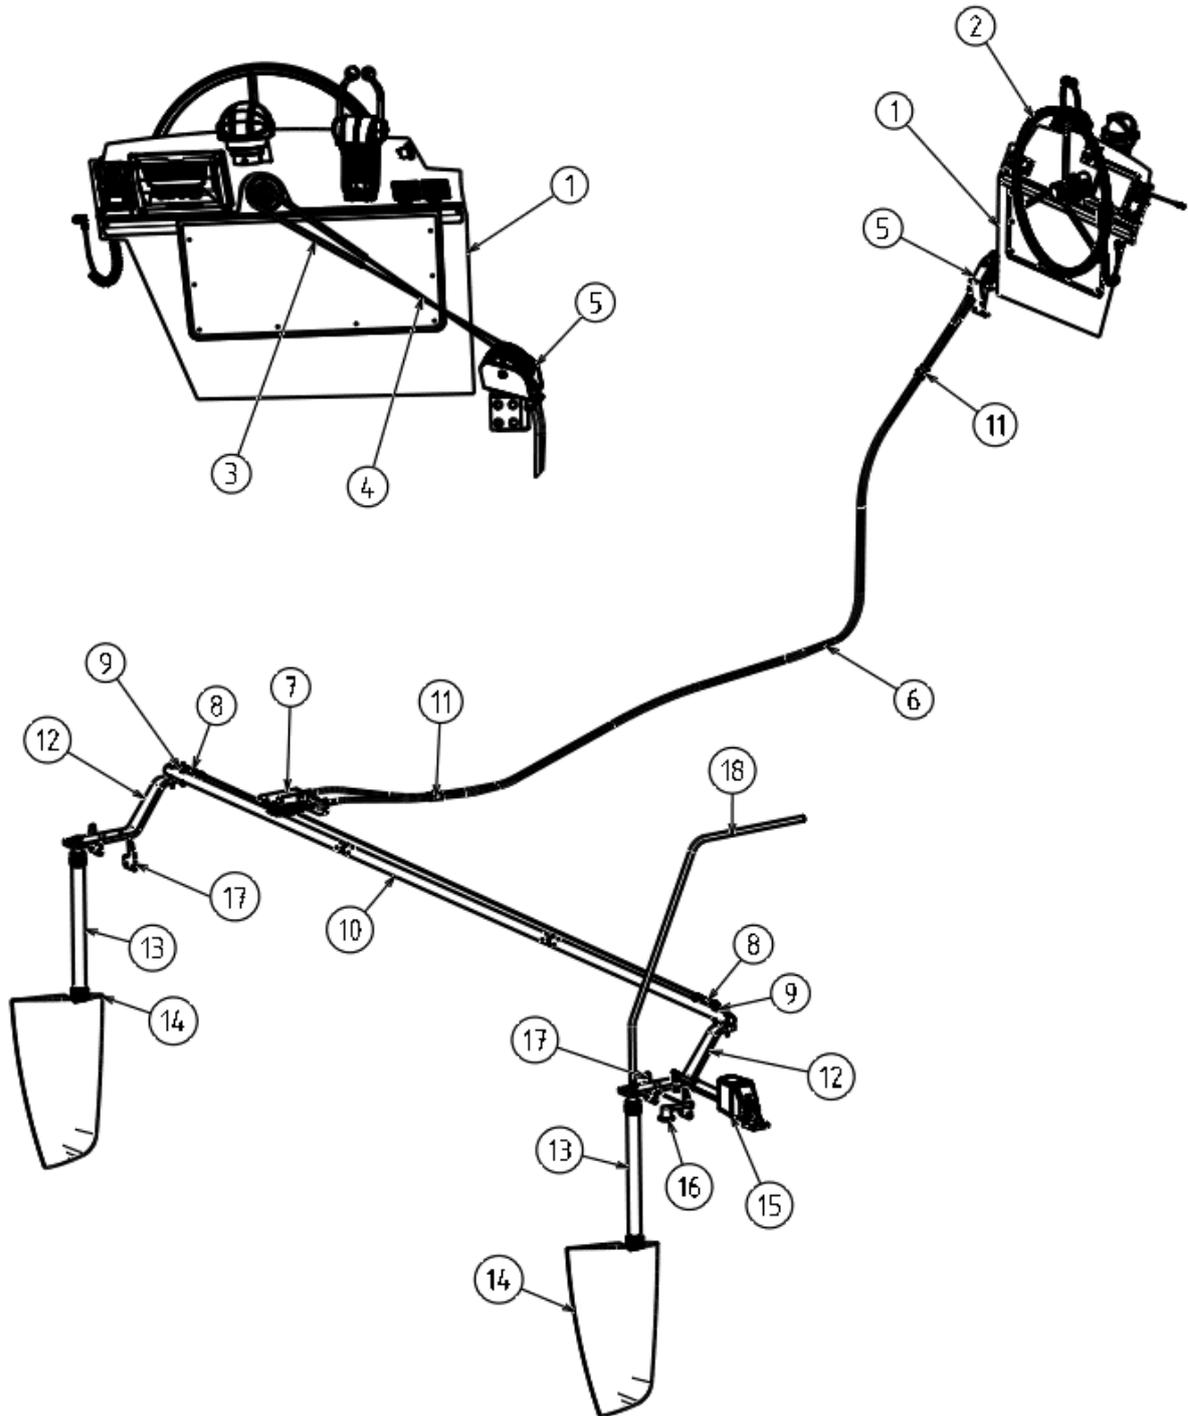


 SYSTEME DE GOUVERNAIL		 STEERING SYSTEM	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Console de barre	1	Helm console
2	Barre à Roue + moyeu	2	Steering wheel + hub
3	Chaîne	3	Chain
4	Câbles	4	Cables
5	Support + poulie	5	Bracket + pulley
6	Gaines	6	Conduits
7	Support + poulie	7	Bracket + pulley
8	Ridoir	8	Turnbuckle
9	Ecrou à œil	9	Eyebolt
10	Barre de liaison	10	Linking bar
11	Graisneur	11	Grease nipple
12	Bras de mèche	12	Steering quadrant
13	Tube de jaumière	13	Rudder tube
14	Safran	14	Rudder blade
15	Pilote auto	15	Autopilot
16	Rudder	16	Helm angle indicator
17	Butée de barre	17	End stops
18	Barre franche de secours	18	Emergency tiller

Gas system

Nacelle Open version

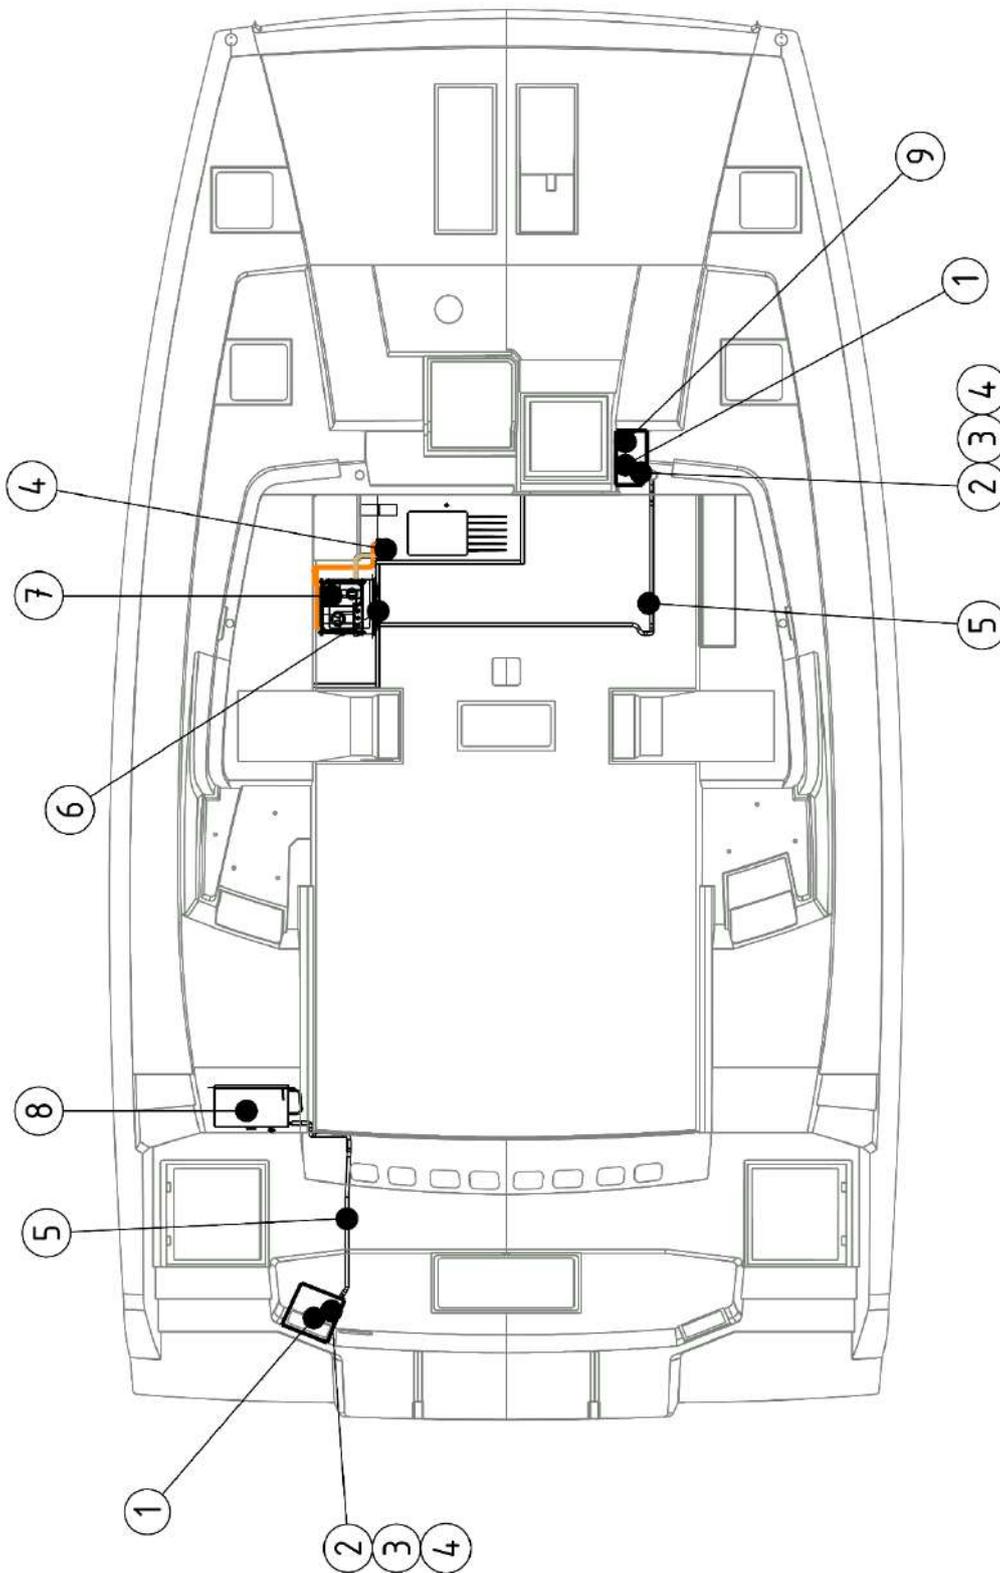

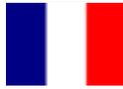
 CIRCUIT GAZ		 GAS SYSTEM	
Rep.	Désignation	Ref.	Description
1	Bouteille de gaz 13kg	1	13kg Gas bottle
2	Détendeur	2	Regulator
3	Détecteur de fuite	3	Leak detector
4	Robinets circuits	4	Gas system taps
5	Gaine PVC et tuyau cuivre Ø8	5	PVC conduit & Ø8 copper pipe
6	Four	6	Oven
7	Plaque de cuisson	7	Hob
8	Option PLANCHA	8	BBQ grill option
9	Option bouteille gaz N°2	9	Optional 2nd gas bottle

CAUTION

For information on the operating pressures, refer to the regulator manufacturer's manual

Ventilation of the saloon is provided by:


- The forward cockpit window
- The forward cockpit door
- Lateral sliding windows
- Aft pivoting door

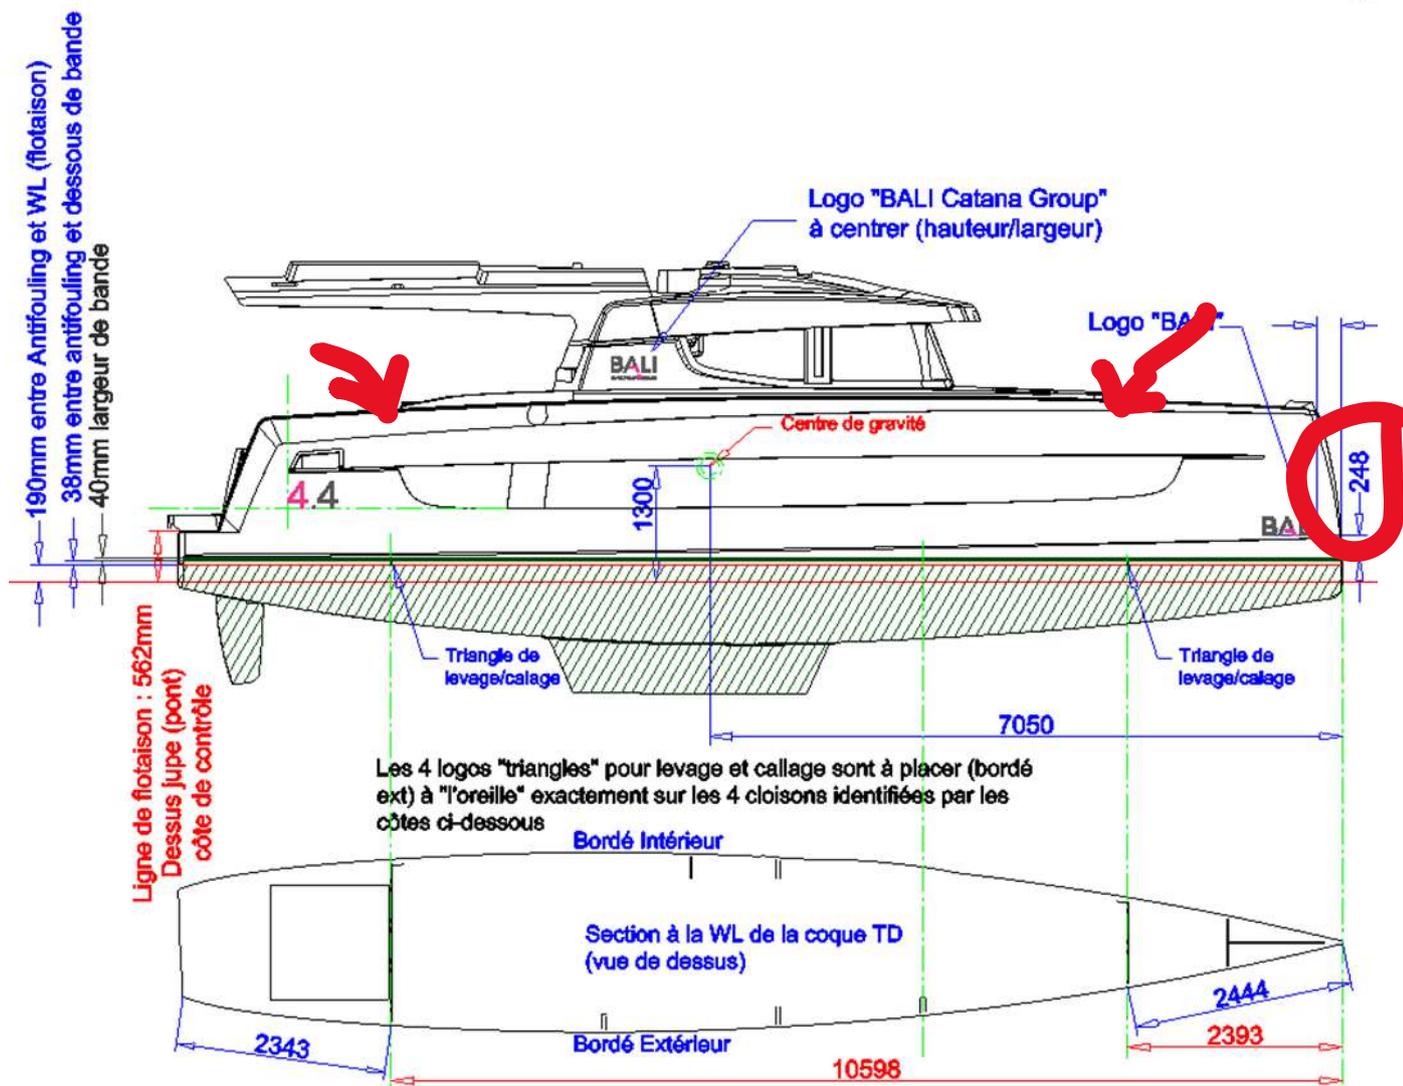

 PLAN DE GRUTAGE		 LIFTING DIAGRAM	
<i>Rep.</i>	<i>Désignation</i>	<i>Rep.</i>	<i>Description</i>
	<p>Point de levage ou de calage</p> <p>Voir repère en forme de triangle au-dessus de la bande déco de flottaison</p> <p>  </p> <p> Déplacement condition légère Mlc 13600 kg Maître bau 7,40 m Tirant d'eau 1,25 m </p>		<p>Lifting or chocking points</p> <p>See triangle-shaped markers above the decorative stripe at the waterline</p> <p>  </p> <p> Lightship displacement Mlc 13,600 kg Maximum beam 7.40 m Draft 1.25 m </p>

Cette page est blanche intentionnellement

This page intentionally left blank

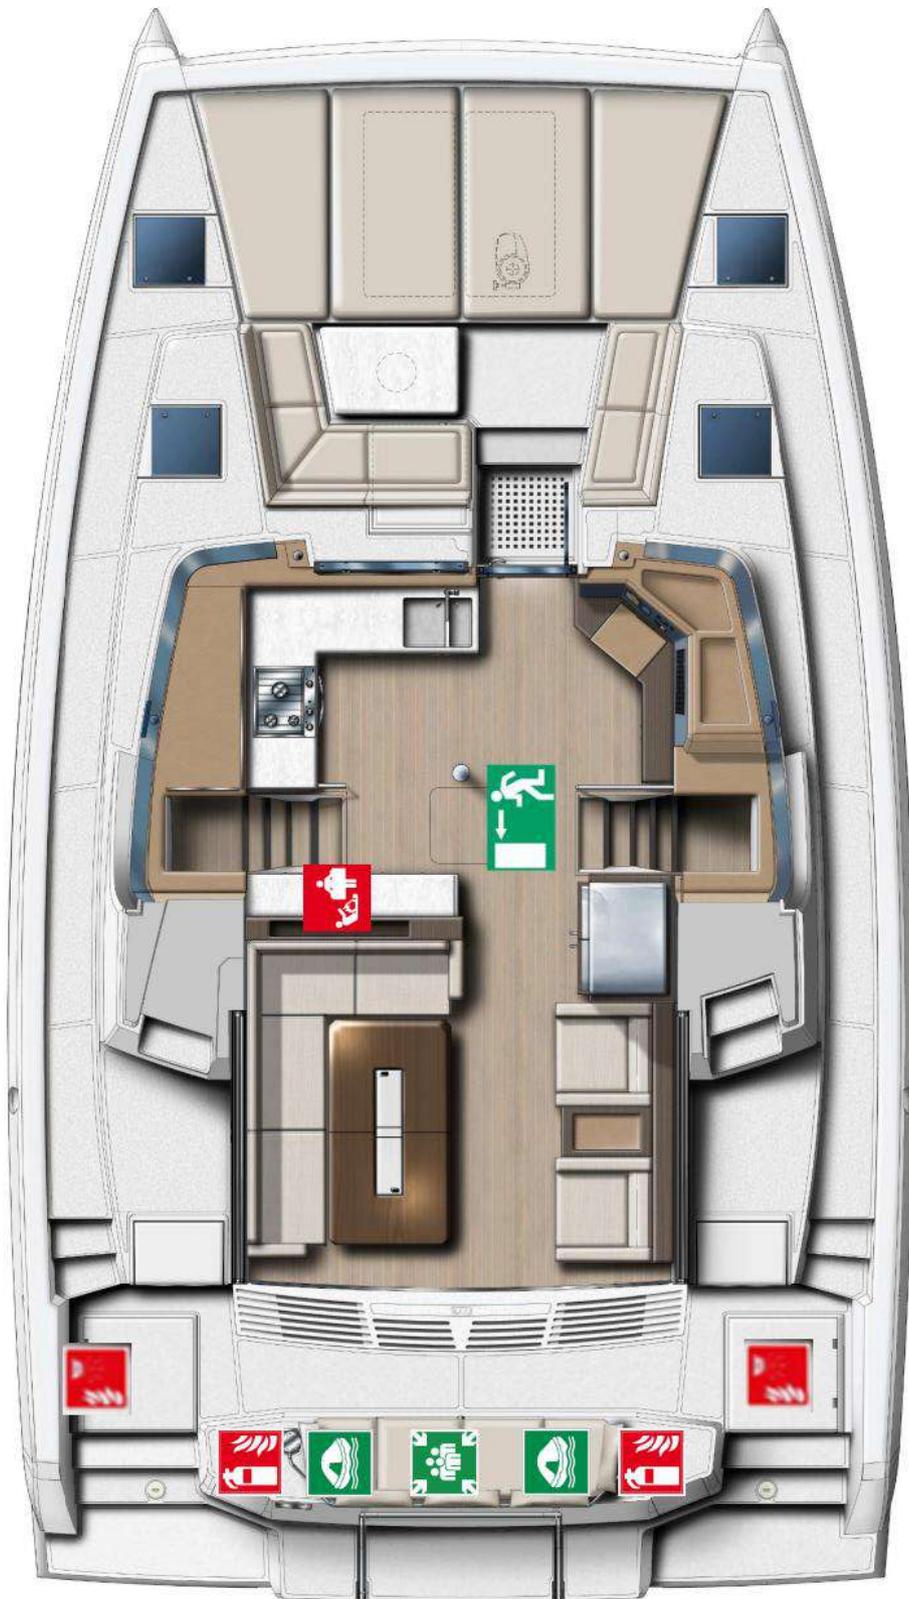

Evacuation plan 4-cabin symmetrical version



Fire detection system installation in the nacelle: ● and the hulls: ●



 EVACUATION DU NAVIRE		 ABANDONING SHIP	
Rep.	Désignation	Ref.	Description
	Extincteur auto fixe comp. moteur BD 10A/68B Extincteur auto fixe comp. moteur TD 10A/68B Emplacements préconisés pour les extincteurs Cabine propriétaire BD: Capacité 5A/34B Cabine AR TD: Capacité 5A/34B Cabine AR BD: Capacité 5A/34B Cabine AV TD: Capacité 5A/34B Cabine AV BD: Capacité 5A/34B Cuisine: Capacité 5A/34B Près des accès câ le moteur: Capacité 5A/34B utilisable en toute position Détecteurs incendie		Auto extinguisher port engine 10A/68B Auto extinguisher stbd engine 10A/68B Recommended places for extinguishers Owner's cabin Port: Capacity 5A/34B Stbd aft cabin: Capacity 5A/34B Port aft cabin: Capacity 5A/34B Stbd forecabin: Capacity 5A/34B Port forecabin: Capacity 5A/34B Galley: Capacity 5A/34B Close to the engine compartments: Capacity 5A/34B usable in any position Fire detectors



Couverture de survie

Fire blanket



Extincteur automatique

Automatic Extinguisher



Extincteur

Extinguisher



Trappe de survie

Escape hatch/crew cabin evacuation



Radeau de survie

Liferaft



Point de rassemblement


Assembly station




Direction d'évacuation


Direction of evacuation


3-Cabin / 3-bathroom version

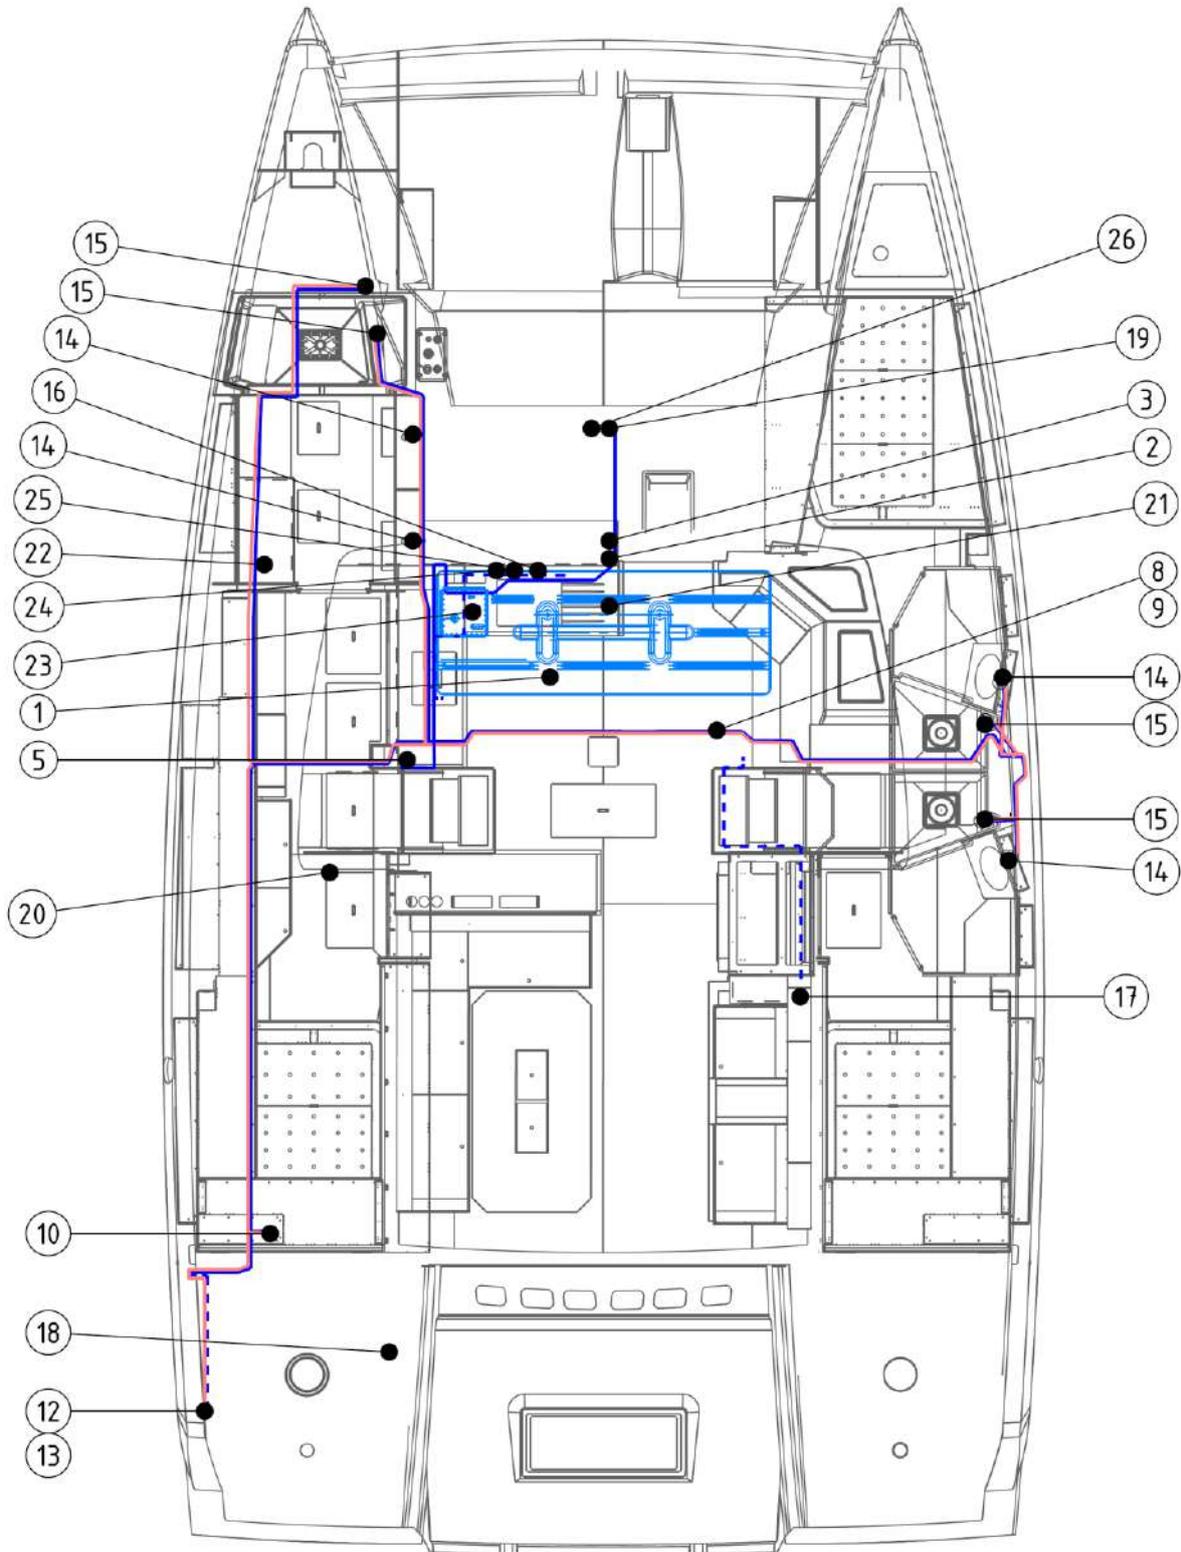

4-Cabin / 4-bathroom version

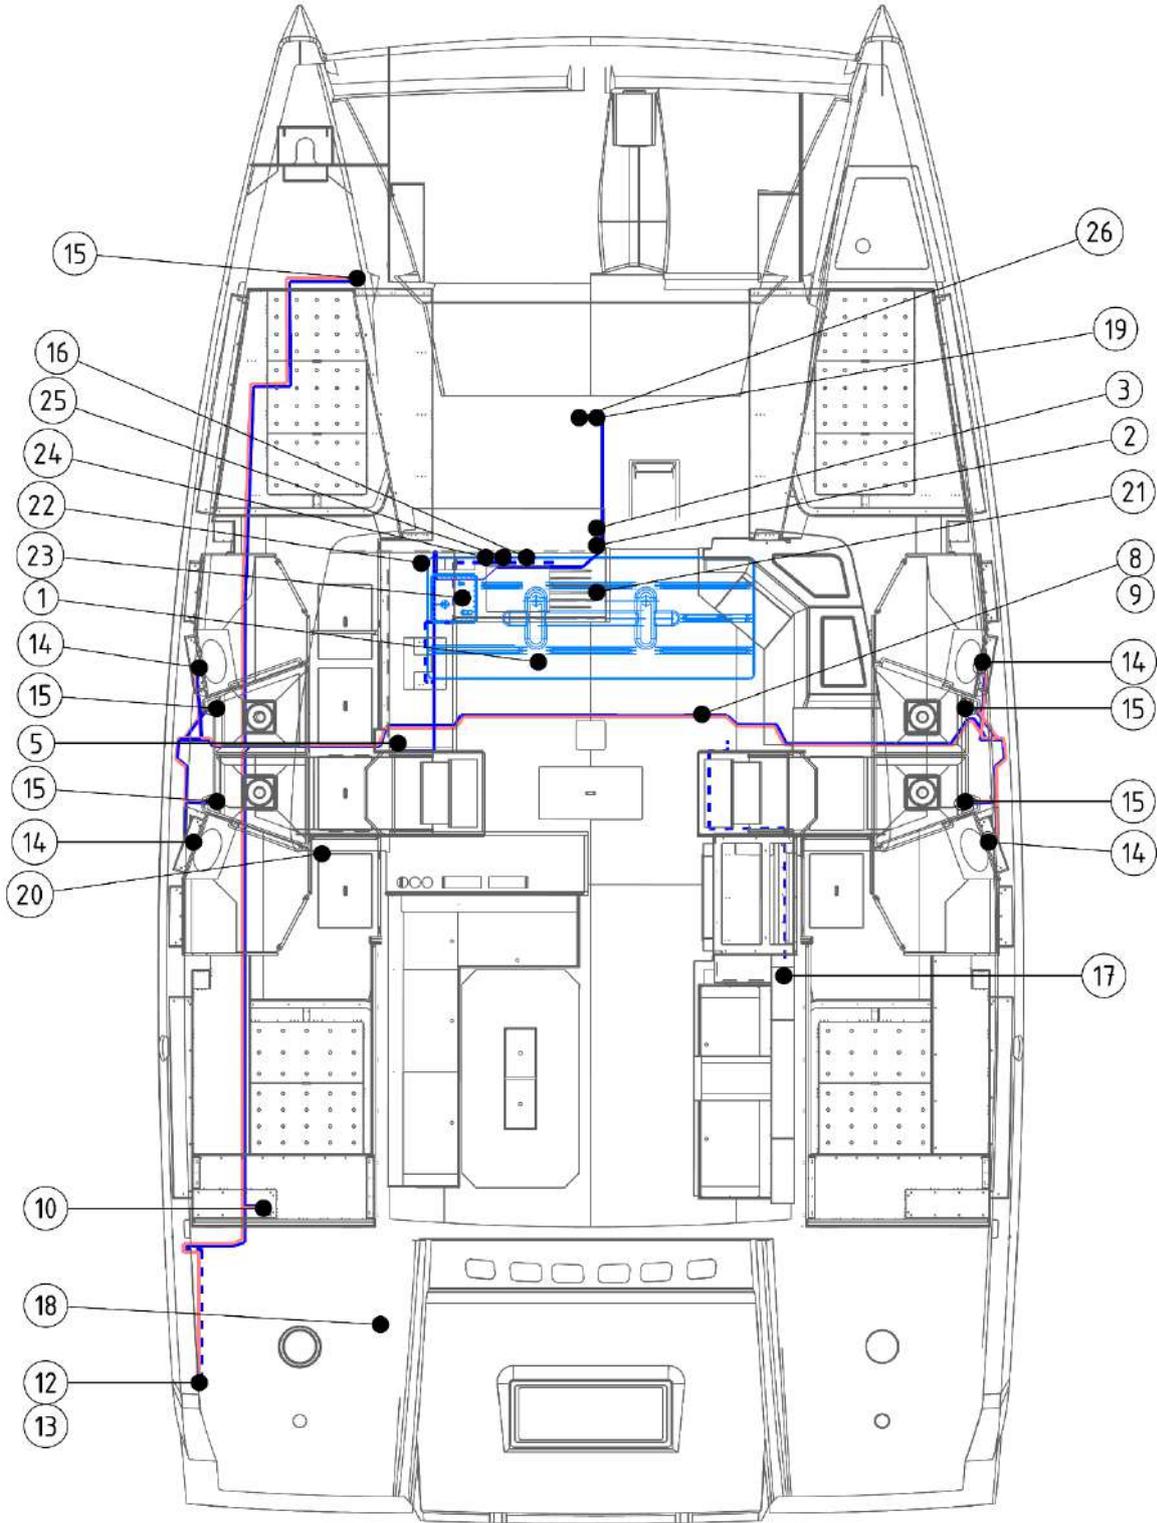

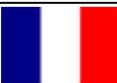 CIRCUIT EAU DOUCE		 FRESHWATER SYSTEM	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Réservoir 400L	1	Water tank 400 L
2	Nable / Tuyau de remplissage Ø38mm	2	Filler neck / Tube Ø 38mm
3	Event	3	Vent
4	Tuyau d'évent Ø16 mm	4	Vent pipe Ø 16mm
5	Groupe d'eau sous pression	5	Fresh water pressure pump
6	Tuyau eau froide Ø20	6	Cold water circulation pipe Ø20
7	Tuyau chaude Ø20	7	Hot water circulation pipe Ø20
8	Tuyau eau froide Ø12	8	Hot water circulation pipe Ø12
9	Tuyau eau chaude Ø12	9	Cold water circulation pipe Ø12
10	Chauffe-eau 60L	10	Water heater 60 L
11		11	
12	Douchette de pont	12	Deck shower
13	Vanne douchette de pont	13	Deck shower tap
14	Mitigeur Lavabo SDB	14	Bathroom washbasin mixer tap
15	Mitigeur douche	15	Shower mixer tap
16	Mitigeur cuisine	16	Galley mixer tap
17	Frigo américain	17	American-style refrigerator
18	Dessalinisateur (OPTION)	18	Watermaker (OPTION)
19	Sortie pont EDM (OPTION)	19	Seawater outlet deck (OPTION)
20	Pompe EDM (OPTION)	20	Seawater pump (OPTION)
21	Lave-vaisselle (OPTION)	21	Dishwasher (OPTION)
22	Lave-linge (OPTION)	22	Washing machine (OPTION)
23	Filtre à charbon (OPTION)	23	Carbon filter (OPTION)
24	Bec verseur eau douce (OPTION)	24	Freshwater spout (OPTION)
25	Bec verseur eau de mer (OPTION)	25	Seawater spout (OPTION)
26	Sortie pont eau douce (OPTION)	26	Freshwater outlet deck (OPTION)

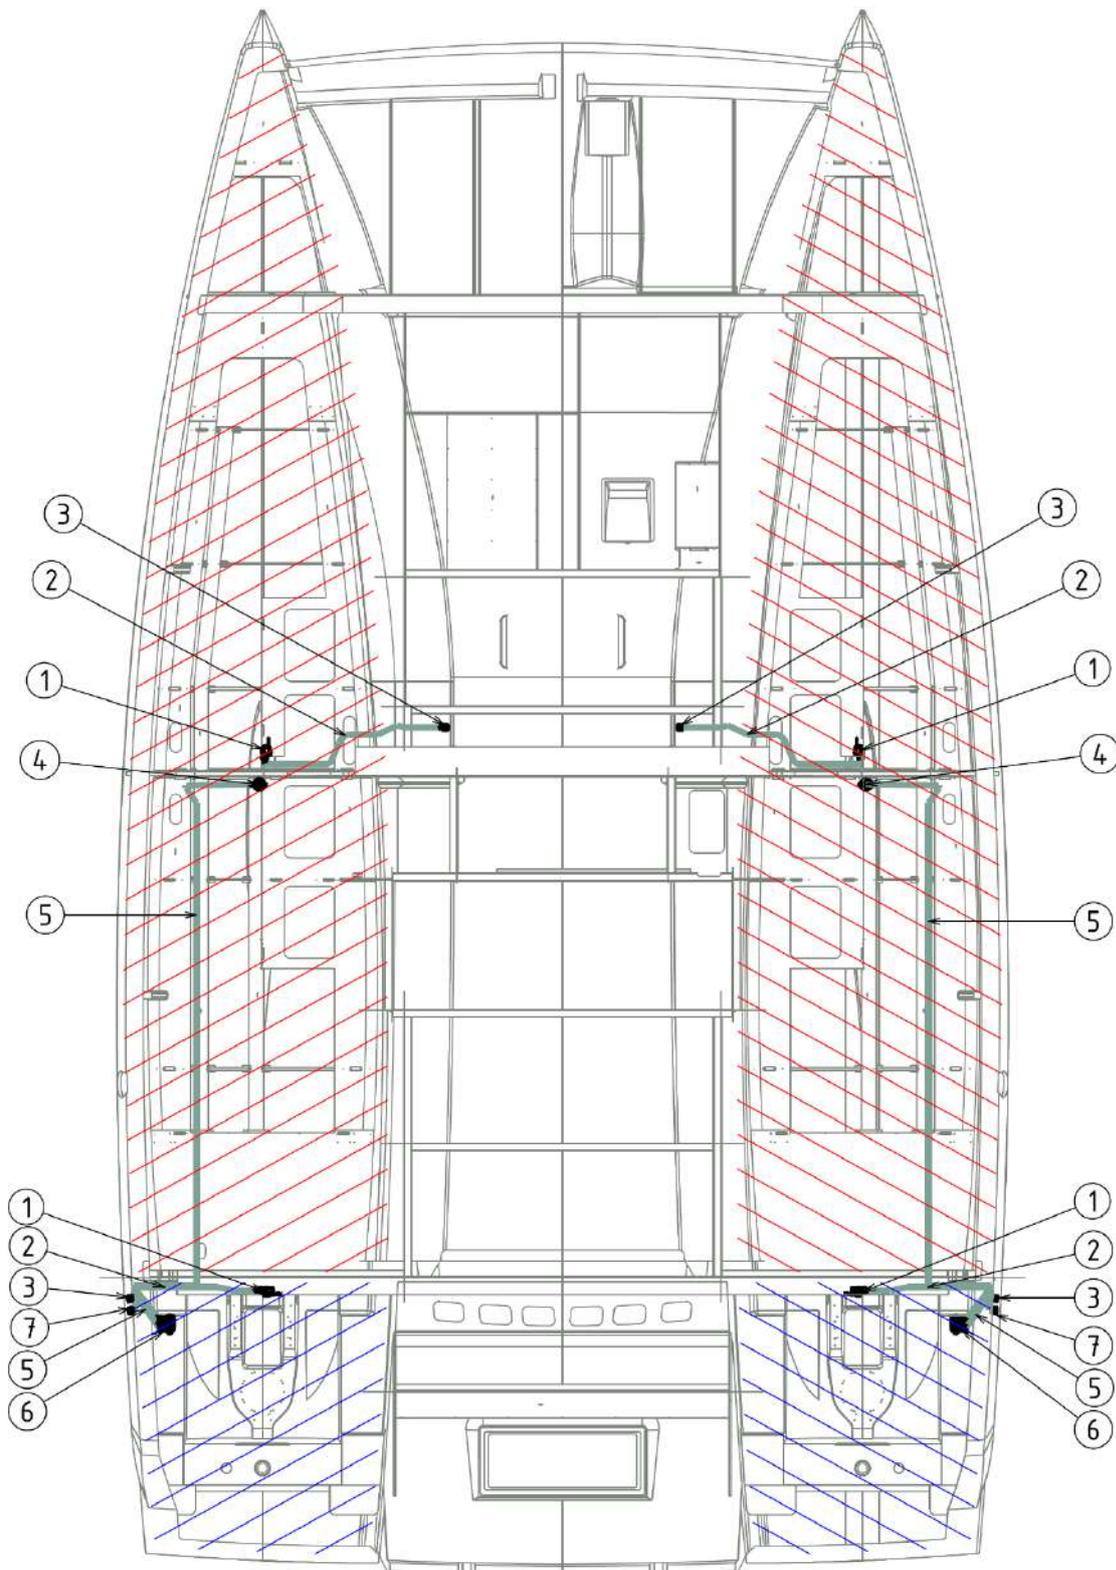


 CIRCUIT D'ASSECHEMENT		 BILGE PUMP SYSTEM	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Pompe de cale électrique	1	Electric bilge pump
2	Tuyaux de pompes électriques	2	Electric pump hoses
3	Passe coque refoulement pompe électrique	3	Electric pump through-hull outlet
4	Crépines de pompes manuelles	4	Manual bilge pump strainers
5	Tuyaux de pompes manuelles	5	Manual bilge pump hoses
6	Pompes manuelles	6	Manual bilge pumps
7	Passe coque de pompes manuelles	7	Manual pump through-hull outlet
Bleu	Zone cales moteurs	Blue	Engine compartment zones
Rouge	Zone flotteurs	Red	Float switch zones


Cette page est blanche intentionnellement

This page intentionally left blank

3-Cabin / 3-bathroom version

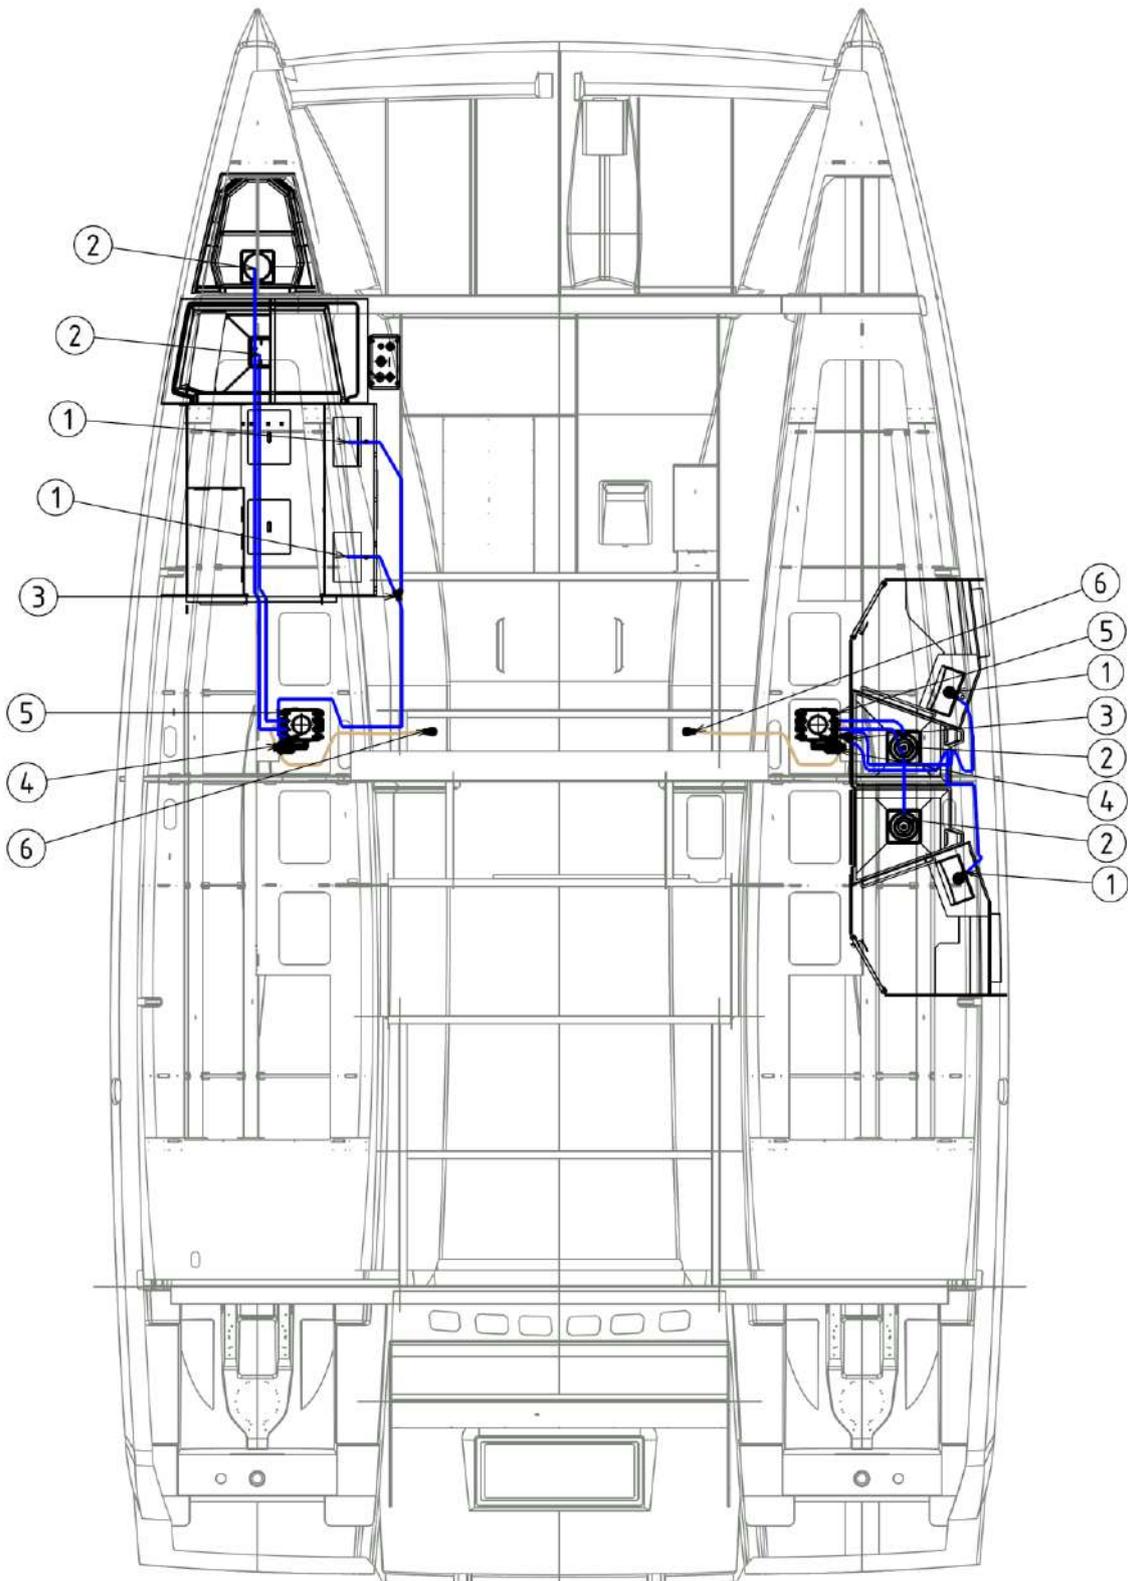

4-Cabin / 4-bathroom version

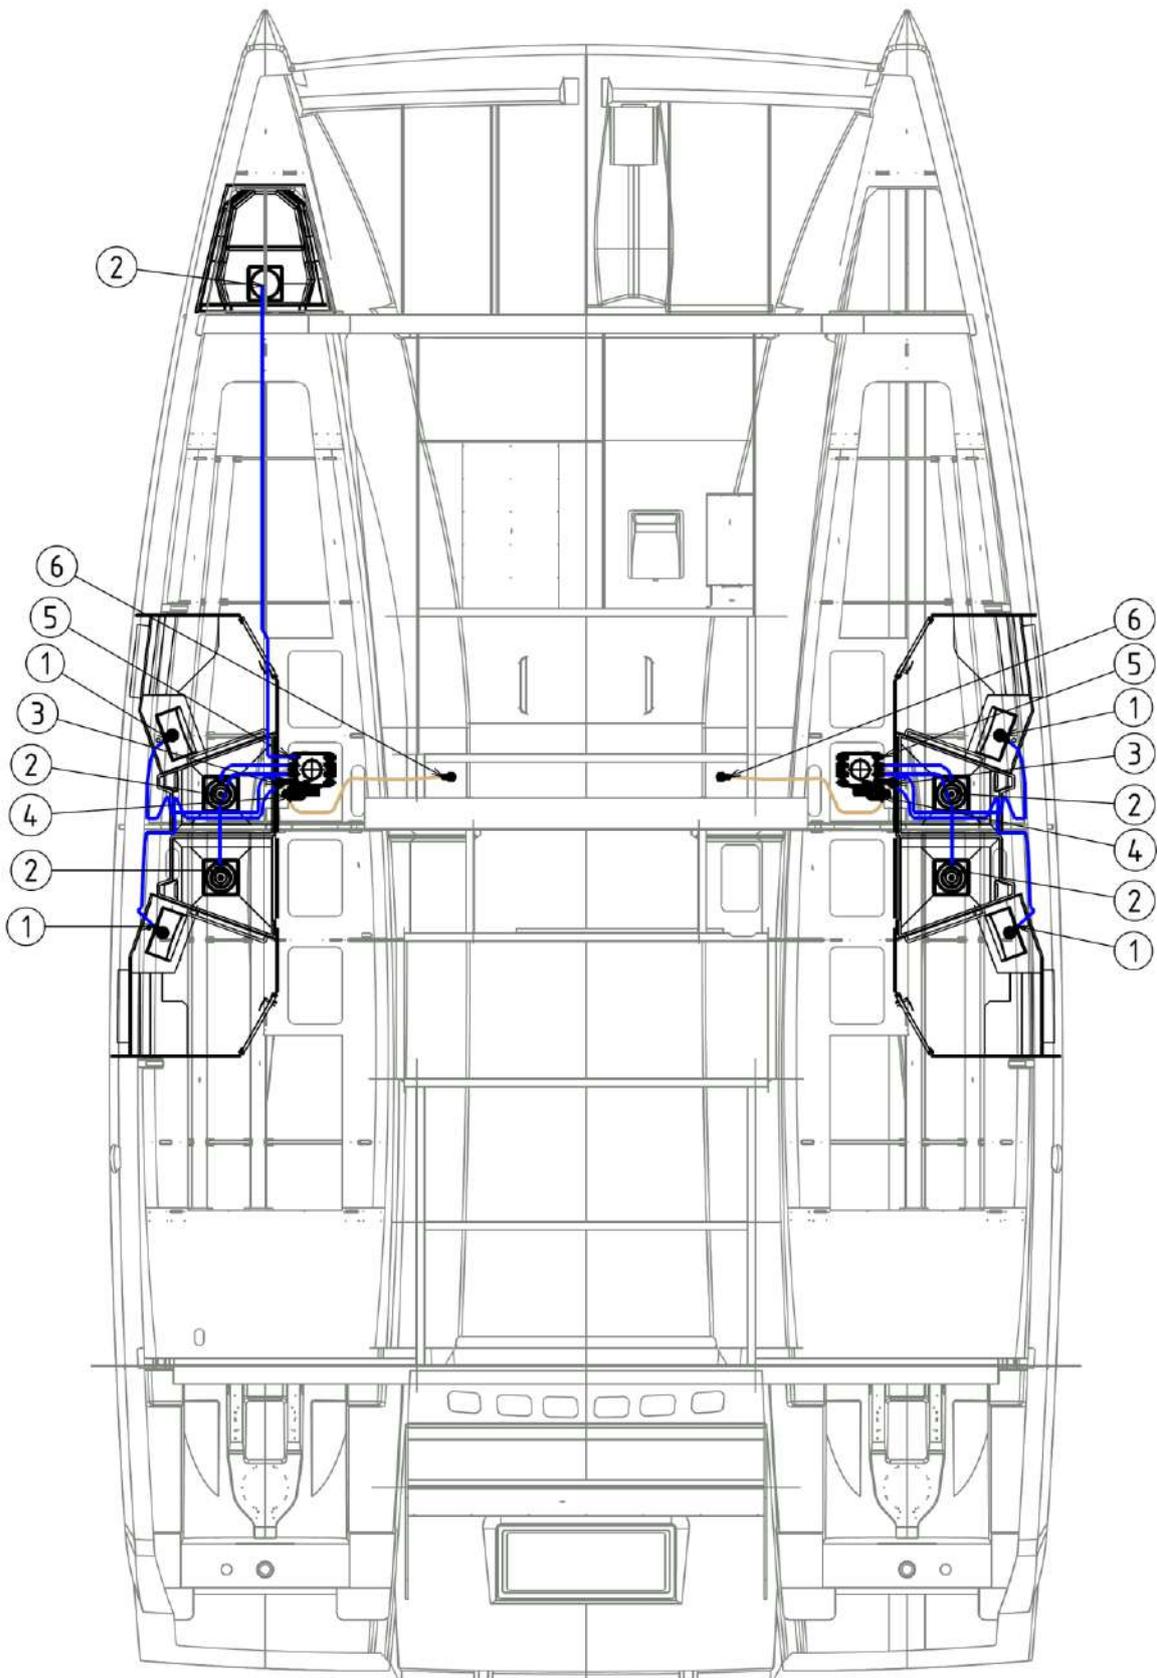


 CIRCUIT D'EAUX GRISES		 GREY WATER SYSTEM	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Bonde lavabo	1	Basin waste fitting
2	Bonde de douche Vanne ¼ de tour	2	Shower waste fitting ¼-turn valve
3	Raccord Y Ø25/Ø25/Ø25	3	Y-connecter Ø25/Ø25/Ø25
4	Pompe d'évacuation eaux usées	4	Grey water discharge pump
5	Cuve 8L eaux usées	5	8L Grey water tank
6	Passe coque 1"	6	1" Through-hull fitting


Cette page est blanche intentionnellement

This page intentionally left blank


3- Cabin / 3-bathroom version

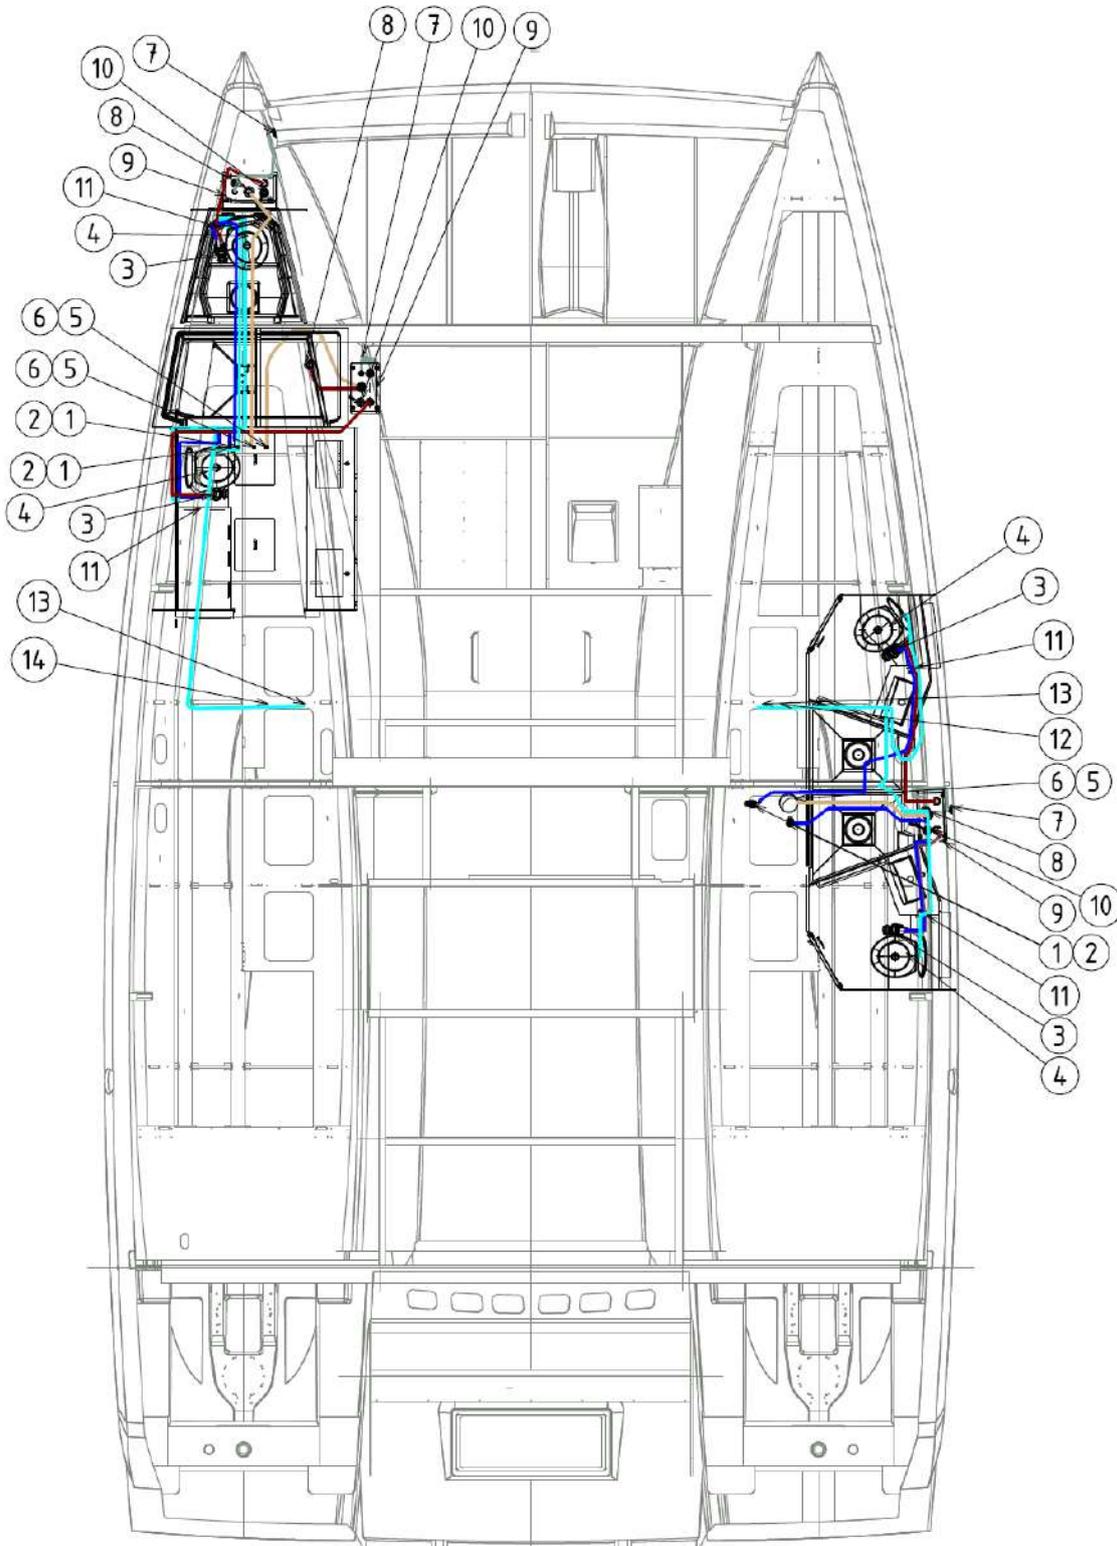


4-Cabin / 4-bathroom version

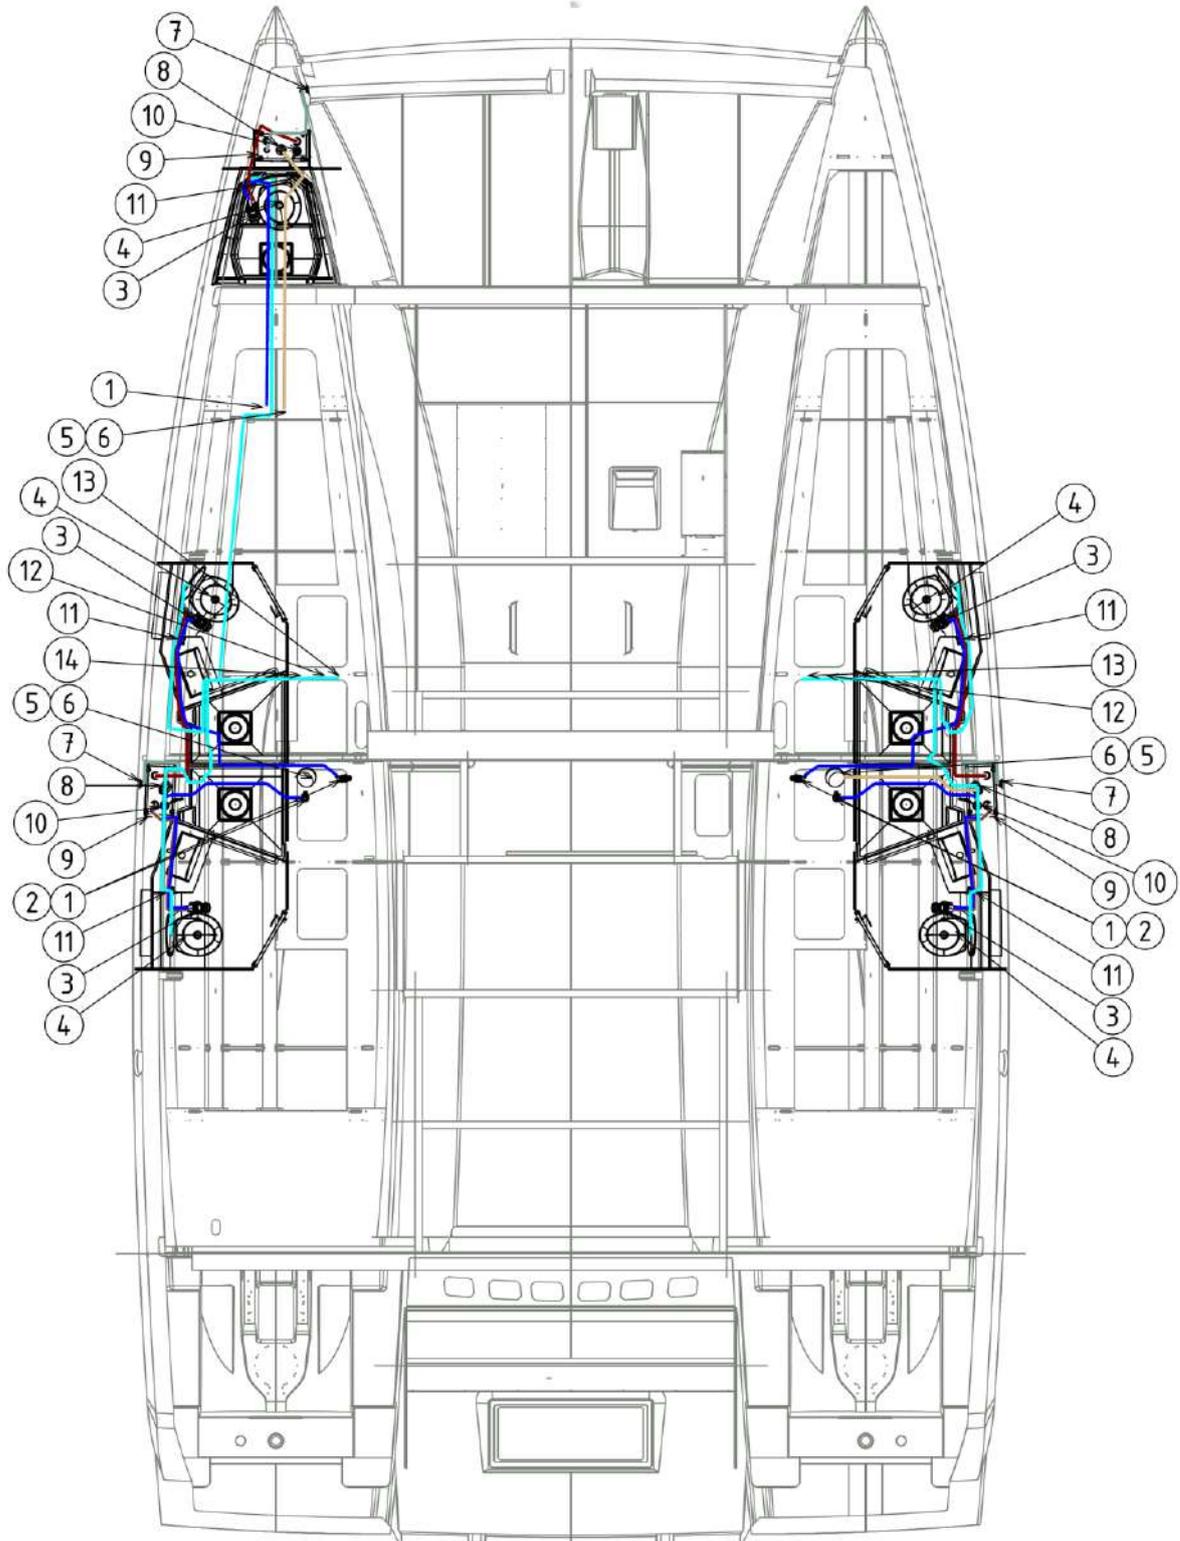

 CIRCUIT EAUX NOIRES		 HOLDING TANK	
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Passe coque 3/4"	1	3/4" Through-hull skin fitting
2	Vanne cadenassable 1/4 de tour 3/4"	2	3/4" padlockable 1/4-turn seacock
3	Pompe à main toilette	3	Toilet hand pump
4	Moteur toilette électrique (OPTION)	4	Electric toilet pump (option)
5	Vanne cadenassable 1/4 de tour 1"1/2	5	1 1/2" padlockable 1/4-turn seacock
6	Passe coque 1"1/2	6	1 1/2" Through-hull skin fitting
7	Event holding tank	7	Holding tank vent
8	Nable de pont, vidange holding tank	8	Deck filler, holding tank discharge
9	Holding tank 55L	9	55 L holding tank
10	Jauge	10	Gauge

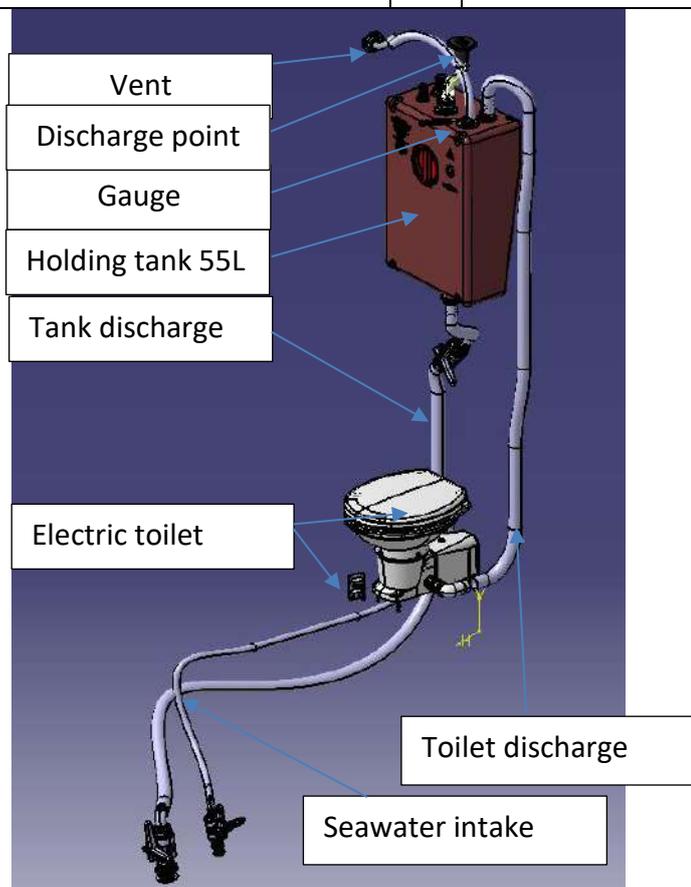



Diesel tank filling

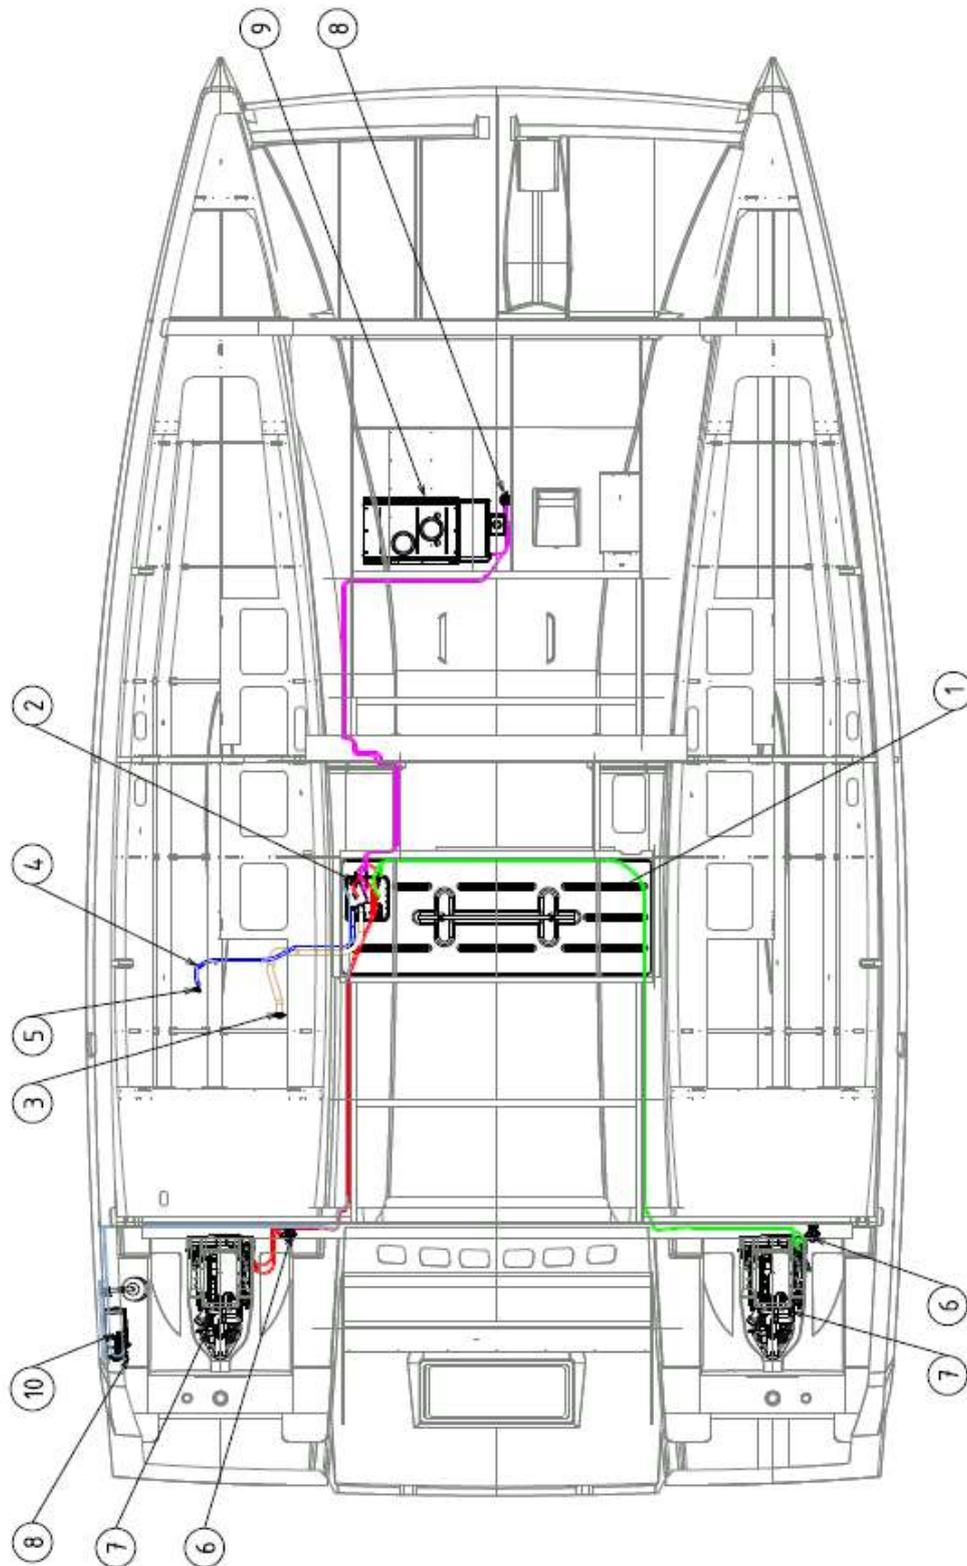


**CIRCUIT GASOIL****FUEL SYSTEM**

<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Réservoir gasoil	1	Diesel Tank
2	Vanne de coupure gasoil	2	Diesel shut-off valve
3	Nable de remplissage gasoil Ø50	3	Diesel filler neck Ø50mm
4	Clapet anti-débordement	4	Anti-overflow flap
5	Event réservoir gasoil Ø16	5	Diesel tank vent Ø16mm
6	Filtre décanteur pompe d'amorçage	6	Priming pump + separator
7	Moteur	7	Engine
8	Filtre gasoil	8	Fuel filter
9	Générateur	9	Generator
10	Chaudière	10	Heater

Watermaker option

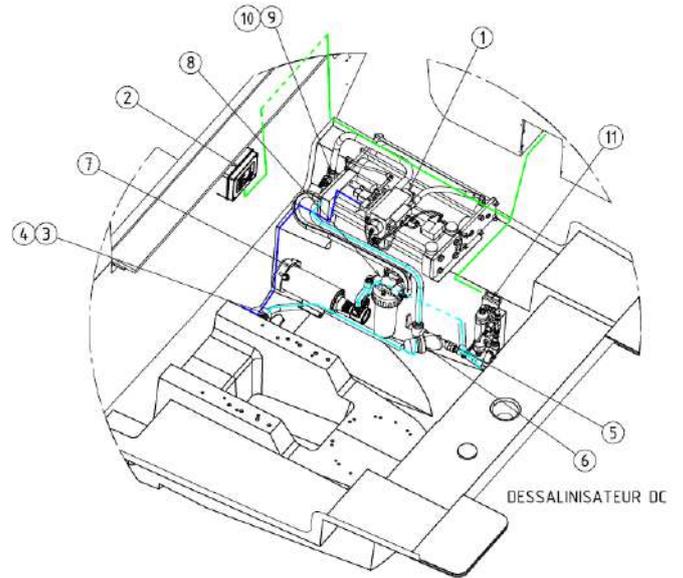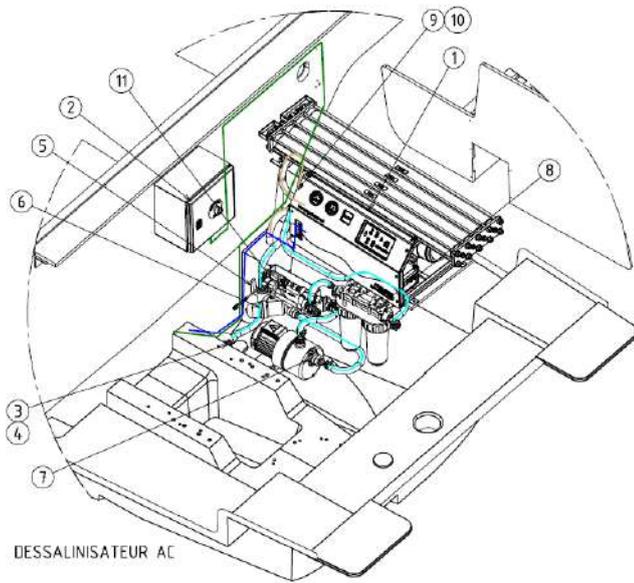

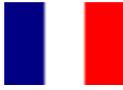
 DESSALINISATEUR			
<i>Rep.</i>	<i>Désignation</i>	<i>Ref.</i>	<i>Description</i>
1	Dessalinisateur	1	Watermaker
2	Boitier de commandes	2	Control box
3	Passe coque crépine eau de mer	3	Through-hull seawater strainer
4	Vanne ¼ de tour 3/4"	4	¾" ¼-turn seacock
5	Vanne 3 voies aspiration rinçage	5	3-way valve suction/rinsing
6	Filtre tamis	6	Strainer filter
7	Pompe basse pression	7	Low-pressure pump
8	Filtre cartouche 5µm	8	5µm filter cartridge
9	Vanne 3 voies rejet rinçage	9	3-way rinsing reject outlet
10	Passe coque rejet saumure	10	Reject brine outlet

Cette page est blanche intentionnellement


This page intentionally left blank

Seawater system

3-Cabin / 3-bathroom version

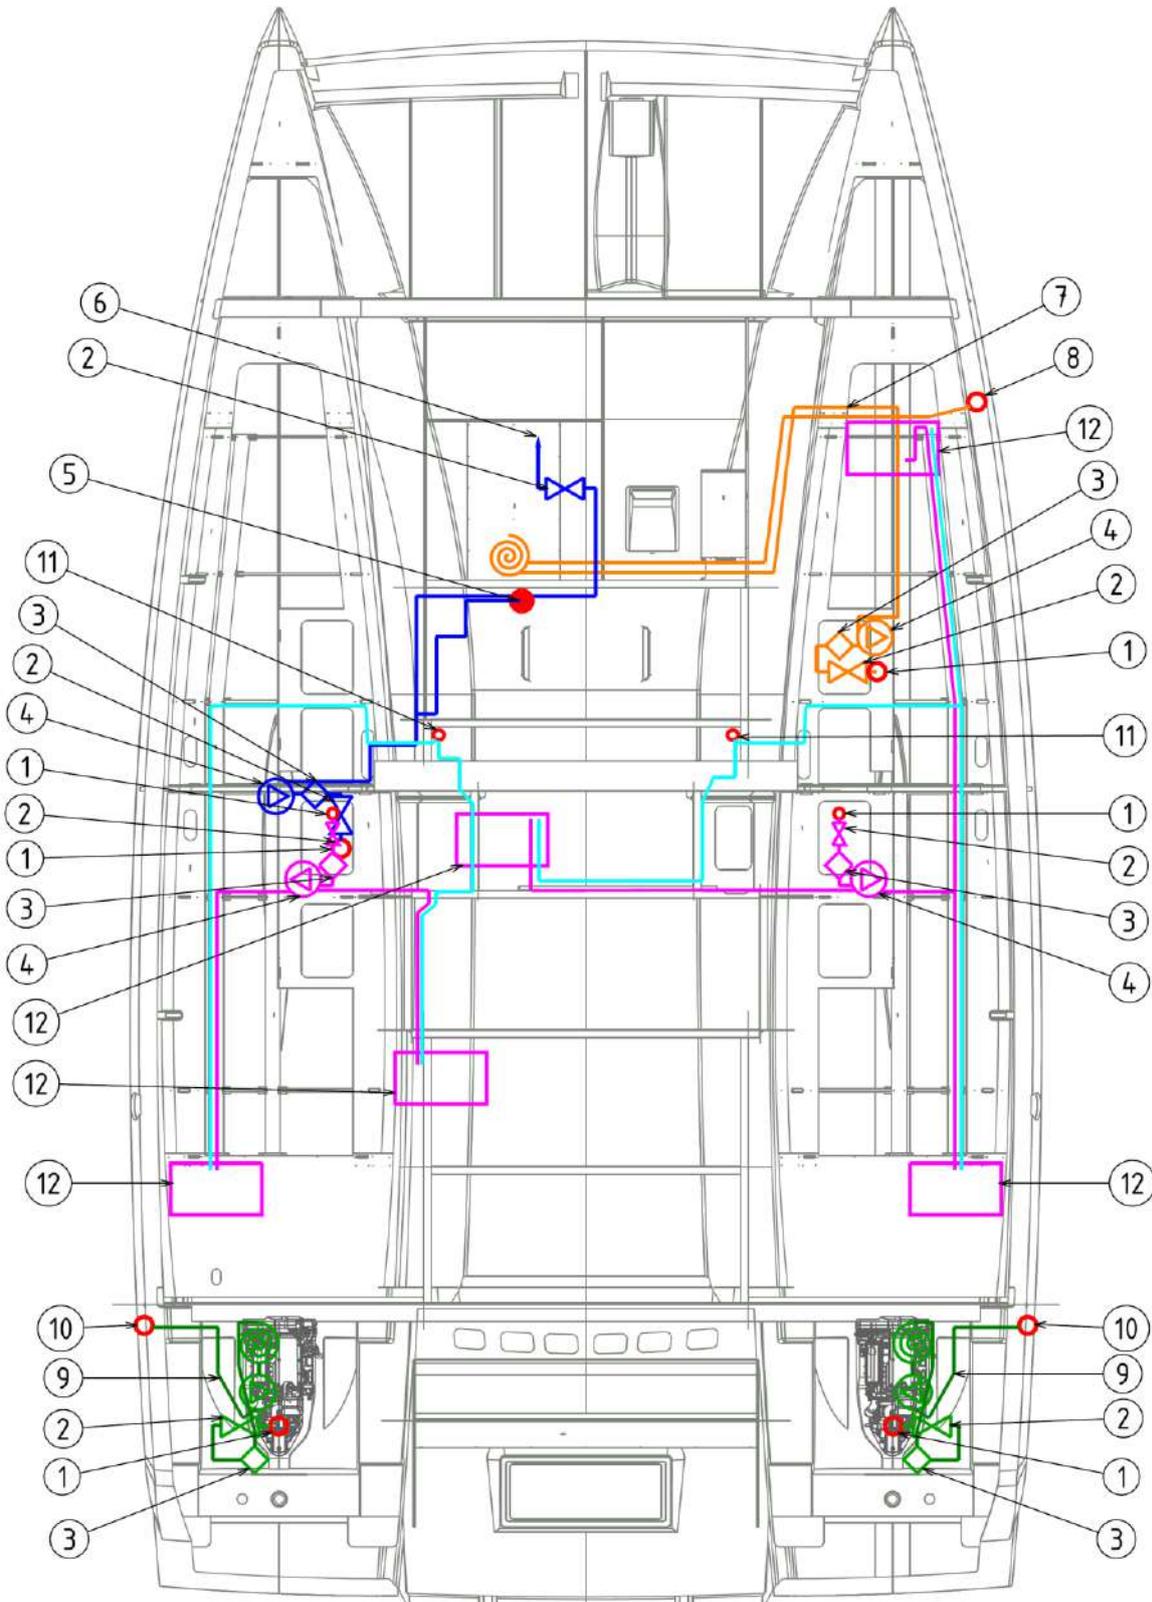

4-Cabin / 4-bathroom version

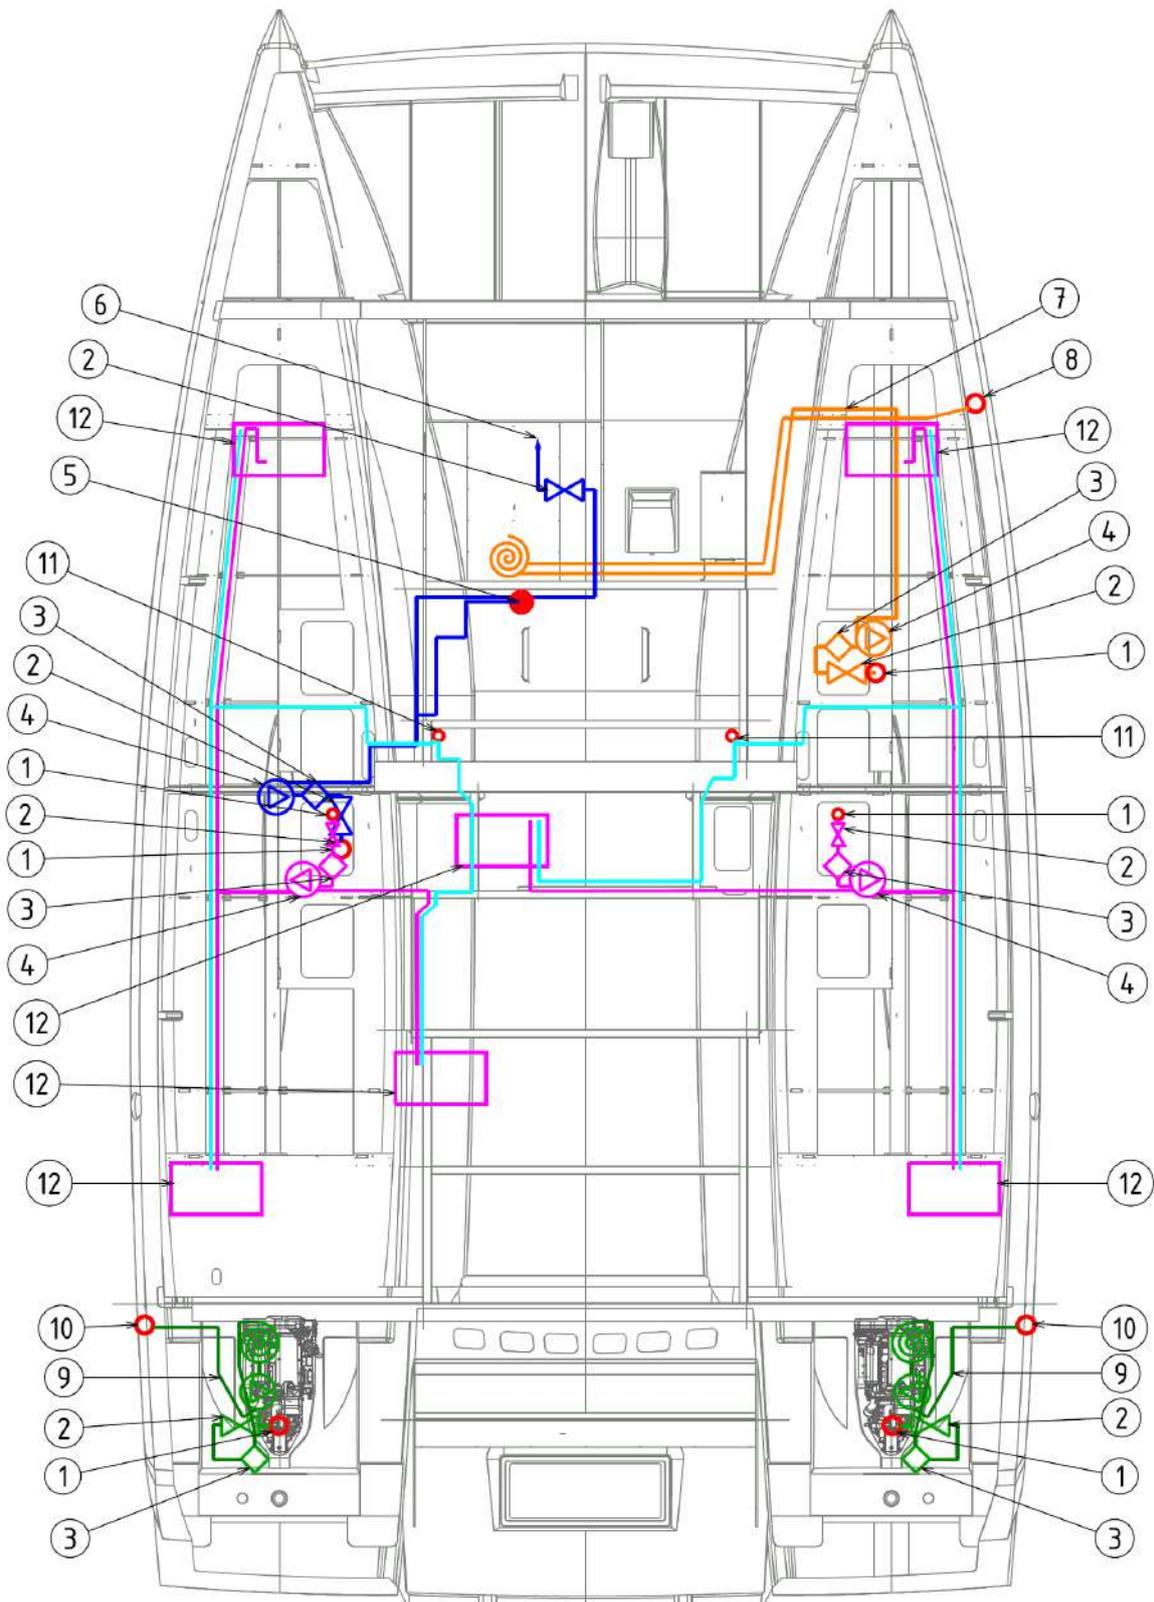


 EAU DE MER			
Rep.	Désignation	Ref.	Description
1	Passerelle à crêpe	1	Through-hull strainer
2	Vanne ¼ de tour	2	¼-turn seacock
3	Filtre eau de mer	3	Seawater filter
4	Pompe électrique	4	Electric pump
5	Robinet EDM cuisine	5	Galley seawater tap
6	Raccord tuyau automatique sur pont	6	Deck hose attachment
7	Circuit refroidissement interne GE	7	Generator internal coolant circuit
8	Rejet EDM par échappement GE	8	Generator exhaust water outlet
9	Circuit refroidissement interne moteur	9	Engine cooling circuit
10	Rejet EDM par échappement moteur	10	Raw water exhaust discharge
11	Rejet EDM climatiseur par passerelle	11	Aircon seawater discharge
12	Bloc climatiseur	12	Aircon unit

Cette page est blanche intentionnellement

This page intentionally left blank


Filler neck and vent locations


3-Cabin / 3-bathroom version

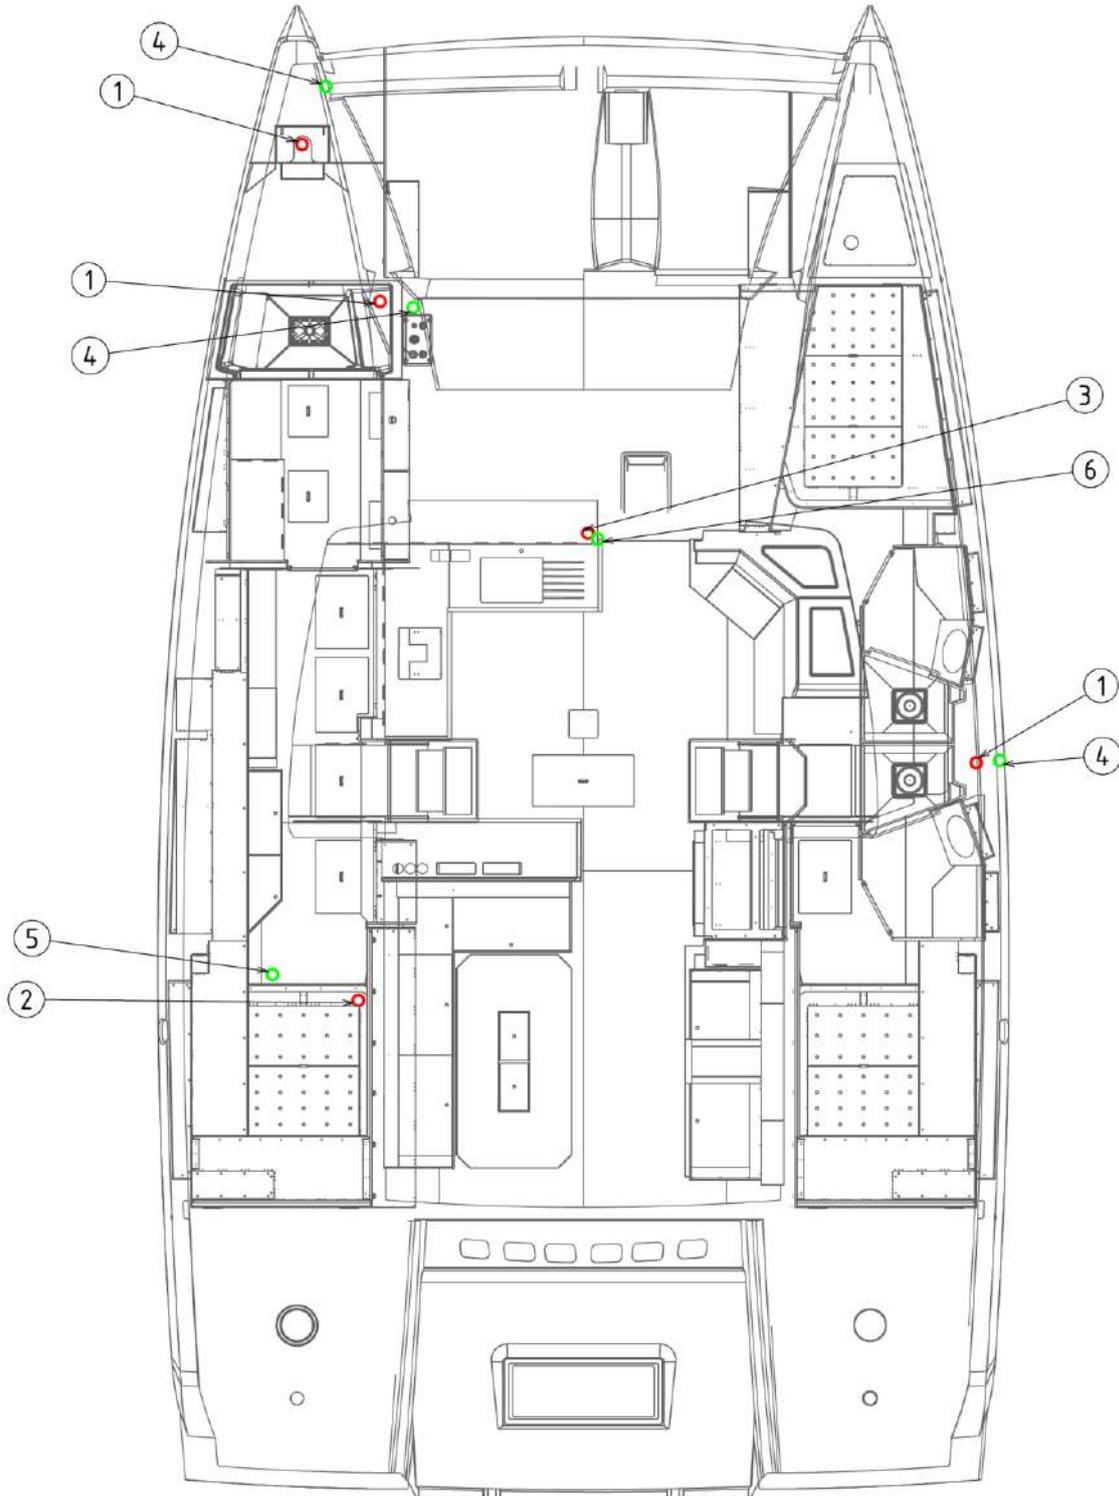

Filler neck and vent locations


4-Cabin / 4-bathroom version

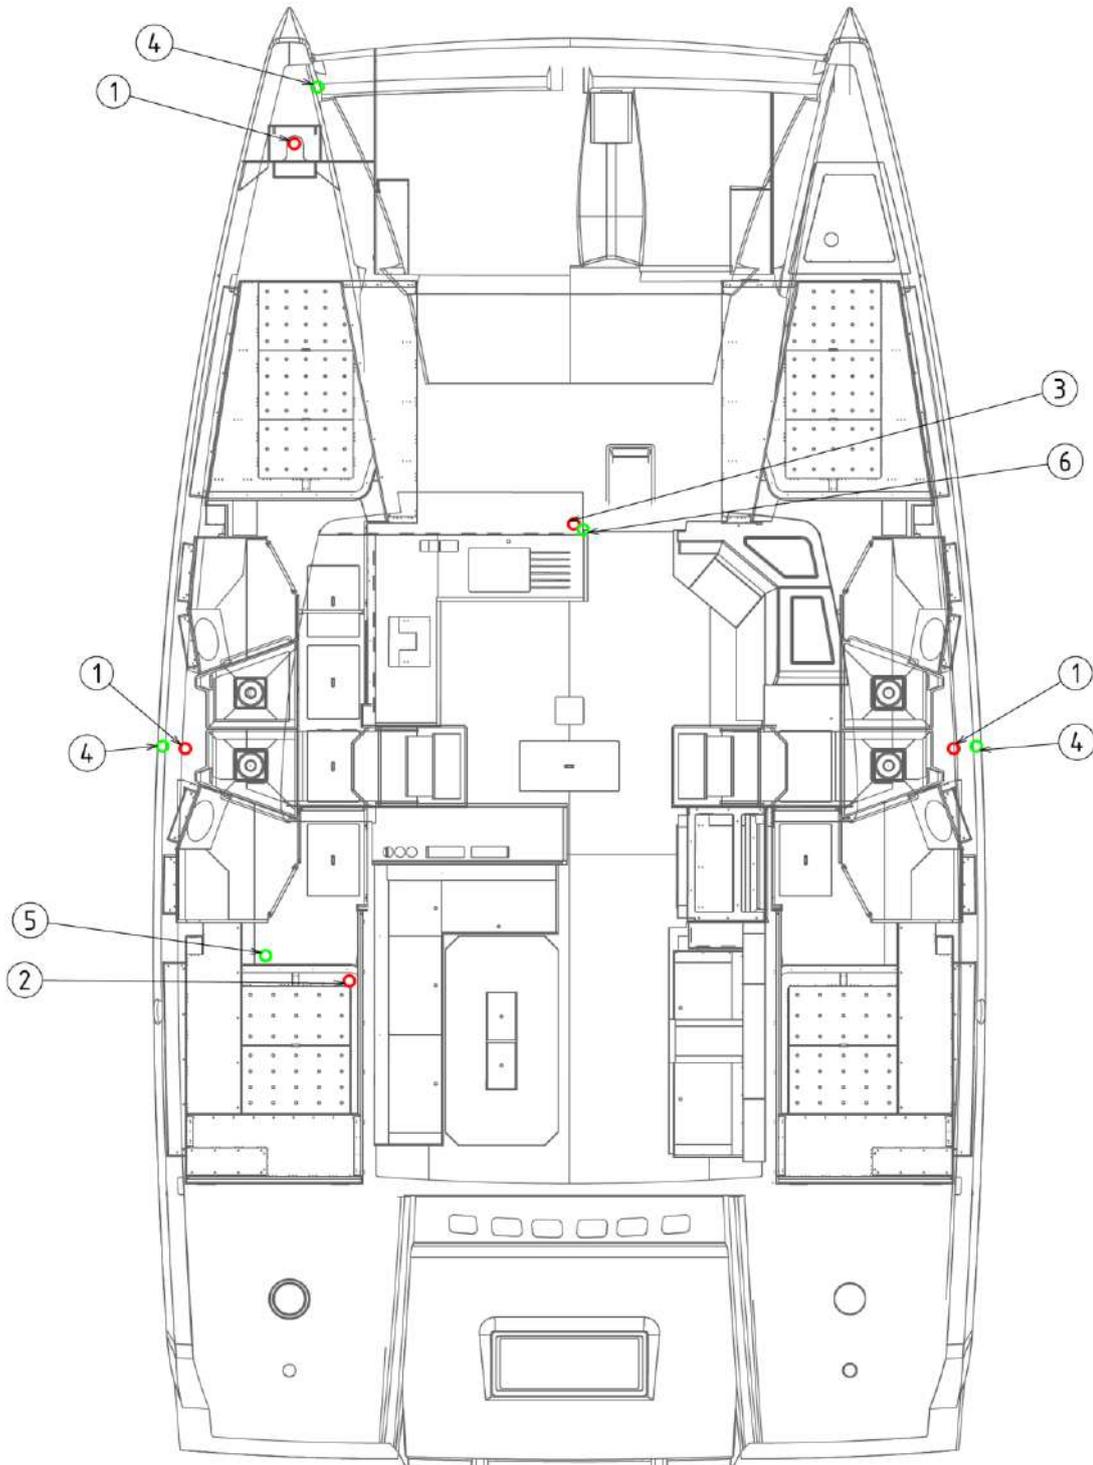

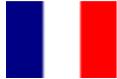
 LOCALISATION DES NABLES		 FILLER NECK LOCATIONS	
Rep.	Désignation	Ref.	Description
1	Nables vidanges holding tank (eaux noires)	1	Holding tank outlet (black water)
2	Nables remplissage réservoirs gasoil	2	Diesel tanks filler necks
3	Nables remplissage réservoirs eau douce	3	Fresh water tanks filler necks
4	Events holding tank (eaux noires)	4	Holding tank vents (black water)
5	Events réservoirs gasoil	5	Diesel tanks vents
6	Events réservoirs eau douce	6	Fresh water tanks vents

Cette page est blanche intentionnellement

This page intentionally left blank

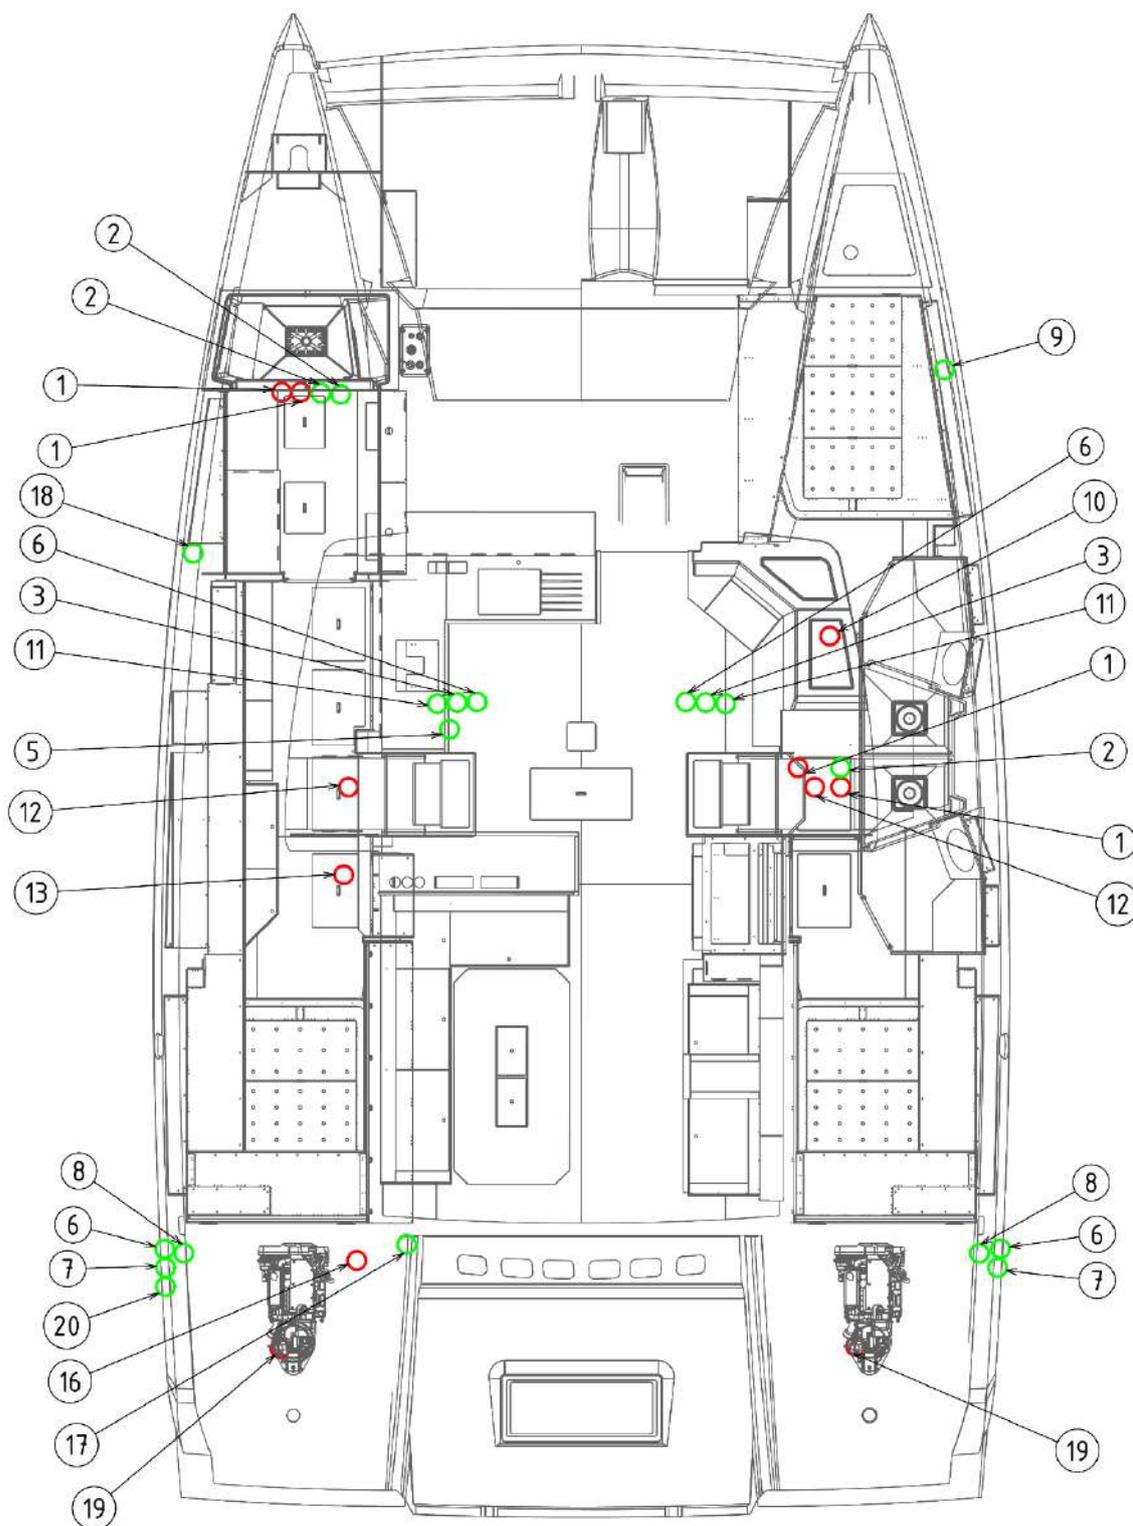


4-Cabin / 4-bathroom version

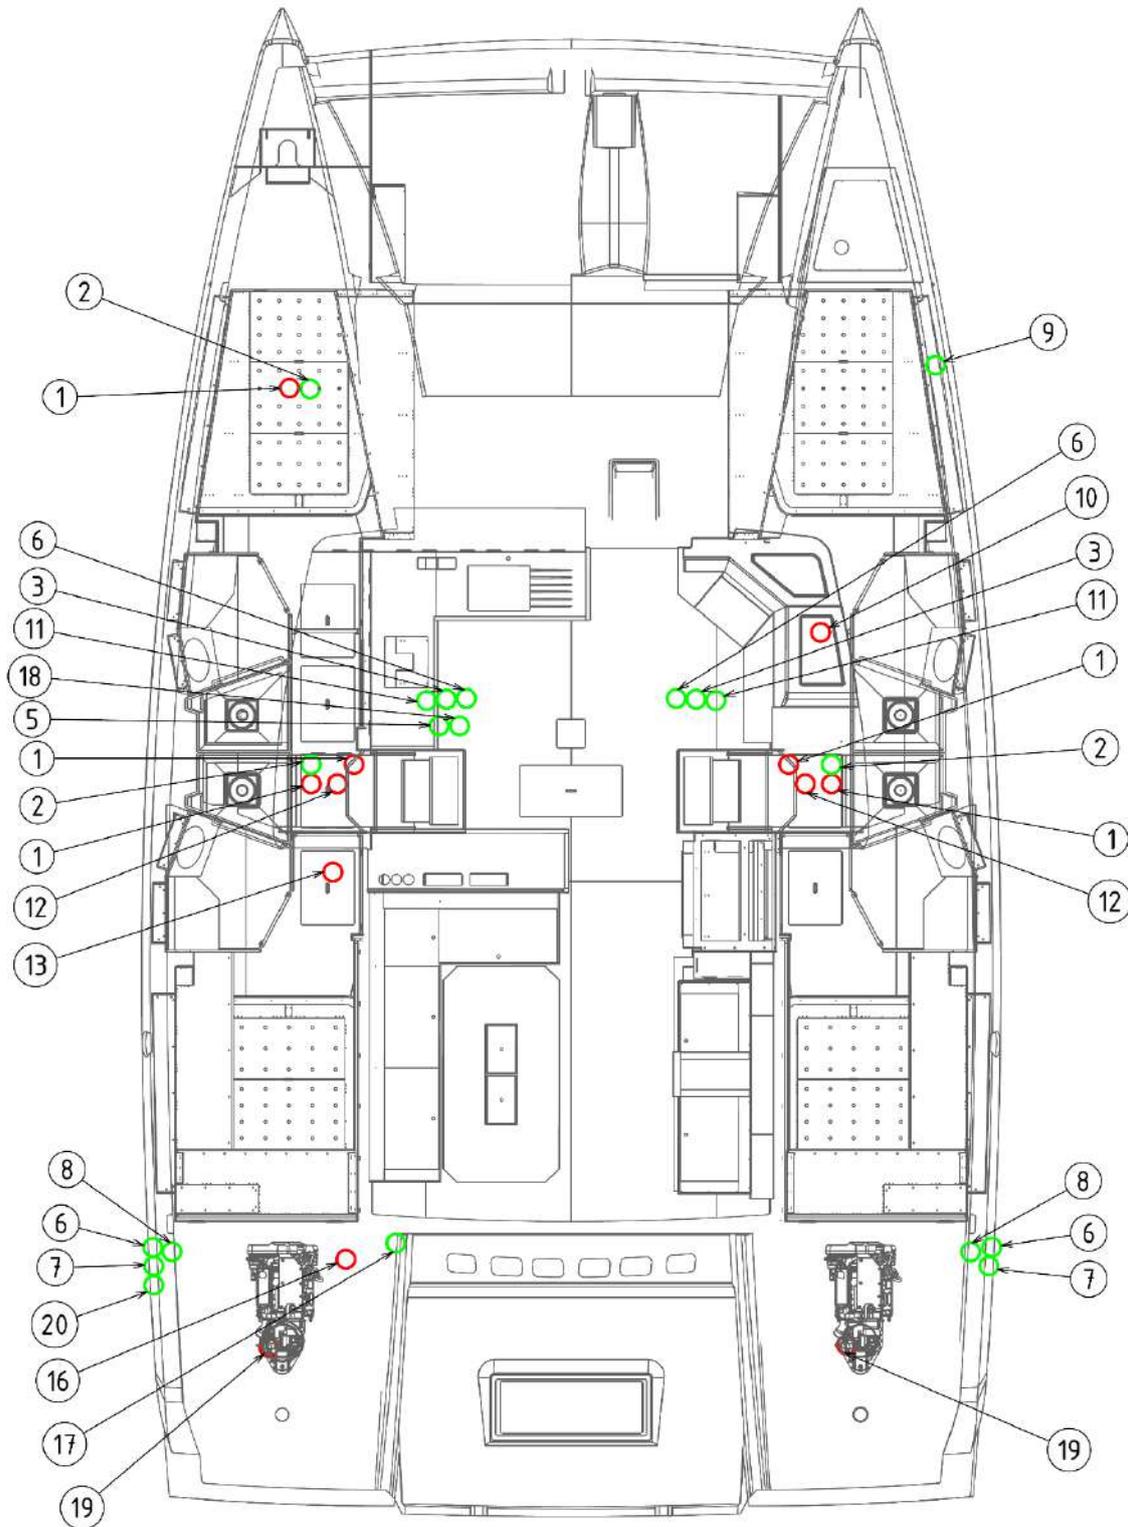


 LOCALISATION DES PASSES COQUE		 LOCATION OF THROUGH-HULLS	
Rep.	Désignation	Rep.	Description
1	Aspiration eaux noires Ø3/4"	1	¾" Black water suction
2	Evacuation eaux noires Ø1"1/2	2	1½" Black water outlet
3	Evacuation pompe de douche Ø 1"	3	Shower drain pump Ø1"
4	Evacuation lavabo Ø 1"1/4	4	Hand-basin outlet Ø1¼"
5	Evacuation cuisine Ø 1"1/2	5	Galley outlet Ø1½"
6	Rejet assèchement électrique Ø 1"1/4	6	Electric bilge pump outlet Ø1¼"
7	Rejet assèchement manuel Ø 1"	7	Manual bilge pump outlet Ø1"
8	Sortie échappement moteur Ø 75/90	8	Engine exhaust outlet Ø75/90
9	Sortie échappement groupe électrogène	9	Generator exhaust outlet
10	Aspiration groupe électrogène Ø 1"	10	Generator intake Ø1"
11	Rejet climatisation Ø1/2"	11	Aircon discharge Ø½"
12	Aspiration climatisation Ø 1"	12	Aircon intake Ø1"
13	Aspiration EDM cuisine et pont Ø 3/4"	13	Seawater galley and deck Ø¾"
14	Rejet évier FLY Ø 1"	14	Flybridge sink outlet Ø1"
15	Rejet lave-vaisselle Ø 3/4"	15	Dishwasher outlet Ø¾"
16	Aspiration EDM dessalinisateur Ø 3/4"	16	Watermaker inlet Ø¾"
17	Rejet saumure dessalinisateur Ø 3/4"	17	Watermaker reject brine outlet Ø ¾"
18	Rejet lave/sèche-linge Ø 3/4"	18	Washing machine/dryer outlet Ø¾"
19	Aspiration refroidissement moteur	19	Engine raw water intake
20	Sortie échappement chaudière	20	Heater exhaust
	OPTION		OPTION
	<p>NOTA: si l'option quillon équipe le bateau, seul le passe coque 1" évier fly est présent. Toutes les évacuations eaux grises étant dirigées dans les réservoirs.</p>		<p>NOTE: If the boat has the skeg keel option, only the 1" flybridge sink outlet is fitted. All other grey water waste outlets are led to the grey water holding tanks.</p>

3-Cabin / 3-bathroom version

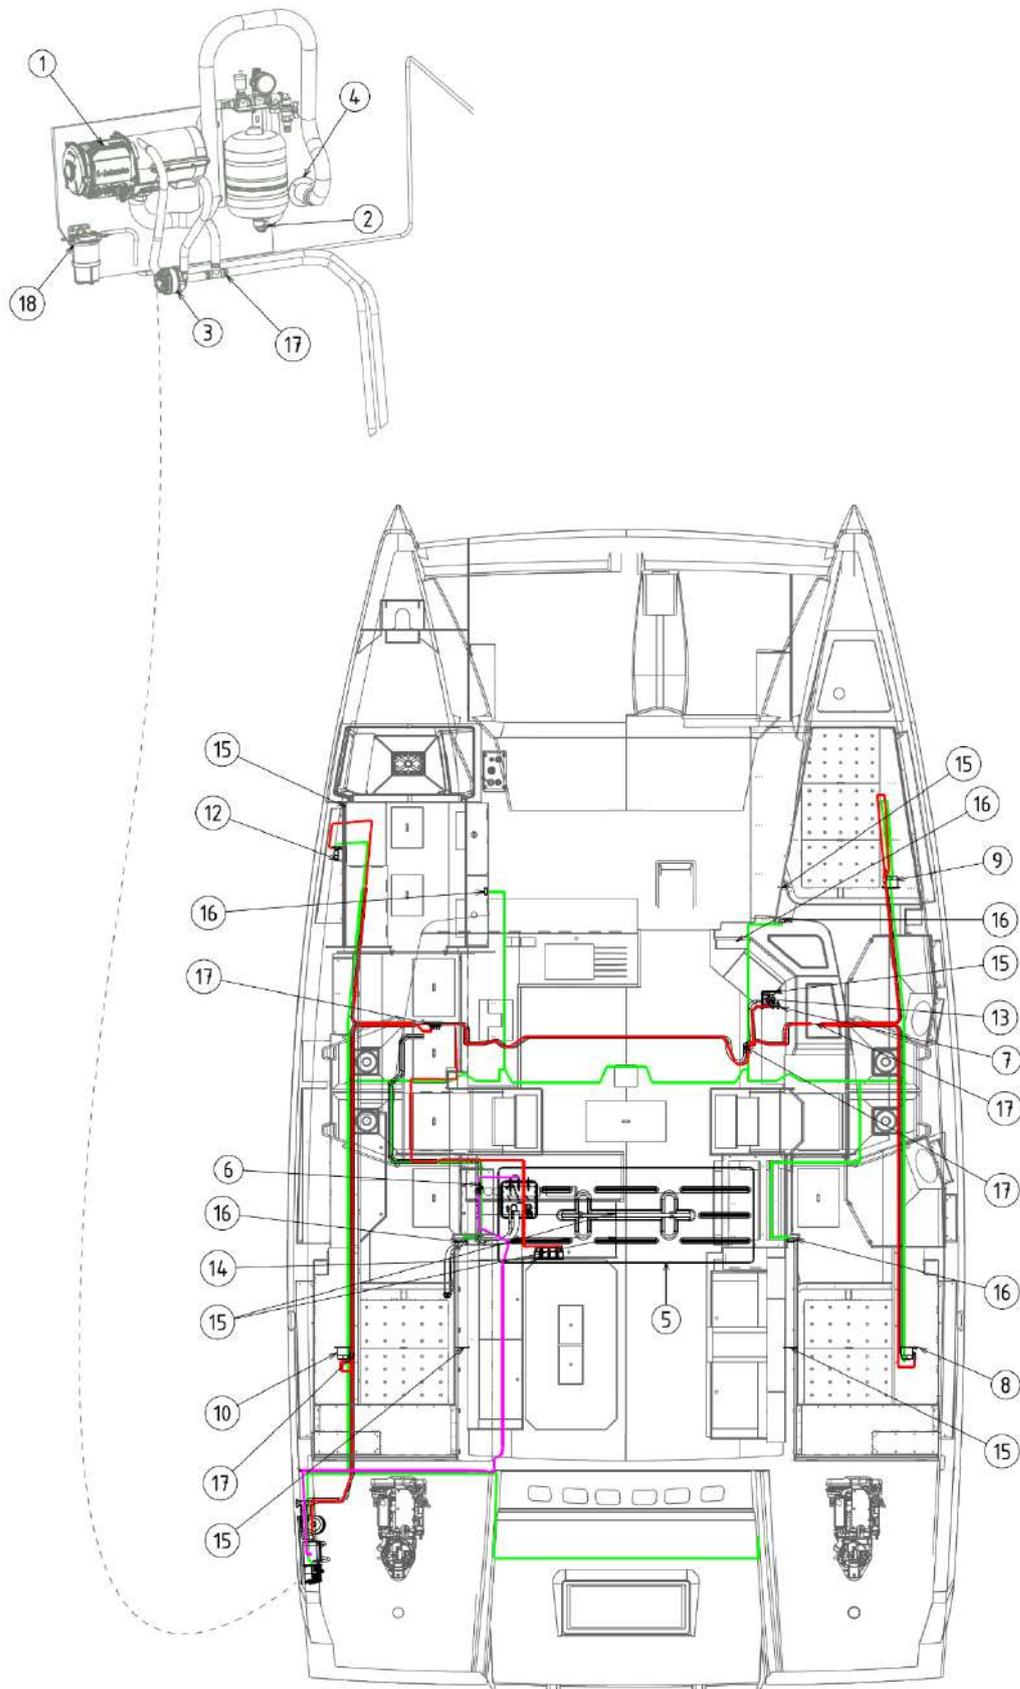

3-Cabin / 3-bathroom version

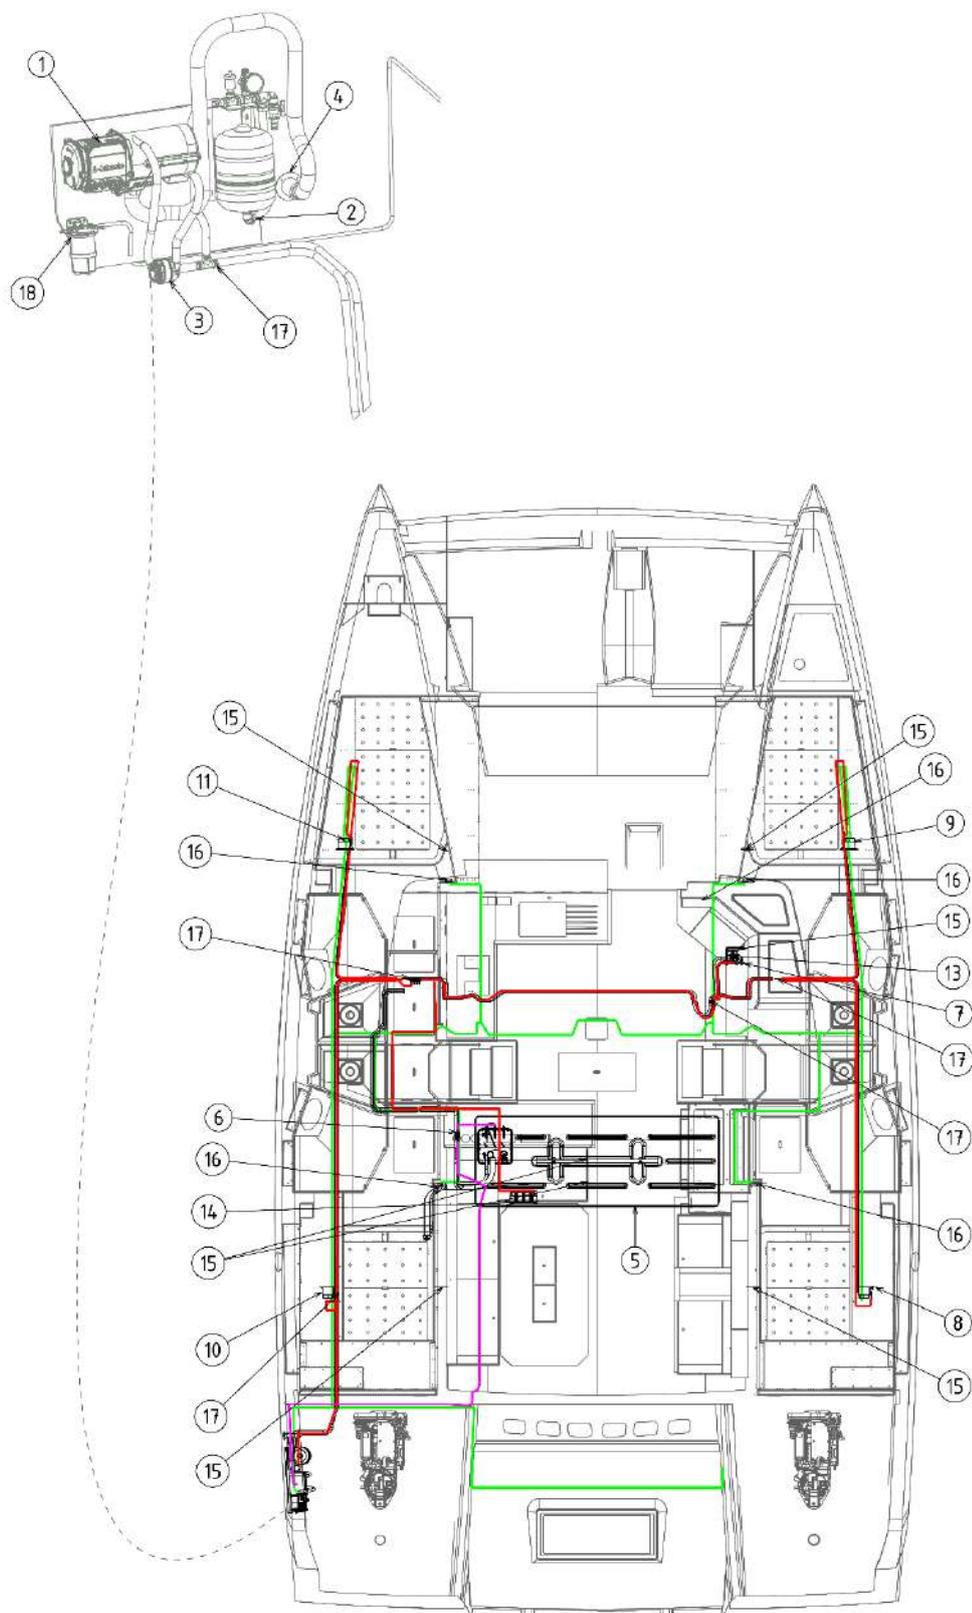

 CHAUFFAGE		 HEATING	
Rep.	Désignation	Ref.	Description
1	Chaudière	1	Heater
2	Vase d'expansion	2	Expansion tank
3	Pompe de circulation	3	Circulation pump
4	Sortie échappement chaudière	4	Heater exhaust outlet
5	Réservoir gasoil	5	Diesel tank
6	Pompe à gasoil	6	Fuel pump
7	Purge	7	Bleed point
8	Aérotherme cabine arrière tribord	8	Heater outlet stbd aft cabin
9	Aérotherme cabine avant tribord	9	Heater outlet stbd fwd cabin
10	Aérotherme cabine arrière bâbord	10	Heater outlet port aft cabin
11	Aérotherme cabine avant bâbord	11	Heater outlet port fwd cabin
12	Aérotherme salle de bain propriétaire	12	Heater outlet owner's bathroom
13	Aérotherme nacelle tribord	13	Heater outlet nacelle stbd
14	Aérotherme nacelle bâbord	14	Heater outlet nacelle port
15	Grille d'aspiration	15	Intake grill
16	Commande aérotherme	16	Heater control
17	Dérivation Y Ø19/Ø16/Ø19	17	Y-distribution fitting Ø19/Ø16/Ø19
18	Filtre gasoil	18	Fuel filter

23. AFTER-SALES SERVICE

After-sales Service tel. +33 (0)4 68 80 15 15

Email: sav.catana@catanagroup.com

24. LIST OF ACCOMPANYING DOCUMENTS

1. Engine user manual and guarantee
2. Charger user manual and guarantee (depending on options)
3. Refrigerator user manual and guarantee (depending on options)
4. Electronics user manual and guarantee (depending on options)
5. User manual for pumps
6. Maintenance manual for winches
7. Hob and oven user manual
8. Gas regulator user manual
9. Gas system leak detector manual
10. WC instruction manual
11. Radio (stereo) user manual and guarantee (depending on options)
12. Windlass user manual
13. Compass instruction manual
14. Liferaft logbook (depending on options)
15. Water heater instructions
16. Watermaker instructions (depending on options)